

MP3 Player operation.

To begin playing MP3's, insert the usb drive into the socket in the front of the HU, the screen will display "TAPE LOADING" a short time later the display will change to "TAPE SIDE 1" and the first track will start playing. To remove a usb drive first press the tape eject button, the screen will say "TAPE EJECT" when the LED on the VMUSIC stops flashing the usb drive can be removed. DO NOT remove drive without first ejecting, doing so may corrupt data on the drive. Reinserting the drive will start playback from the first track again. If the Ignition is switched off and the usb drive is left in, playback will recommence from the point the ignition was turned off. Current drain in this mode is very small, but it is recommended if the vehicle is to be left standing for several weeks the USB drive be ejected before turning off the ignition.

While playing MP3's, pressing the CD button changes to the CD changer and the radio button to the radio, pressing the tape button then resumes MP3 playback where it left off.

The FF button goes forward one track in the current folder, the FR button goes back one track in the current folder. The side select button changes to the next folder on the USB disk. If the side button is pressed again after 2 seconds but within 5 seconds, then the play mode changes from sequential to random mode, the same sequence again goes back to sequential mode and so on. The steering wheel controls can also be used to perform the above functions.