

XENON LAMPS

⚠ WARNING

High voltage is required to ignite the gas and metal vapor which are used to power Xenon lamps. Contact with this voltage can cause serious injury. Replacement or maintenance of Xenon lamps should only be carried out by suitably qualified personnel.

⚠ WARNING

Xenon lamp units operate at a very high temperature. Make sure that the lamp units have cooled before attempting to touch them.



Seek advice about the correct disposal of Xenon lamp units from a Dealer/Authorized Repairer, or your local authority.

WINDOW RESET

The windows will need to be reset if the battery is disconnected, becomes discharged, or the power supply is interrupted.

Once the power supply is restored, reset the windows as follows:

1. Close the window fully, and release the switch.
2. Lift the switch to the close position, and hold for 2 seconds.
3. Repeat this process a total of 5 times.

Test the window, to check that one-touch operation is working correctly. Repeat the process for the remaining window.

WARNING TRIANGLE

If supplied, the warning triangle is located in the Luggage compartment, attached to an anchor point.

FIRST AID KIT

If supplied, the first aid kit is strapped to the side of the Luggage compartment.

FIRE EXTINGUISHER

If supplied, the fire extinguisher is located either in the Luggage compartment, or mounted to the front passenger seat.