

2015.0 F-TYPE (X152), 501-20

SUPPLEMENTAL RESTRAINT SYSTEM

DRIVER AIR BAG MODULE (G1579201)

REMOVAL AND INSTALLATION

76.73.39	DRIVER AIR BAG MODULE - RENEW	ALL DERIVATIVES	0.3	USED WITHINS
----------	--	--------------------	-----	-----------------

SPECIAL TOOL(S)



REMOVAL



WARNINGS:


- To avoid accidental deployment, the restraints control module backup power supply must be depleted. Wait at least two minutes after disconnecting the battery ground cable(s) before commencing any repair or adjustment to the supplemental restraint system (SRS), or any component(s) adjacent to the SRS sensors. Failure to follow these instructions may result in personal injury.
- Always wear safety glasses when working on an air bag equipped vehicle and when handling an air bag module. Failure to follow this instruction may result in personal injury.
- To minimize the possibility of premature deployment, do not use radio key code savers when working on the supplemental restraint system. Failure to follow this instruction may result in personal injury.
- To minimize the possibility of injury in the event of premature deployment, always carry a live air bag module with the bag and trim cover pointed away from the body. Failure to follow this instruction may result in personal injury.
- To minimize the possibility of premature deployment, live air bag modules must only be placed on work benches which have been ground bonded and with the trim cover facing up. Failure to follow these instructions may result in personal injury.
- Never probe the electrical connectors of air bag modules or any other supplemental restraint system component. Failure to follow this instruction may result in personal injury.
- Painting over the driver air bag module trim cover or instrument panel could lead to deterioration of the trim cover and air bags. Do not for any reason attempt to paint discolored or damaged air bag module trim covers or instrument panel. Install a new component. Failure to follow this instruction may result in personal injury.

 **NOTE:**

Removal steps in this procedure may contain installation details.

1. Refer to: Battery Disconnect and Connect (414-01 Battery, Mounting and Cables, General Procedures).
2. Refer to: Supplemental Restraint System (SRS) Health and Safety Precautions (100-00 General Information, Description and Operation).


3.

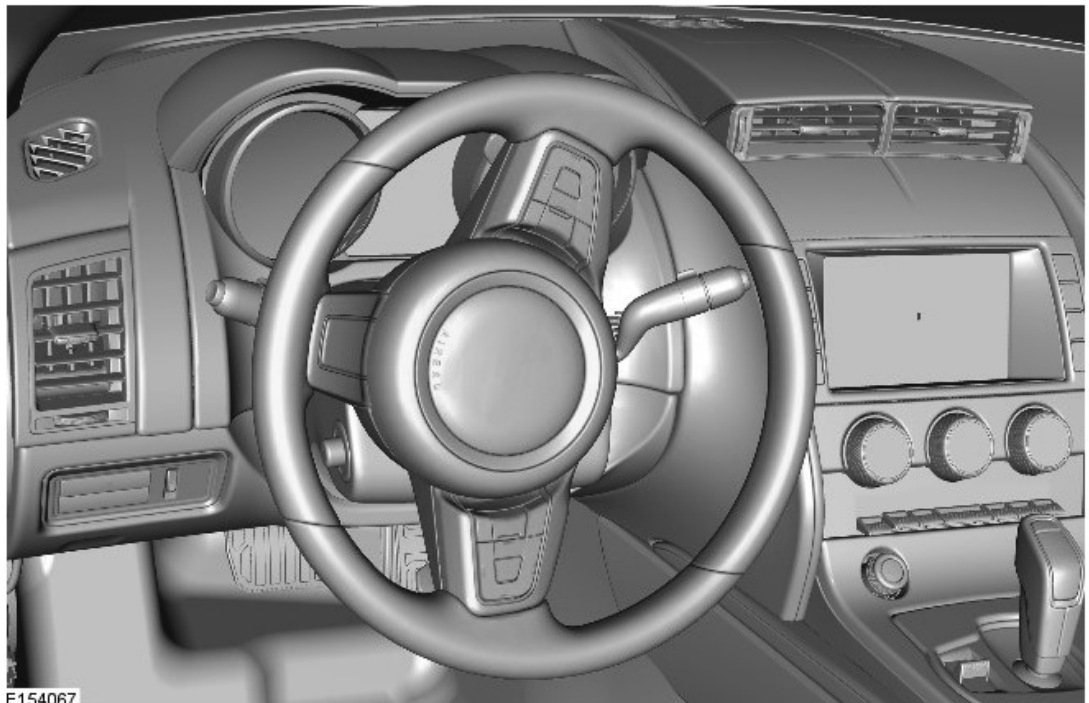

4.


 **NOTE:**

Gentle pressure applied to the air bag towards the instrument panel aids release.

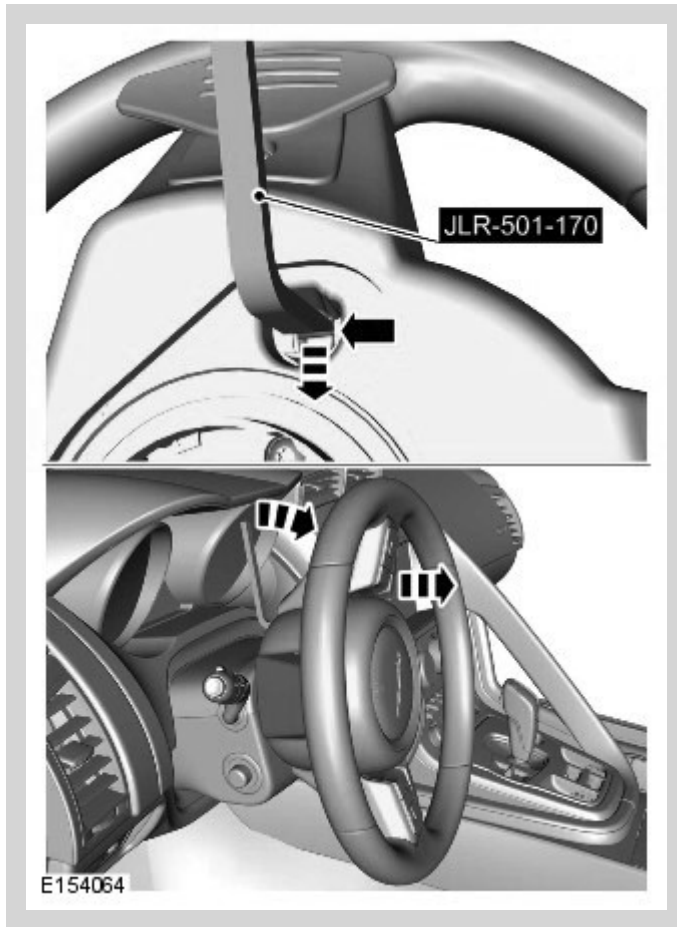

Special Tool(s): JLR-501-170

5.

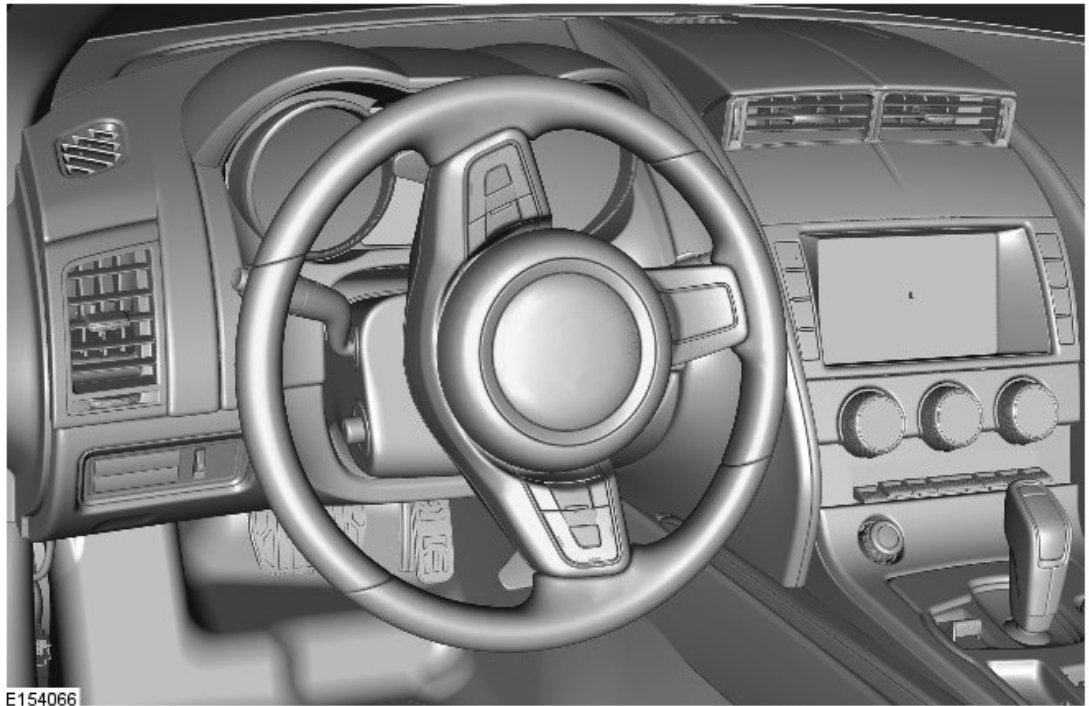

6.




WARNING:

Driver air bag module installation can be confirmed by hearing 2 audible clicks, 1 for each clip.



NOTE:

Gentle pressure applied to the air bag towards the instrument panel aids release.

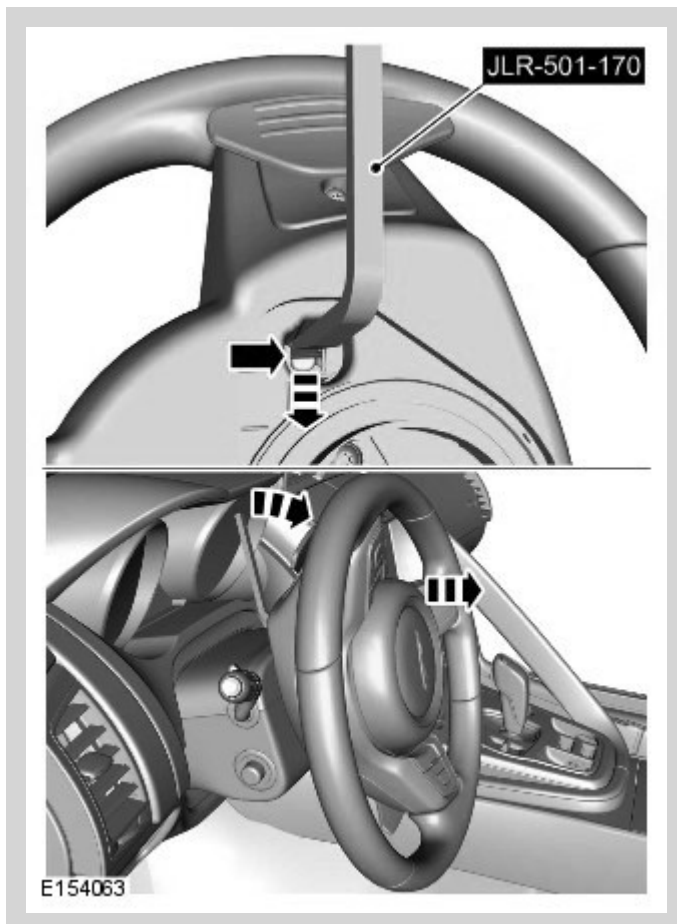


7.

⚠ CAUTION:

Release the locking tang and disconnect the electrical connector. Failure to follow this instruction may result in damage to the electrical connector.

 NOTE:

Note the position of the wiring harnesses to aid installation.

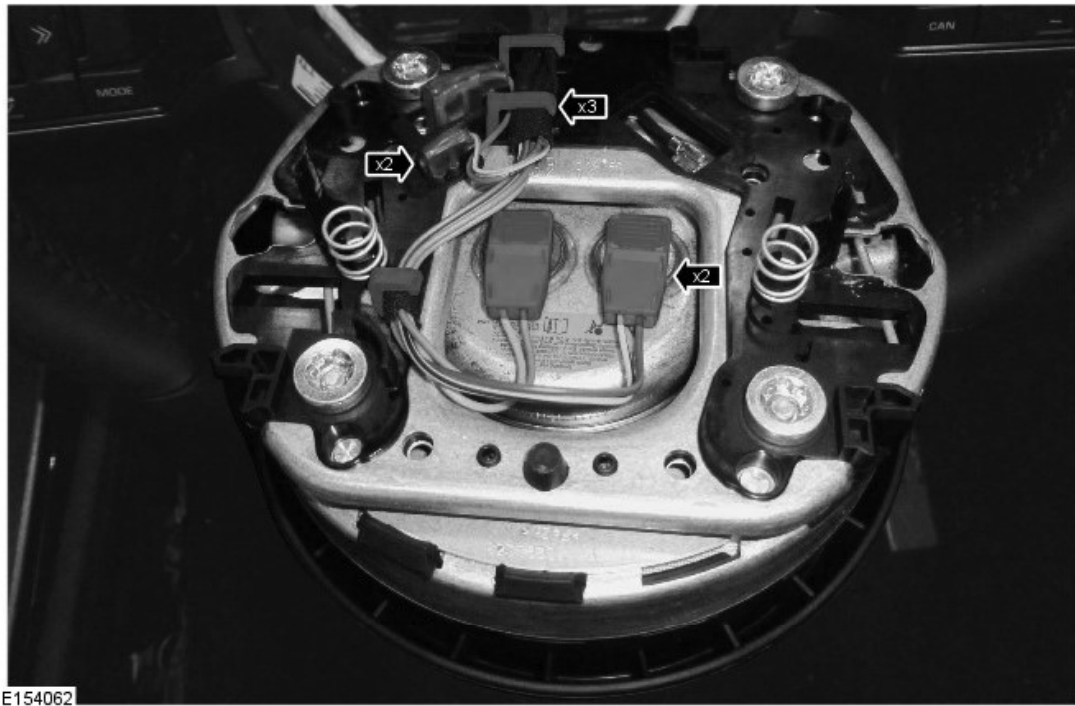

INSTALLATION

1. To install, reverse the removal procedure.

2015.0 F-TYPE (X152), 100-00
GENERAL INFORMATION

DESCRIPTION AND OPERATION