2015.0 F-TYPE (X152), 211-04


STEERING COLUMN

STEERING WHEEL (G1580147)

REMOVAL AND INSTALLATION

STEERING ALL USED
57.60.01 WHEEL - DERIVATIVES 0.8 WITHINS

SPECIAL TOOL(S)

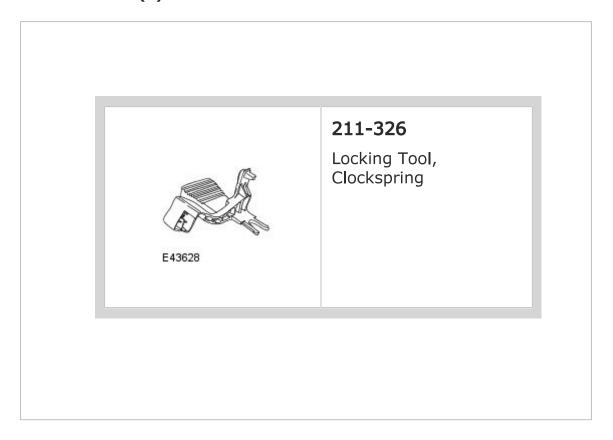

REMOVAL

- Take extra care when handling supplemental restraint system (SRS) components.
- Allow a period of 10 minutes to elapse after disconnecting the battery before undertaking any work on the SRS.
- To avoid accidental deployment and possible personal injury, the backup power supply must be depleted before repairing or replacing any air bag supplementary restraints system (SRS) components. To deplete the backup power supply energy, disconnect the battery ground cable and wait for one minute. Failure to follow this instruction may result in personal injury.

① CAUTION:

Make sure that the road wheels are in the straight ahead position.

△ NOTE:


Removal steps in this procedure may contain installation details.

- Refer to: Supplemental Restraint System (SRS) Health and Safety Precautions (100-00 General Information, Description and Operation).
- Refer to: Driver Air Bag Module (501-20B Supplemental Restraint System, Removal and Installation).



① CAUTION:

Make sure the wiring harness and electrical connectors are not damaged during this operation.

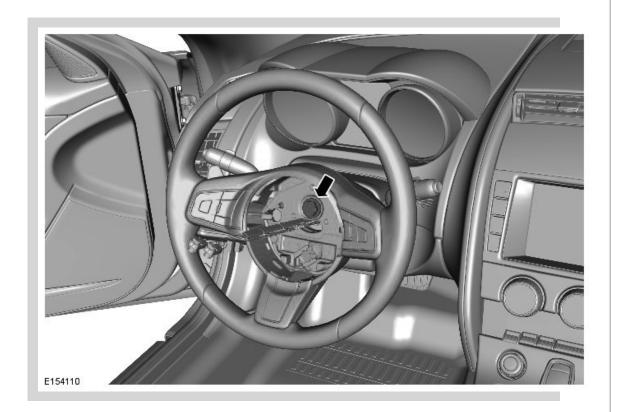

Torque: 63 Nm

5.

① CAUTION:

Make sure that the clockspring rotor does not rotate.


\wedge

NOTE:


Do not disassemble further if the component is removed for access only.



Special Tool(s): 211-326

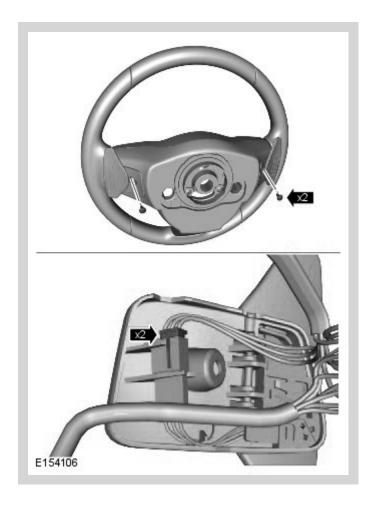


Torque: 1.8 Nm

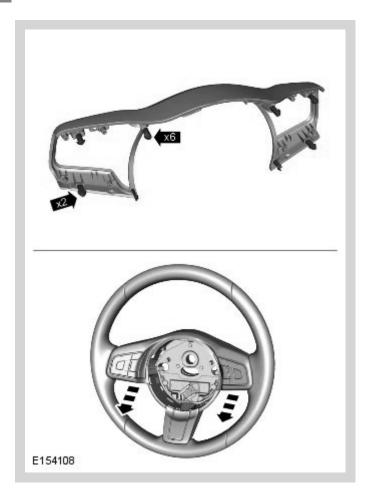

³ △ NOTE:

If equipped.

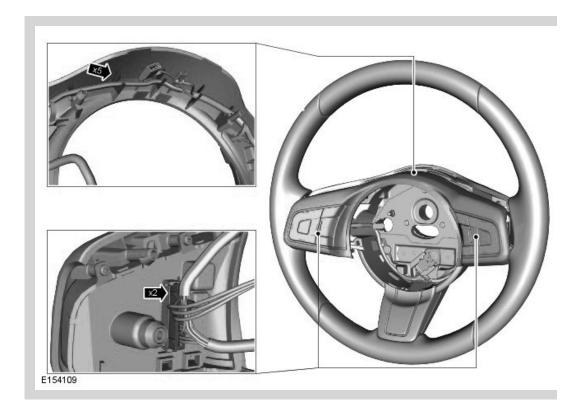


① CAUTION:

Make sure that the terminals or pins of the connector are not bent or damaged.

9.


△ NOTE:

If equipped.

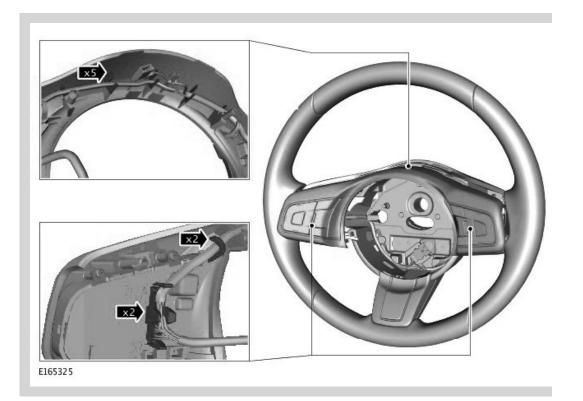




11.

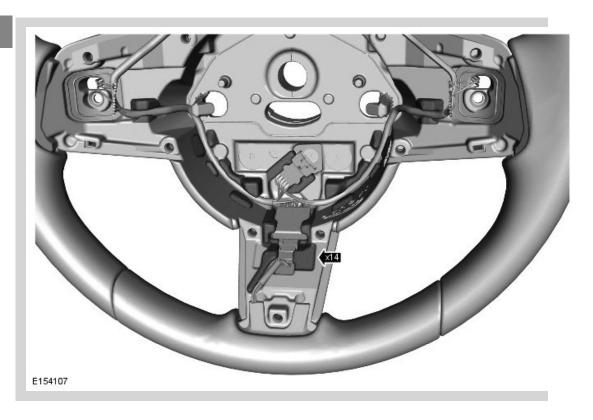

△ NOTE:

If equipped.

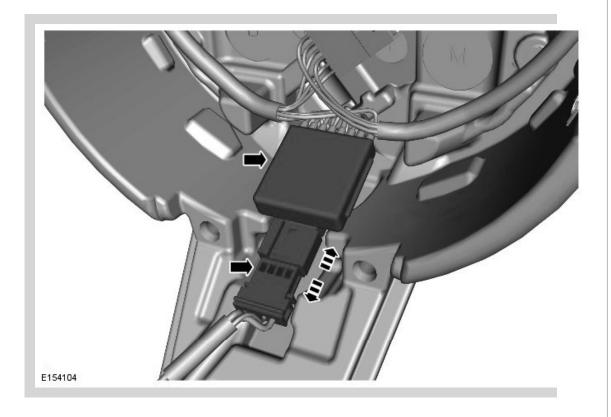

13

