


# CONNECTOR QUICK REFERENCE GUIDE

**Document Objective:** To provide basic connector location information only, including in-lines and grounds.  
 Note: A RHD version of this document will not be produced. For detailed connector information (including RHD), refer to the Electrical Reference Library (ERL).

All paper copies are uncontrolled

**Note:** For improved clarity some harnesses have been omitted completely e.g. engines, seats, steering, climate control and some link leads.

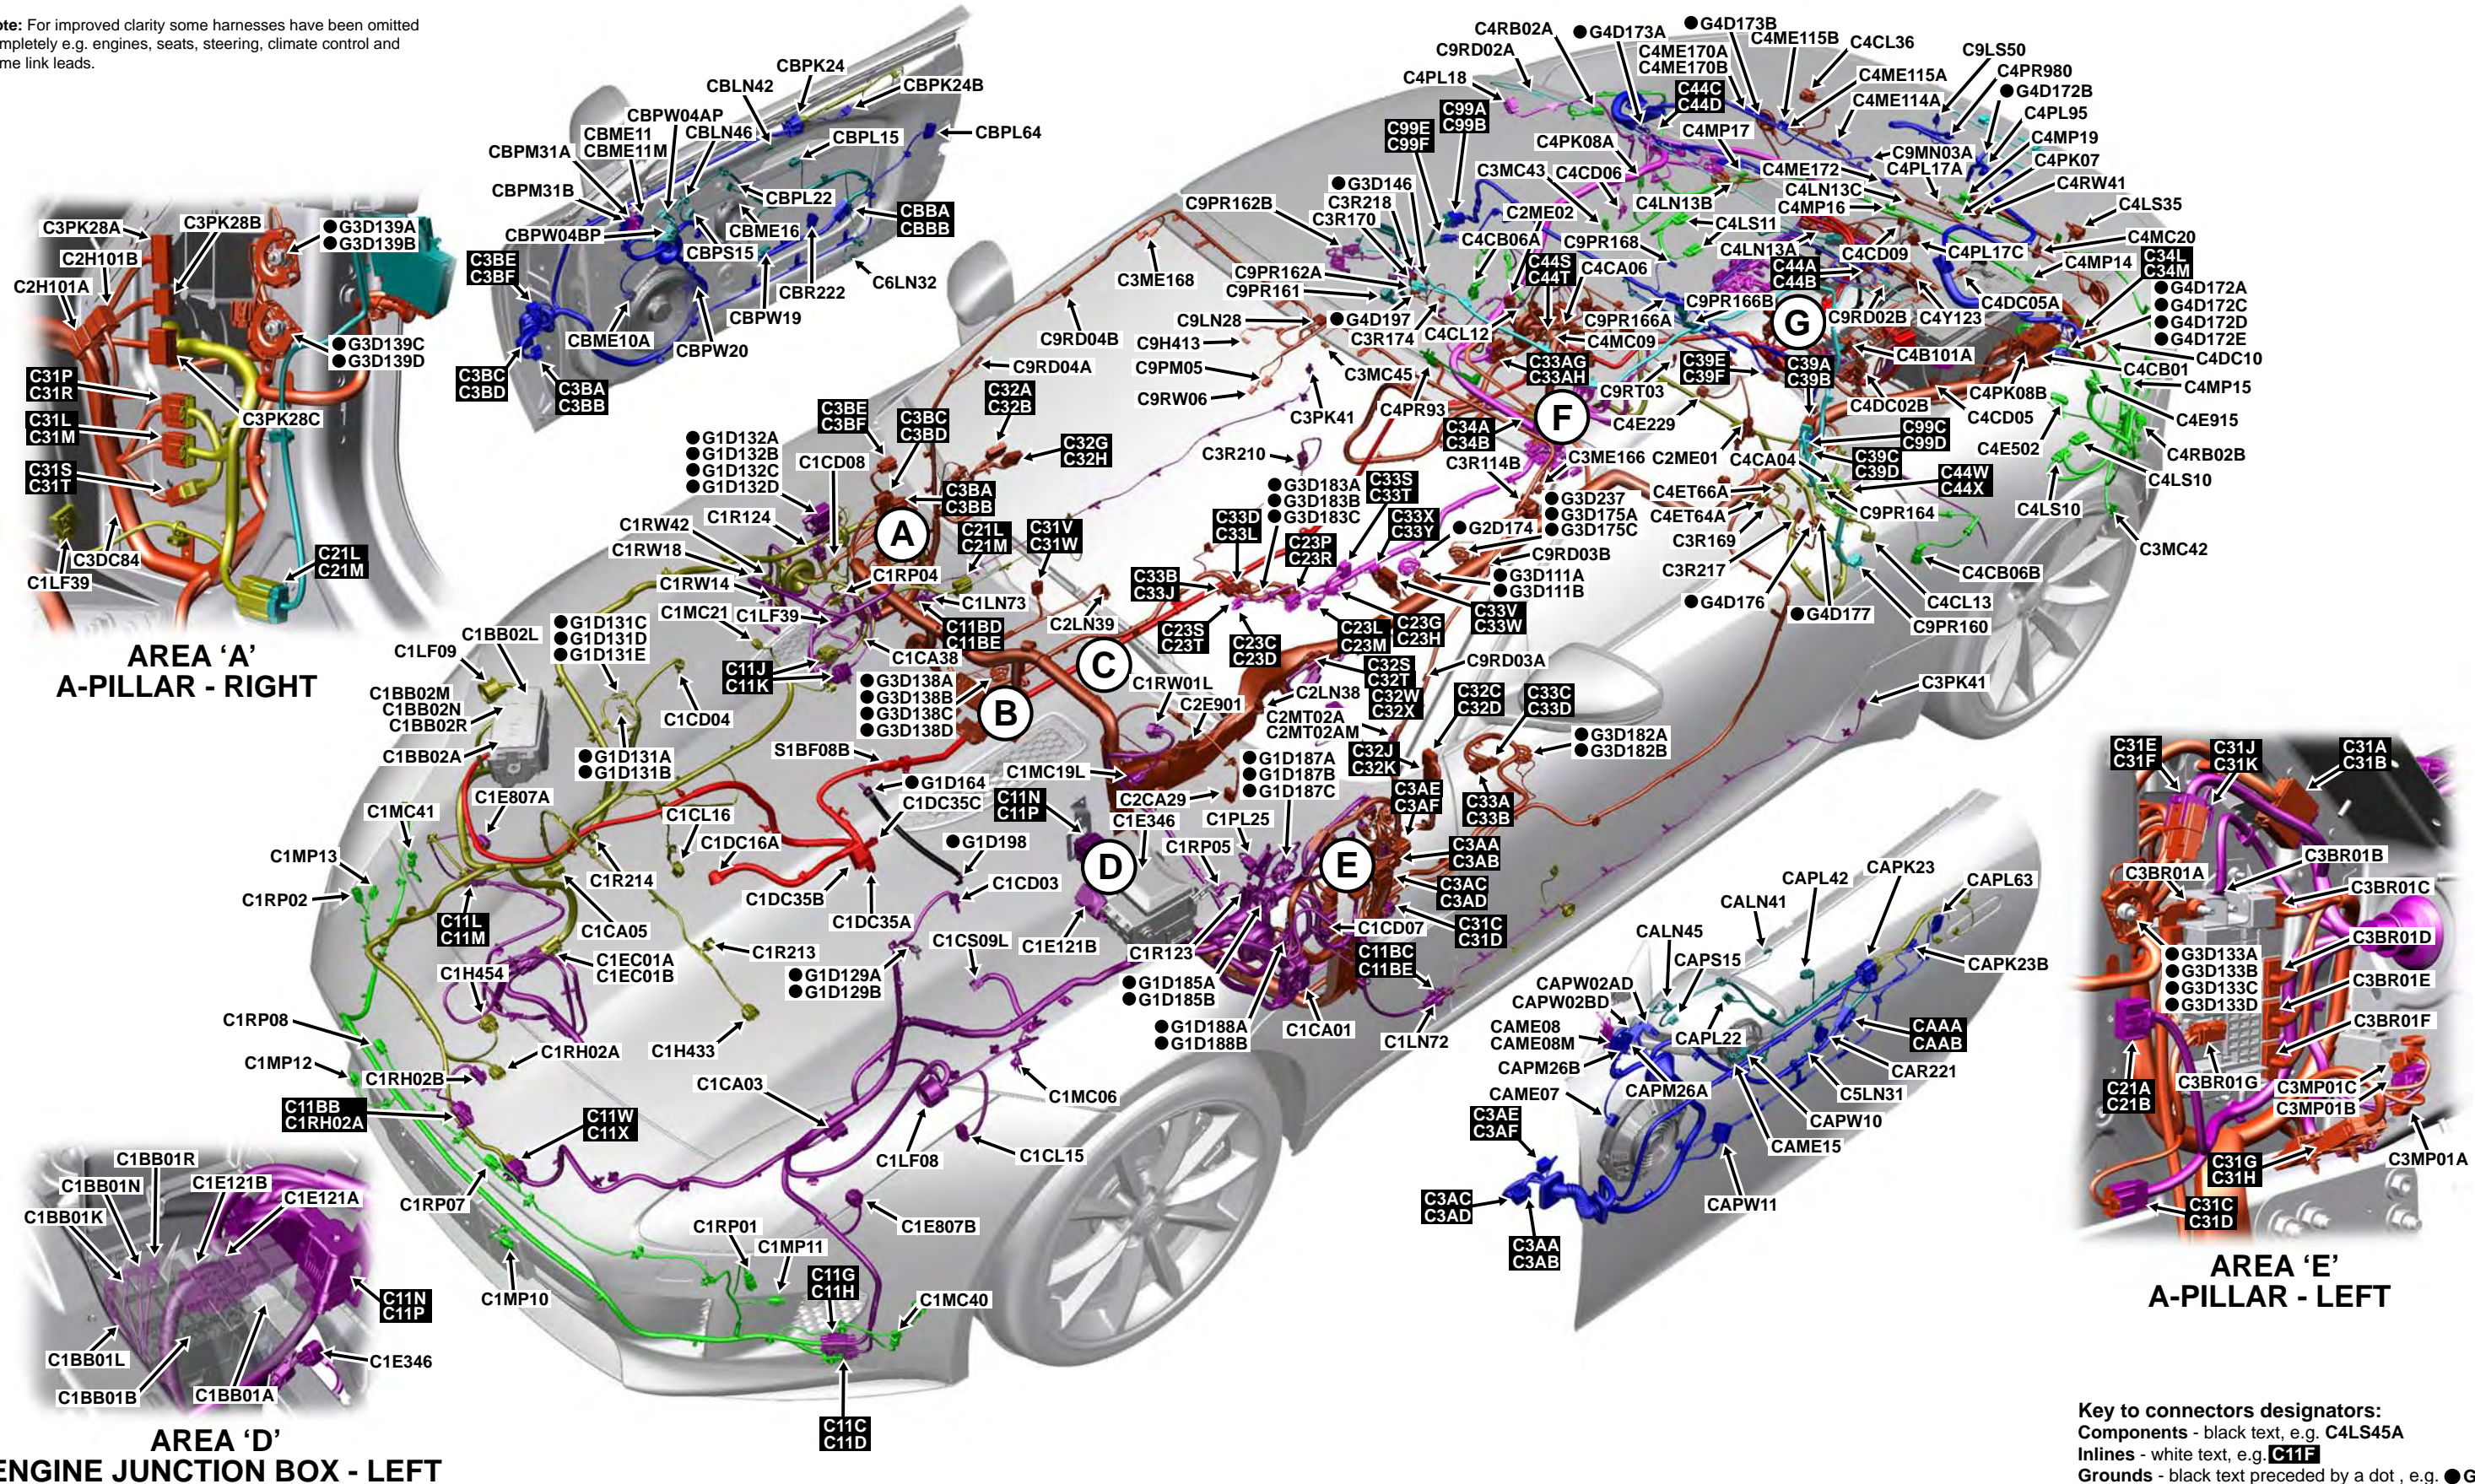

**AREA 'A'**  
A-PILLAR - RIGHT

**AREA 'D'**  
ENGINE JUNCTION BOX - LEFT

**AREA 'E'**  
A-PILLAR - LEFT

**Key to connectors designators:**  
 Components - black text, e.g. C4L545A  
 Inlines - white text, e.g. C11F  
 Grounds - black text preceded by a dot, e.g. ●G2D114

