

## Exterior Lighting - Headlamp Adjustment

General Procedures

### General Equipment

Headlamp beam setter

### Check



CAUTION: Some variation in the illustrations may occur, but the essential information is always correct.

1.
  - Make sure to check and adjust the tyre pressures to the correct level.
  - Park the vehicle on a horizontally level surface.
2.
  - Align the headlamp beam setting equipment to one headlamp.


General Equipment: [Headlamp beam setter](#)

3.  NOTE: The headlamp setting is 1 % below horizontal and parallel.

Check the headlamp beam alignment.

### Adjustment

1. Open the hood.
2.
  - Adjust the headlamps with an Allen Key.

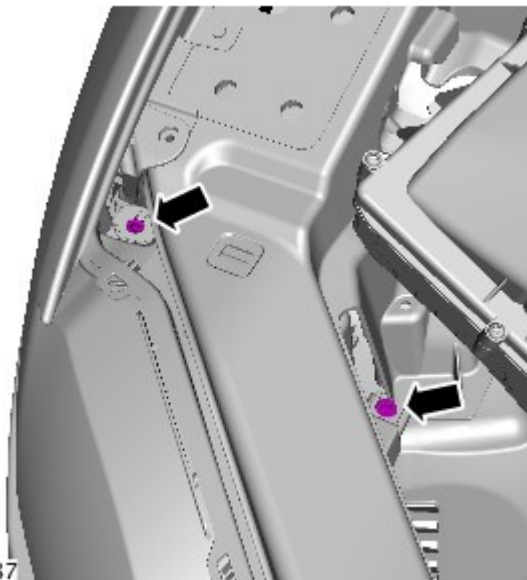

3.
  - To adjust the second headlamp, repeat the above procedure.