



Exterior Mirror Glass 76.10.53

Removal

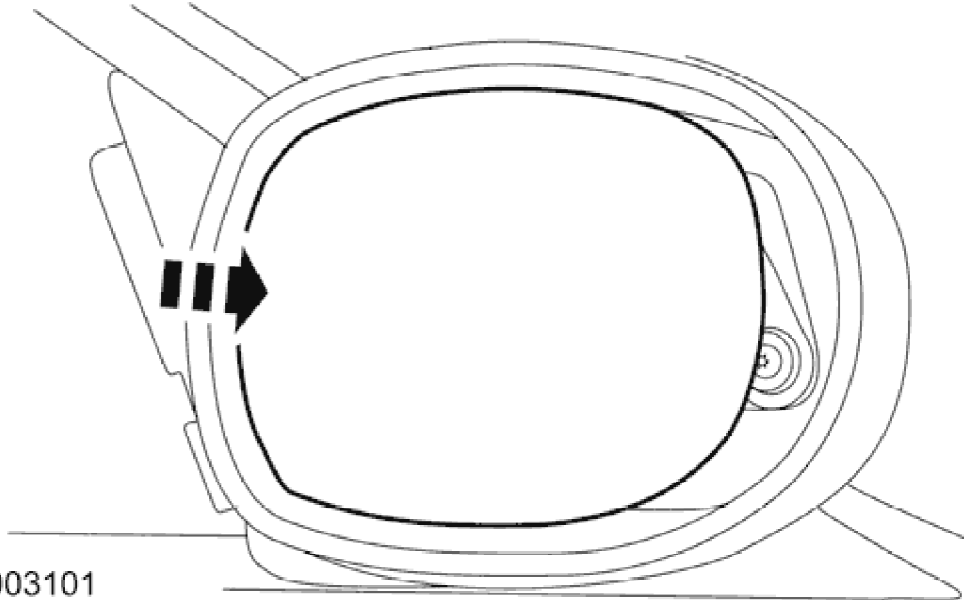


VUJ0003101

1. Apply light pressure to the exterior mirror glass.

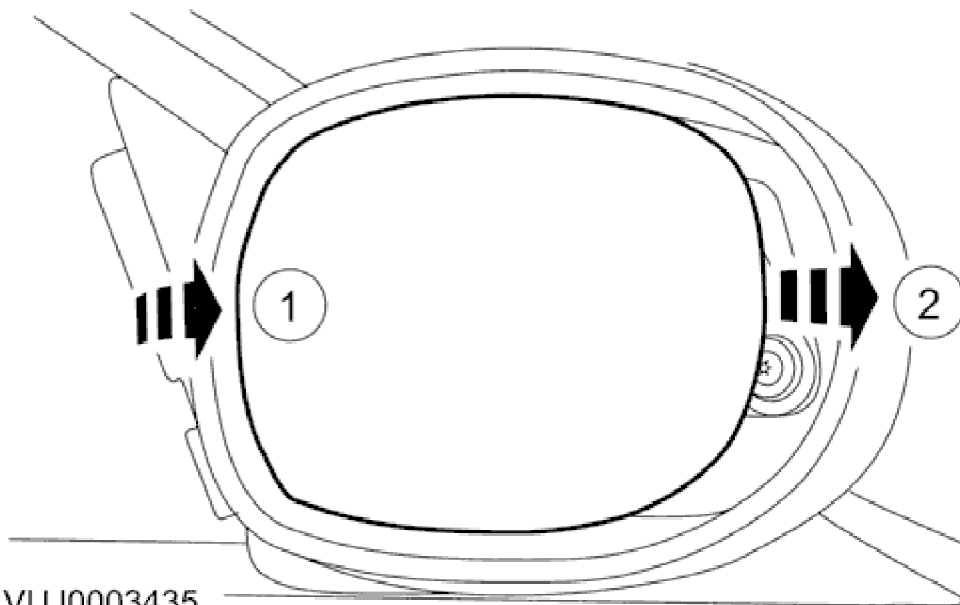

VUJ0003435

2. Detach the exterior mirror glass.
1. Apply light pressure to the inner edge of the exterior mirror glass.
2. Detach the exterior mirror glass.

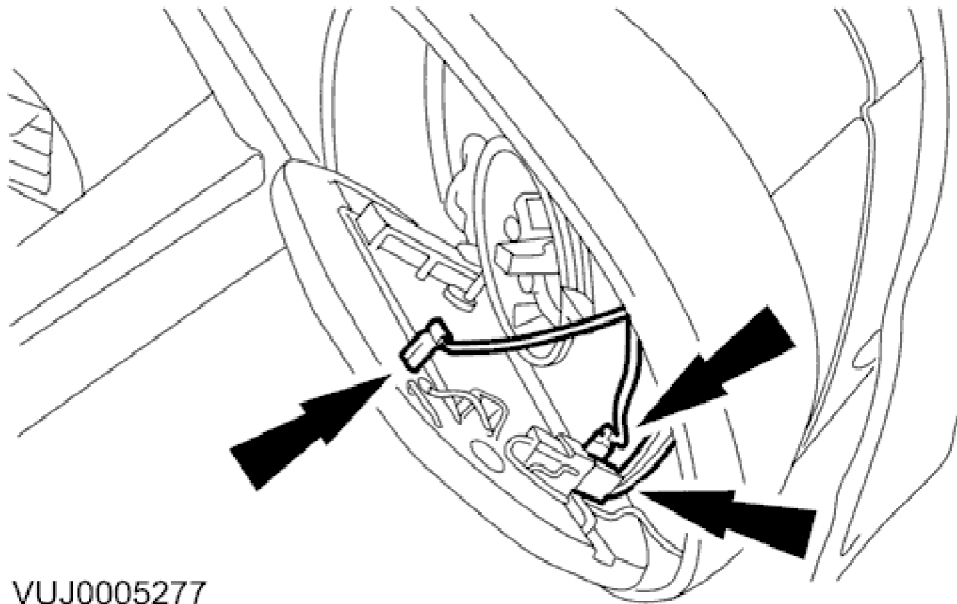

VUJ0005277

3. Remove the exterior mirror glass.
 - Disconnect the electrical connectors.

Installation

1. To install, reverse the removal procedure.