



Luggage compartment

To open the luggage compartment:

- Press the luggage compartment lid release switch (A) on the fascia switchpack, or,
- Press the luggage compartment button (B) on the key transmitter, or,
- With the vehicle unlocked, press the release button (D) on the compartment lid.

Note: An integrated key or a black-headed key can be used to open the luggage compartment lid release lock (C), (turn clockwise to release), but opening with the key when the vehicle is armed will cause the alarm to sound. Use a transmitter, or place the key in the ignition, to turn the alarm off if it sounds as a result of opening with a key.

If the vehicle alarm system is armed and the luggage compartment is opened using the key transmitter, the alarm will not sound. The system will be rearmed when the lid is closed, provided the vehicle has not been disarmed.

Neither the luggage compartment lid release switch on the fascia switchpack nor the lid release button will operate when the vehicle is armed.