

## Security and locks 2-3

### Key transmitter

The security system can be controlled remotely by a radio frequency, battery-operated, integrated key transmitter.

The transmitter is activated by pressing one of the operating buttons.

1. Unlocks and disarms the vehicle. Pressing and holding the button will globally open the vehicle windows (and sunroof, if fitted).
2. Releases the luggage compartment lock.
3. Activates the convenience headlamp feature and sounds the panic alarm (where fitted).
4. Locks and arms the vehicle.
5. Locks/unlocks the key. To free the key, press the release button (5). When not required press and hold the button and fold the key into the transmitter housing.

**Note:** Key transmitters will not operate if a key is in the ignition switch. Each integrated key will operate the ignition switch, and lock the doors and glove compartment.

**Caution:** Should a key transmitter be lost, a new one can be obtained and programmed to the vehicle by a Jaguar Dealer, who will ask for proof of vehicle ownership. It is advisable to notify a Dealer as soon as a key transmitter is lost or stolen and have the remaining key transmitter(s) reprogrammed. This will then prevent the lost or stolen key transmitter from being used to disarm and unlock the vehicle.

**Note:** Dealers keep a log of all enquiries for replacement keys and notify Jaguar Cars Ltd. of any such requests.


### Care of key transmitters

The key transmitters must be treated with care and not exposed to extremes of heat, dust, humidity or be in contact with fluids. Do not leave the transmitter exposed to direct sunlight.

The battery is the only serviceable part.

### Radio frequency approval

Where radio frequency approval is required, the necessary information is shown on page 2-16.

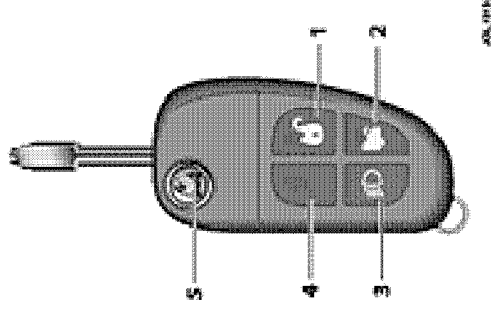

AKL 7116