

2 - 2 Security and locks

Vehicle security

When leaving the vehicle unoccupied, remember the following:

- Apply the parkbrake and, with automatic transmission, move the gear selector to Park 'P'.
- Do not leave children or pets in the vehicle unattended.
- Do not leave luggage or valuables on view. Always take your valuables with you or lock them in the luggage compartment.
- Remove the ignition key and spare keys, even when the vehicle is in your garage.
- Close all windows and lock all doors securely.
- Park the vehicle where it can be seen. At night, park in a well-lit area.
- Ensure that all key transmitters are removed from the vehicle before locking the doors, and that all doors, the luggage compartment and the hood are closed.

Keys

Vehicles are supplied with two key transmitters, which comprise the key body integrated with the remote transmitter, and one green-headed key. Separate keys, black- or green-headed, without the transmitter, are also available from Jaguar Dealers.

The key number is recorded on an adhesive label which is fixed to the back of each key. Peel off the label and keep safely, not in the vehicle.

Each black-headed key will operate the ignition switch and lock the doors, luggage compartment and the glove compartment.

The green-headed key is a valet key which will not unlock a locked glove compartment or locked luggage compartment lid when the valet switch has been set.

A maximum of eight keys can be used, of which up to four may be key transmitters. All the keys and transmitters used must be programmed to the vehicle by a Jaguar Dealer.

It is important to keep your keys in safe places at all times. Leaving them in conspicuous places is an invitation for a thief to steal them and, consequently, your vehicle or belongings. Keep them as secure as you would your wallet or purse, both at home and away.

Immobilisation system

This vehicle is equipped with an immobilisation system which prevents it from being driven away by an unauthorised person.

An electronic device is fitted in the head of each key which is programmed to the vehicle electronics. When the key is placed in the ignition switch, a sophisticated decoding process is used to validate the key transponder code.

The engine cannot be started unless the key is programmed to the vehicle electronic systems.

When turning the key in the ignition switch to start the engine, if the security status light on the centre console remains flashing a fault condition is indicated, and it is possible that the engine will not start. Please contact a Jaguar Dealer to investigate the cause of the light flashing even if the engine starts.