
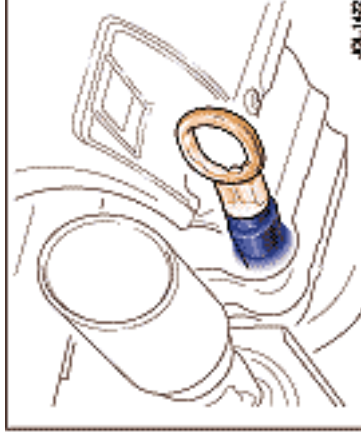


6-10 Roadside emergency

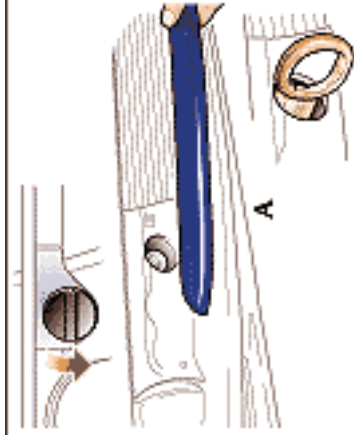

Towing eye

A screw-in towing eye is provided in the luggage compartment with the jack and can be fitted to the front or rear of the vehicle. The towing eye has a left-hand thread and must be screwed in an anti-clockwise direction when fitting.

Caution:

1. The towing eye is not suitable for 'solid bar' towing.
2. Care must be taken to avoid damaging the bumpers and front apron.

Front tow point

The front towing point is located behind a grille vane or plastic cover on the left-hand side of the vehicle (as viewed from the front).

- A. The grille vane is secured by three fasteners on the underside. Turn the fasteners anti-clockwise to loosen, then remove the grille vane.
- B. On 'R' performance vehicles, press the plastic cover to the right to unclip. Remove the cover.
- C. On vehicles fitted with adaptive cruise control (ACC), unclip the right-hand side of the plastic cover to remove.

Screw the towing eye into the vehicle, right up to the shoulder, turning anti-clockwise.

Rear tow point



WARNING:
Avoid body contact with a hot exhaust pipe when fitting the eye to the rear towing point.

The rear towing point is alongside the left-hand exhaust pipe.

Remove the small cover from the bumper. Remove the bung and screw the towing eye into the vehicle, right up to the shoulder, turning anti-clockwise.