

# 2004 S-TYPE - Roof Opening Panel - 501-17

## Motor Synchronization

### Roof Opening Panel Motor Synchronization Procedure

1. **NOTE:**

If the battery is disconnected when the roof opening panel is not operating, the roof opening panel will retain its memory and the synchronization procedure will not be required.

Operate the roof opening panel switch in the tilt position until the roof opening panel is in the fully tilted position.

2. Release the roof opening panel switch.

3. **NOTE:**

This operation must be done within five seconds of the previous step.

Operate the roof opening panel switch in the tilt position and hold.

4. Release the roof opening panel switch after the roof opening panel has reached the fully closed position.

5. **NOTE:**

If the roof opening panel motor synchronization has been completed correctly, when the roof opening panel switch is operated in the fully open position the roof opening panel should move to the fully open position automatically.

**NOTE:**

If the roof opening panel does not move to the fully open position, repeat the roof opening panel motor synchronization procedure.

Operate the roof opening panel switch to check the roof opening panel motor operation.

### Roof Opening Panel Motor Synchronization De-activation Procedure.

1. Operate the roof opening panel control switch in the tilt position until the roof opening panel is in the fully tilted position and release. Then hold the roof opening panel control switch in the tilt position for at least twenty seconds, there will be a small movement from the roof opening panel to indicate it has been de-activated.