

3-20 Before driving

Seat adjustment



WARNING:


1. Do not make adjustments when the vehicle is moving.
2. Front passengers must not ride with the seat fully reclined.

Front seat adjustment

The front seats are adjusted electrically by switches on the side of the seat cushion. Adjustment can be made with or without the ignition key inserted.

The number of seat adjustments varies with the vehicle specification but all options are given here. If a seat movement is not specified for your vehicle, the control switch will either not be fitted or will not include that seat function (switch movement will be inhibited).

Seat adjustments for two people may be stored and recalled by the driver position memory system. See **Memory setting** on page 3-28.

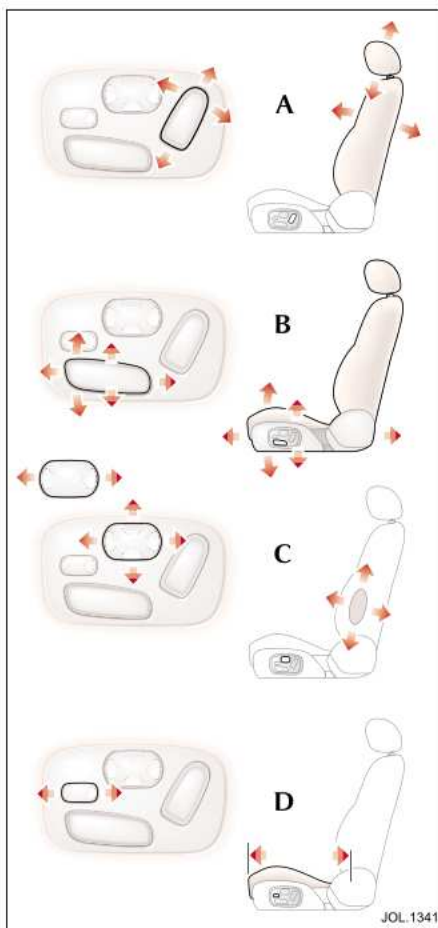

The full range of seat adjustments are:

A – Backrest angle (recline) and, if specified, headrest height.

B – Seat fore and aft position and, if specified, cushion height and front tilt:

- Move the switch forward or rearward to change the seat fore and aft position.
- Move the centre or rear of the switch up or down to adjust cushion height.
- Move the front of the switch up or down to tilt the front of the cushion.

C – If specified, provides adjustable lumbar support in the lower backrest. Either of two options may be fitted:

- **2-way or 4-way switch:** Press the front or back of the switch to increase/decrease lumbar support.
- **4-way switch only:** Press the top or bottom of the switch to adjust lumbar support upwards or downwards.

D – If specified, varies the cushion length. Moving the control will change the distance between the front of the cushion and the backrest.