

### **Selector Lever Cable Adjustment**

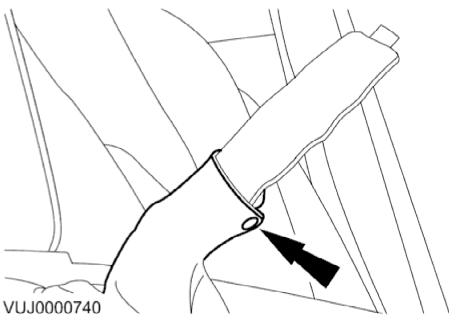


1. Unclip the parking brake boot.

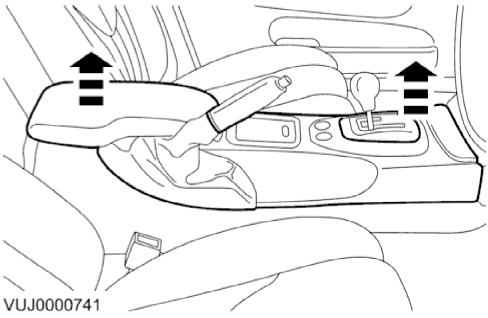


1

2. Detach the center console upper section.

2013-04-20

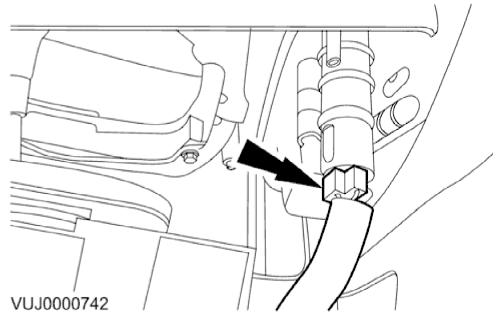


3. Disconnect the cigar lighter electrical connector.

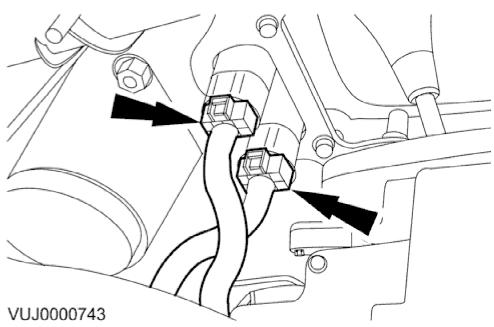


- 4. Remove the center console upper section.
  - Disconnect the transmission mode and traction control electrical connectors.

5. Move the selector lever to position 'R'.

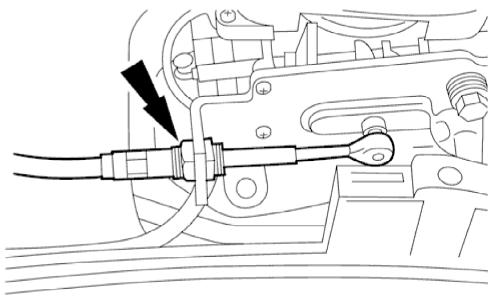


#### VUJ0000586

6. Loosen the selector cable lock nut.

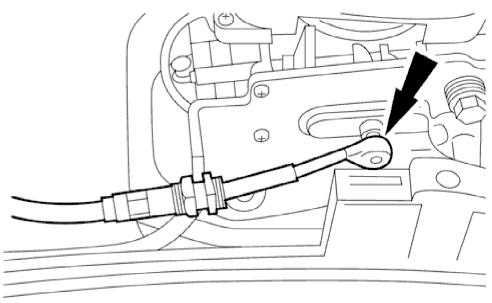

#### VUJ0000585

- 7. Detach the selector cable.
- 8. Raise and support the vehicle. For additional information, refer to <<100-02>>.

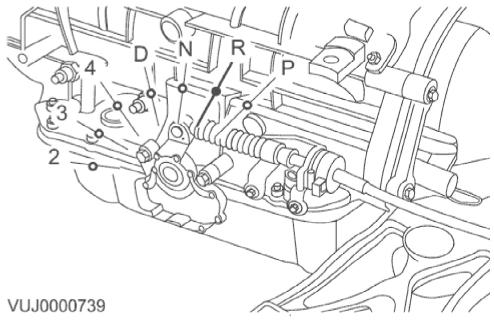


#### 9. **NOTE:**

The transmission selector lever has its own detent mechanism. There is no need to hold it after engaging gear.

Move the rotary position switch to the 'R' position.


- 10. Lower the vehicle.
- 11. Move the selector lever to position 'R'.

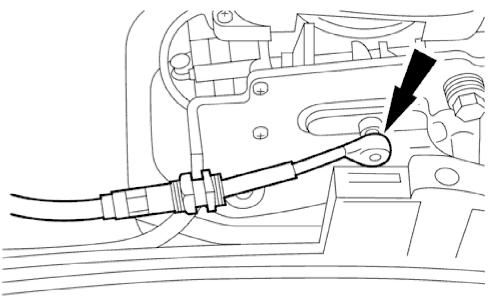


#### VUJ0000585

- 12. Connect the selector cable.
  - Do not tighten the selector lever lock nut.


- 13. Move the selector lever to position 'D'.
  - Hold the selector lever applying light pressure and finger tighten the rear lock nut, then finger tighten the front lock nut.
- 14. Move the selector lever to different gear lever positions
  - When 'D' is selected make sure it sits as close as possible to the 'D' and '4' position in each corner.

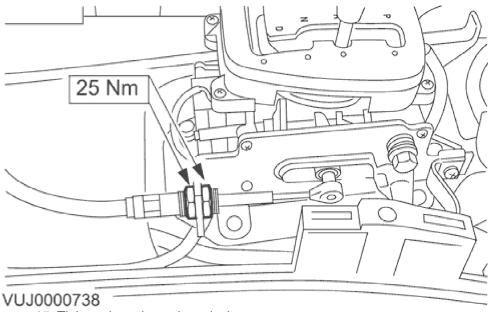


15. Tighten the selector lever lock nut.

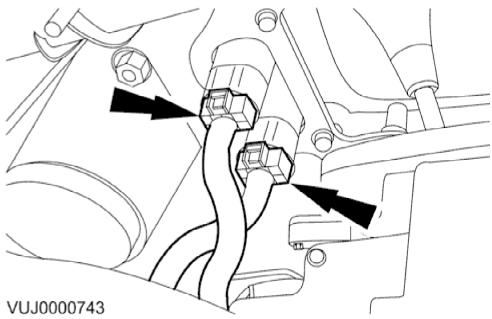


- 16. Install the center console upper section.
  - Connect the transmission mode and traction control electrical connectors.

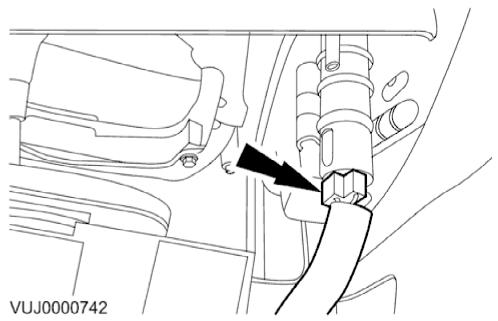

17. Connect the cigar lighter electrical connector.

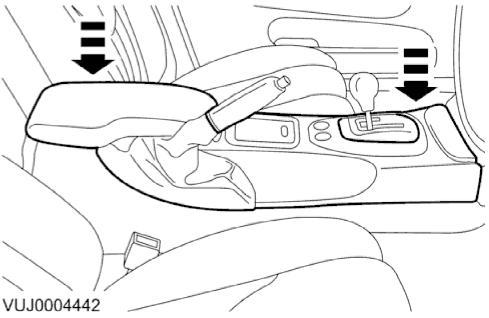

18. Install the center console upper section.

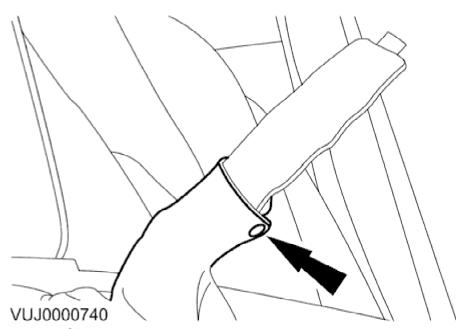

19. Clip together the parking brake boot.