


Selector Lever Cable and Bracket 44.15.08


Removal

1. Move the selector lever to position 'N'.
2. Remove the centre console. For additional information, refer to<<501-12>>.

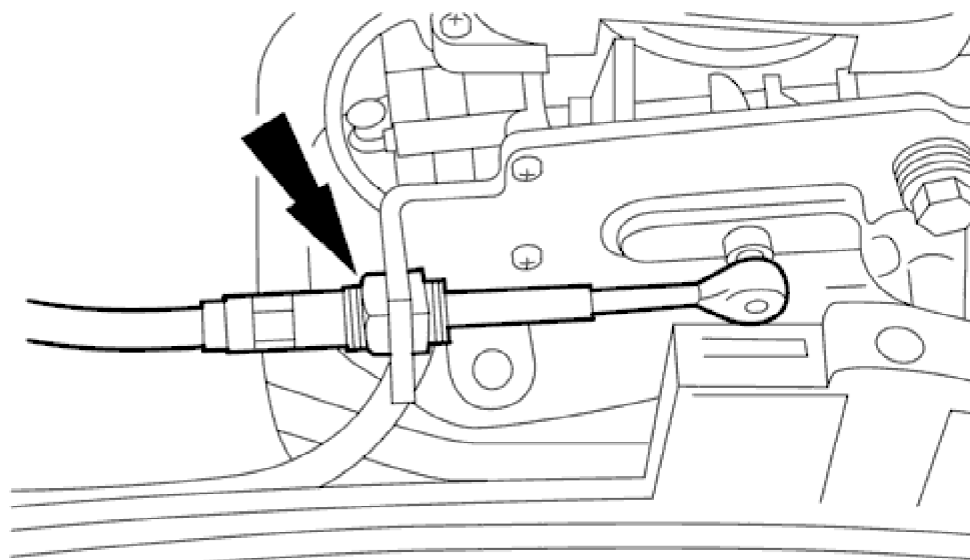


VUJ0000586

3. Detach the selector cable.

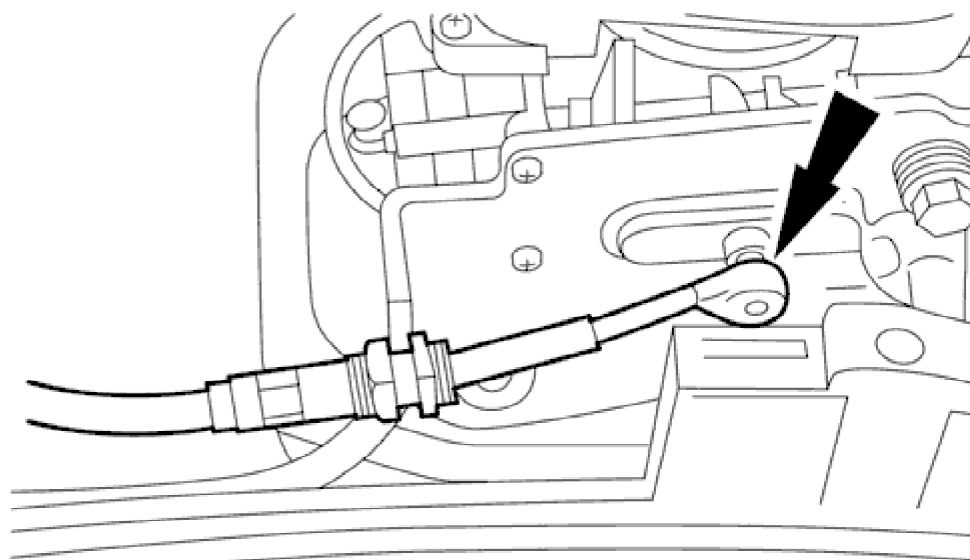


VUJ0000585

4. Disconnect the selector cable.

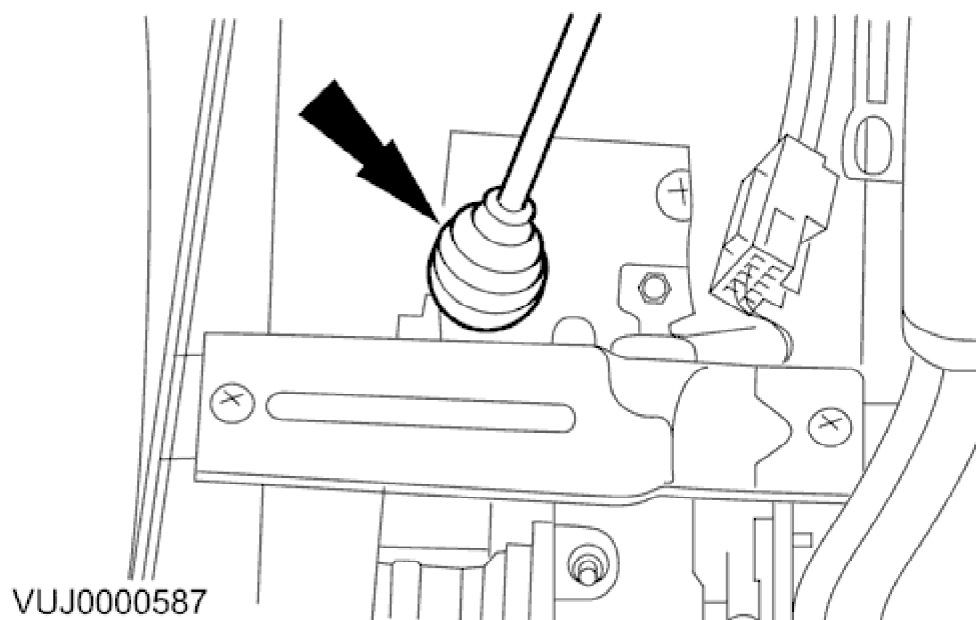


5. Detach the selector cable from the floorpan.

6. Raise and support the vehicle. For additional information, refer to <<100-02>>.

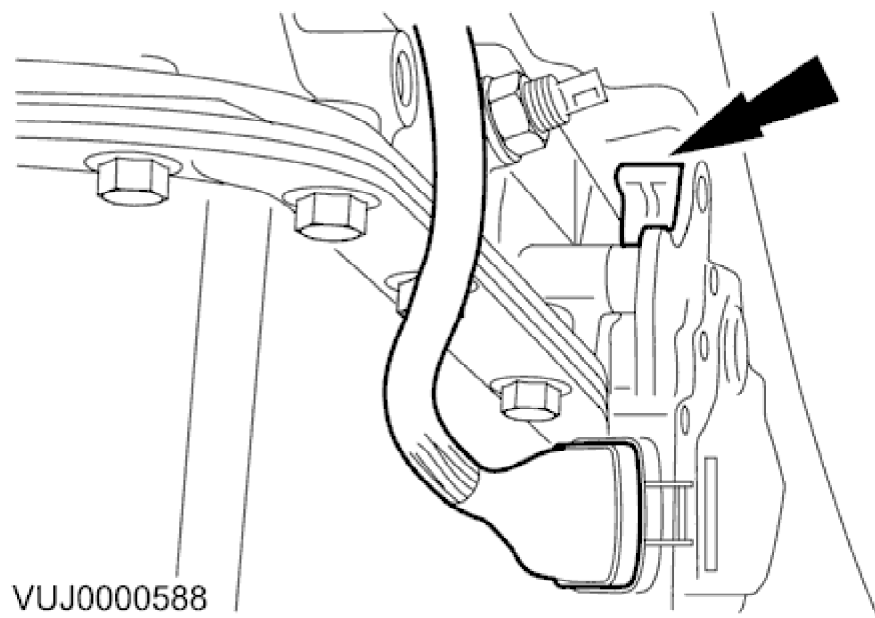

7. Disconnect the selector cable from the rotary switch.

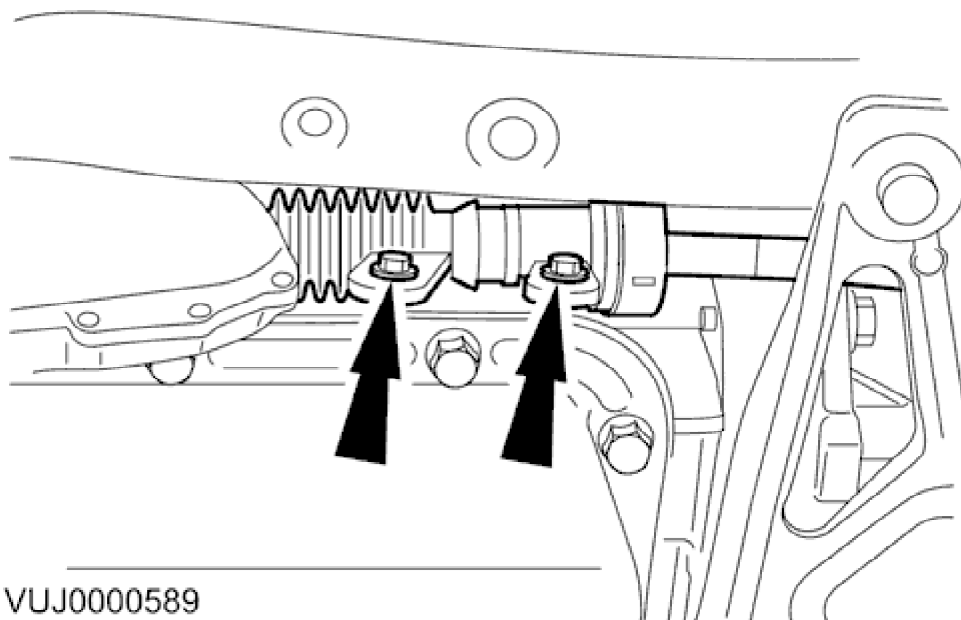

VUJ0000589

8. Remove the selector cable.
 - Remove the bolts.

Do not lock the selector cable adjusting nut.