Bumpers - Front Bumper Cover Removal and Installation

Removal

All vehicles 1. Remove the radiator splash shield retaining bolts. 0 tΩt E66727 E66728

2. NOTE: Left-hand shown, right-hand similar.


Detach the wheel arch liner.

3. Disconnect the bumper wiring harness electrical connector.

Detach the bumper cover.

4. NOTE: Left-hand shown, right-hand similar.

Vehicles with headlamp washers

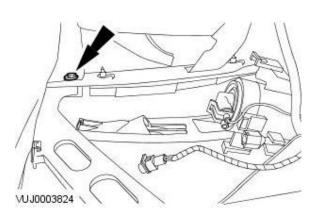

0

VUJ0003017