


2004 X-TYPE - Generator and Regulator - 414-02


Generator 86.10.02

Removal

1. Disconnect the battery ground cable. For additional information, refer to <<414-01>>.
2. Remove air conditioning compressor. For additional information, refer to <<412-03>>.

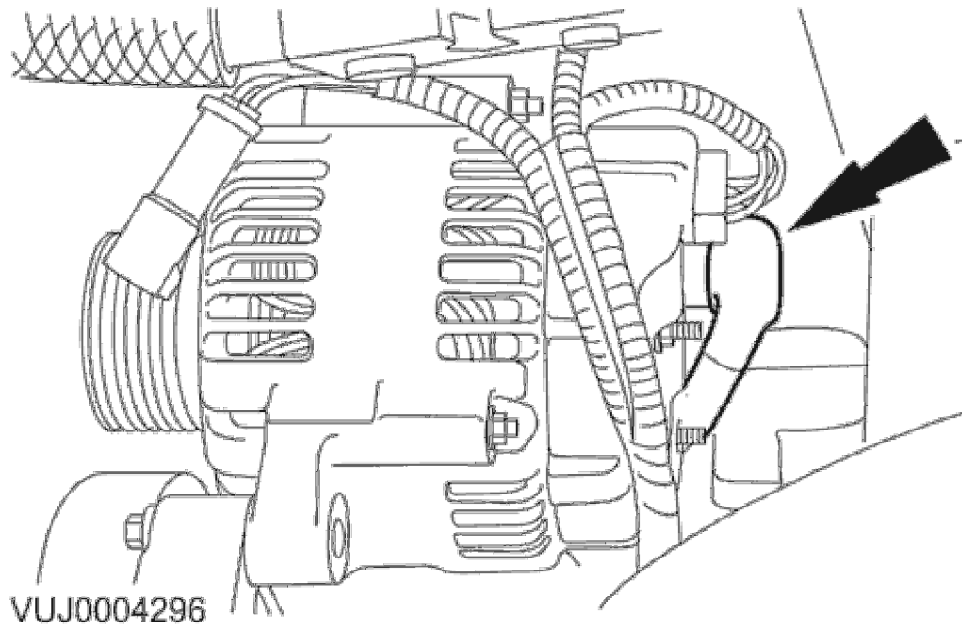


3. Detach the generator battery positive cable protective cover.

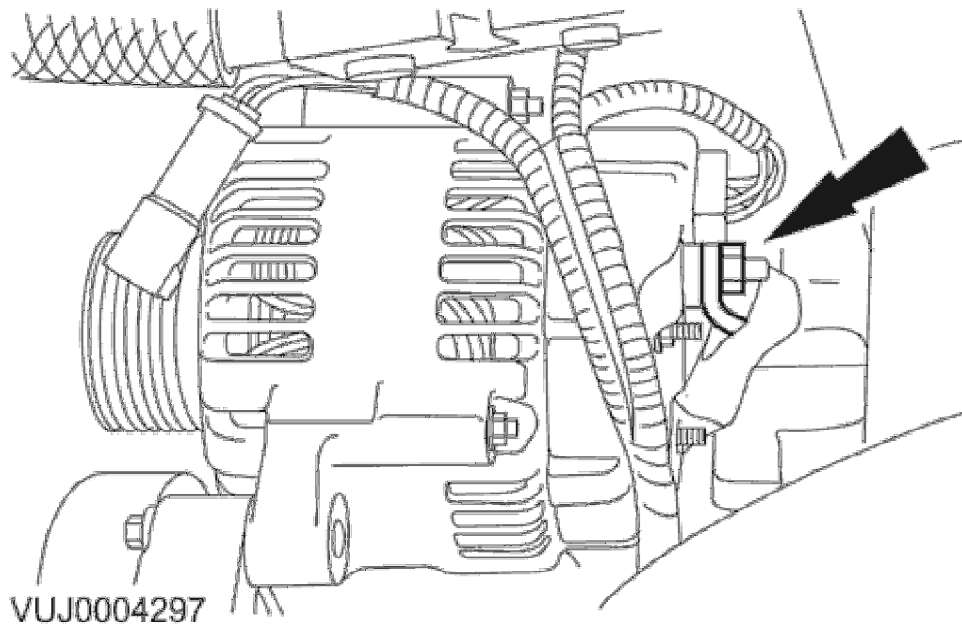


4. Disconnect the generator battery positive cable electrical connector.


2004 X-TYPE - Generator and Regulator - 414-02

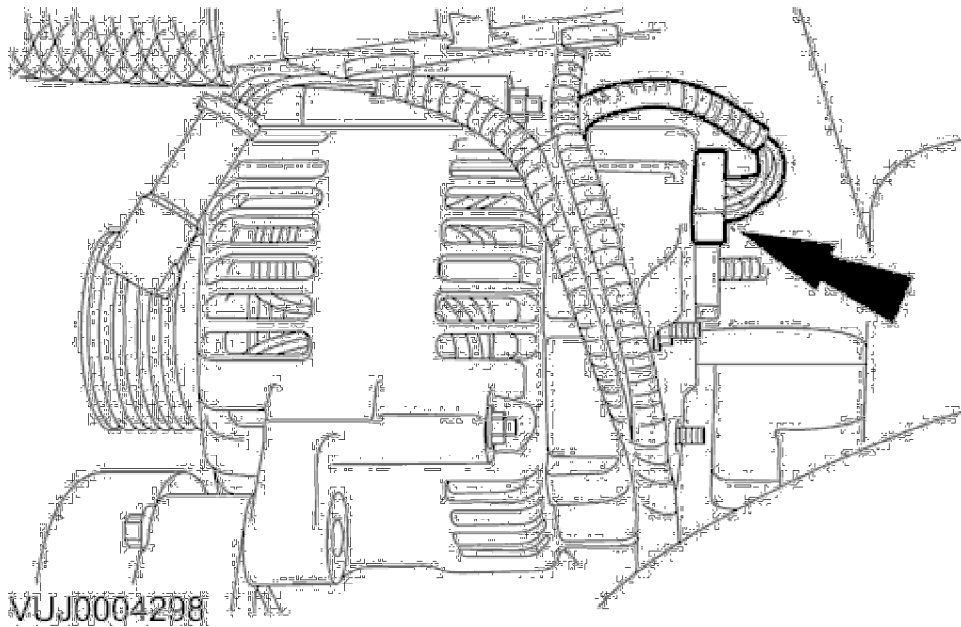

5. Disconnect the generator electrical connector.

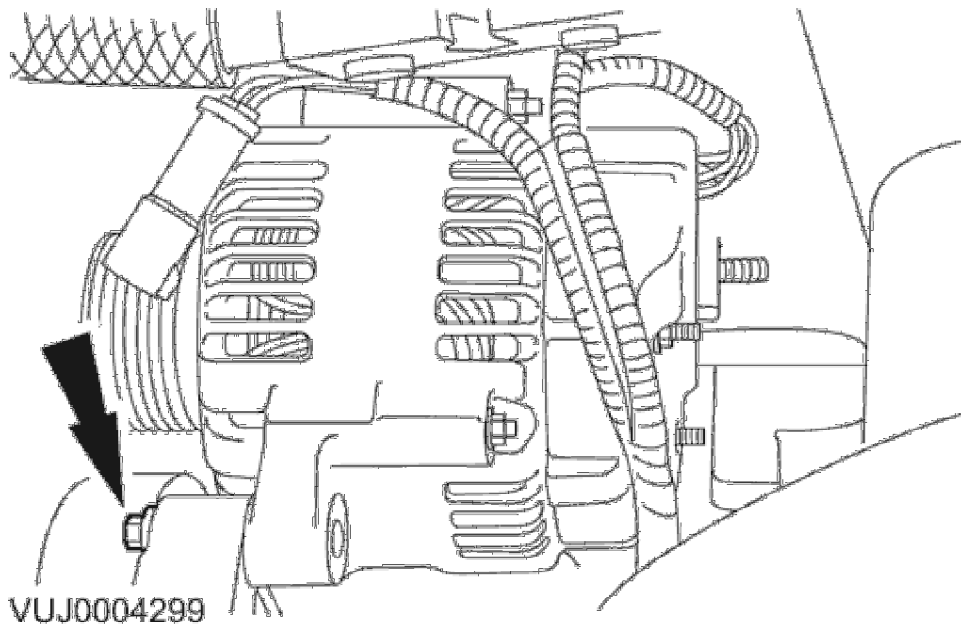


6. Remove the generator lower retaining bolt.

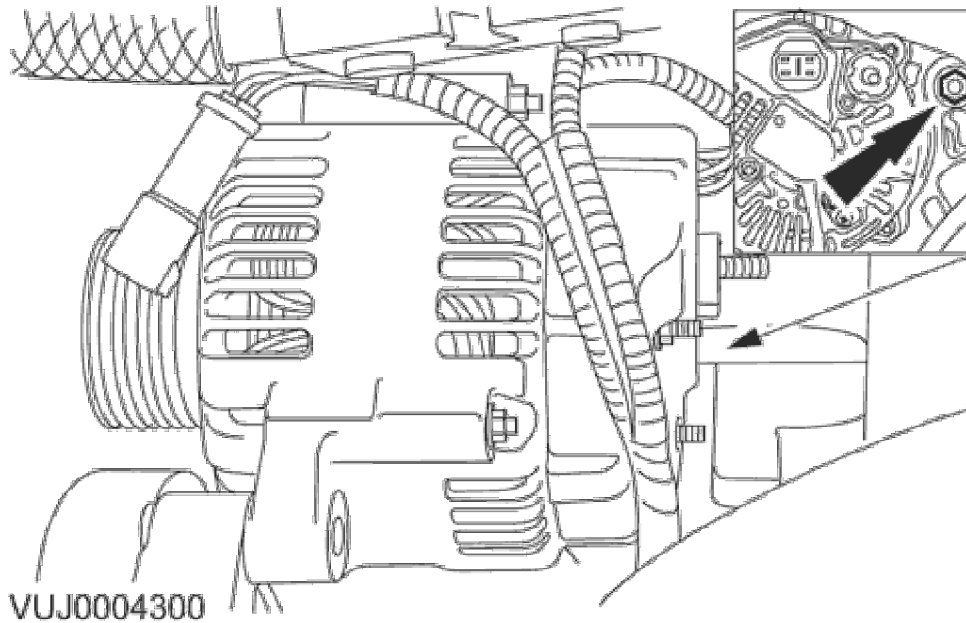


7. Remove the generator.
 - Remove the generator upper retaining bolts.

Installation

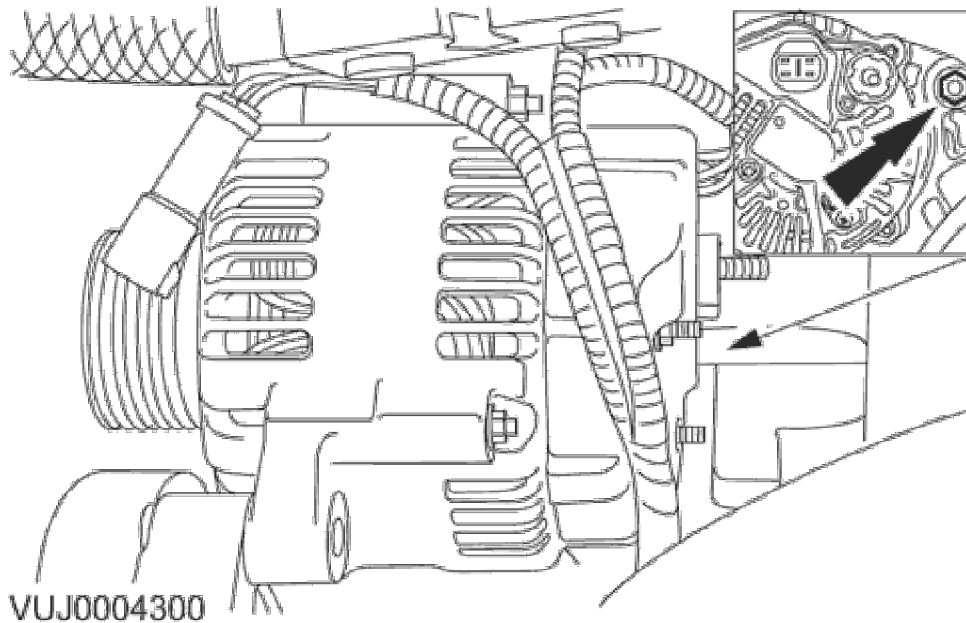


1. To install, reverse the removal procedure.
 - Tighten to 47 Nm.

2004 X-TYPE - Generator and Regulator - 414-02

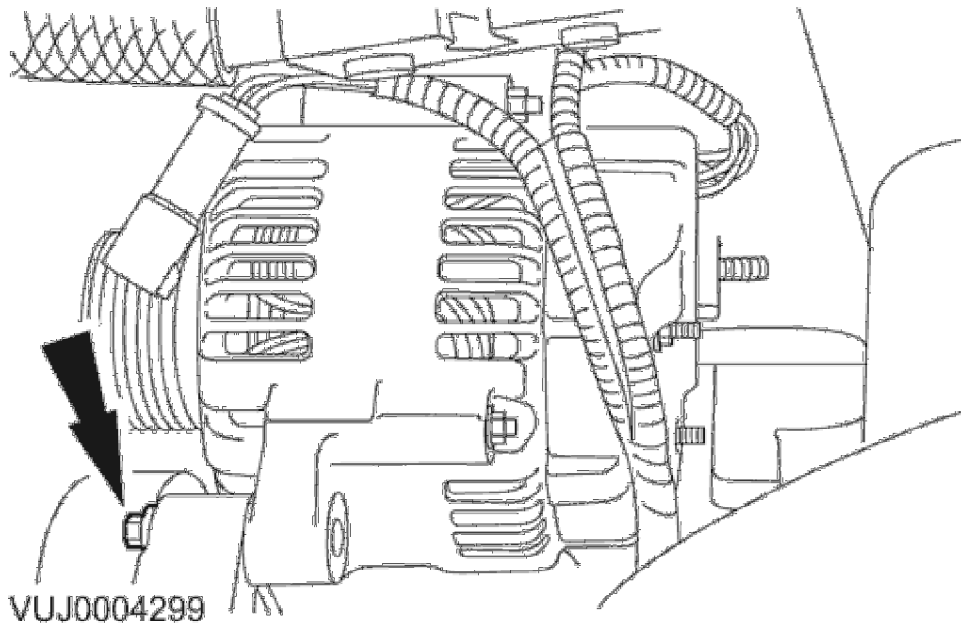

VUJ0004299

2. Tighten to 25 Nm.

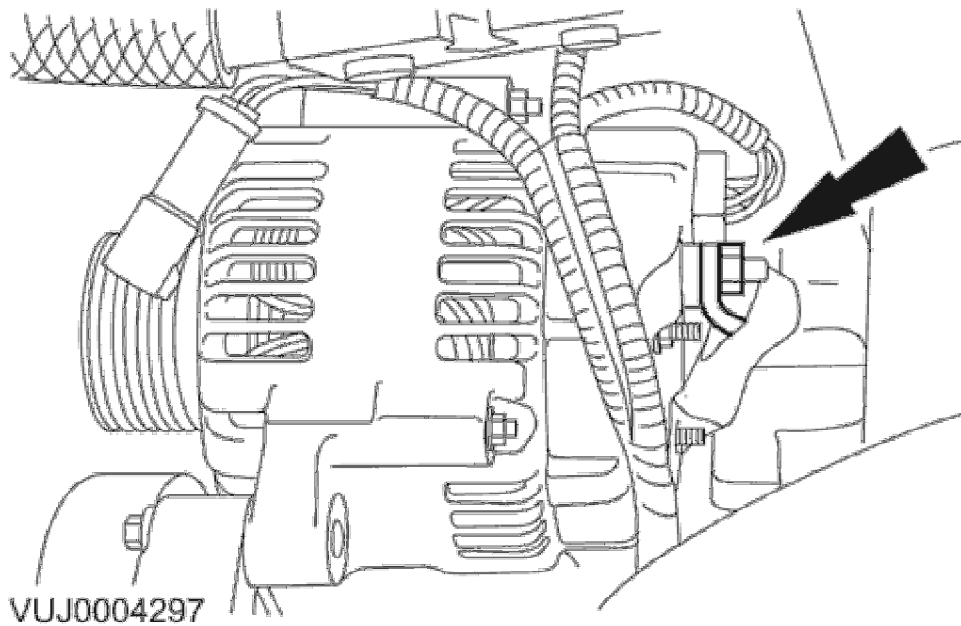

VUJ0004297

3. Tighten to 12 Nm.