


2004.25 X-TYPE - Exterior Lighting - 417-01

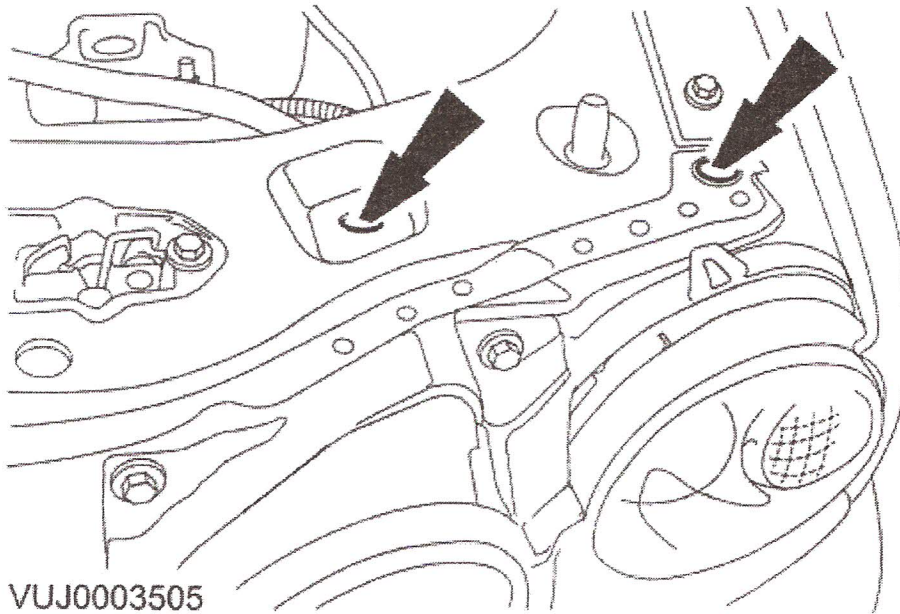

VUJ0003505

Adjust the headlamp using the adjustment bolts.

Headlamp Adjustment Headlamp adjustment should be made at room temperature.
Prepare the vehicle for headlamp adjustment.
Place the vehicle on a level surface. Before adjusting the headlamps, check for faulty lenses, reflectors and blackened bulbs. Install new components as necessary.
Check the tire pressures and correct as necessary. The vehicle must be at normal weight. Normalize the suspension.
Rotate the headlamp adjustment switch to the '0' position.
Adjust the headlamp using the adjustment bolts.