

Air Cleaner Element 19.10.08

Removal

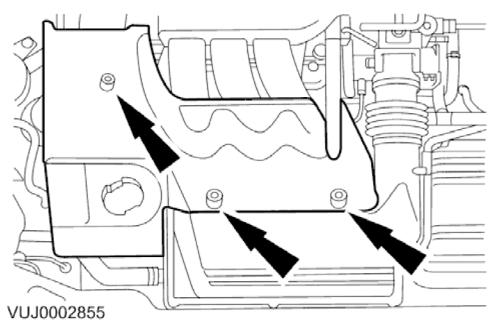

1. Remove the engine cover.

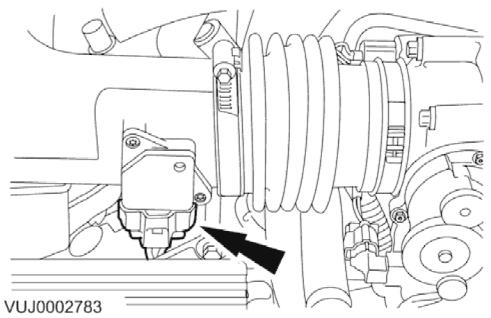


1


2. Disconnect the mass airflow sensor electrical connector.

2012-01-07

2004 X-TYPE - Intake Air Distribution and Filtering - 303-12

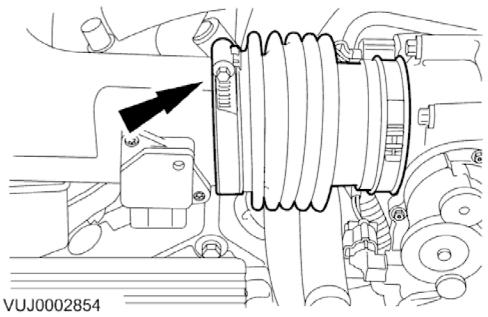


3. Disconnect the air cleaner outlet pipe.

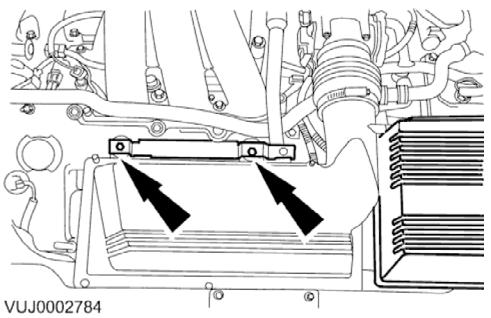


4. Remove the engine cover mounting plate.

2 2012-01-07

2004 X-TYPE - Intake Air Distribution and Filtering - 303-12

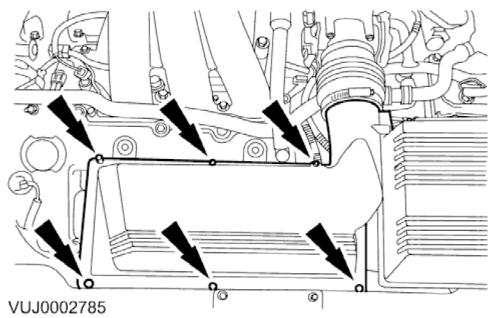

5. Remove the air cleaner cover.

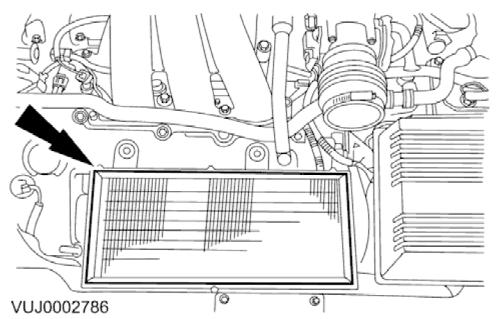

6. Remove the air cleaner element.

Installation

1. To install, reverse the removal procedure.

3 2012-01-07