



## Generator 86.10.02

### Removal

1. Disconnect the battery ground cable. For additional information, refer to <<414-01>>.
2. Remove air conditioning compressor. For additional information, refer to <<412-03>>.

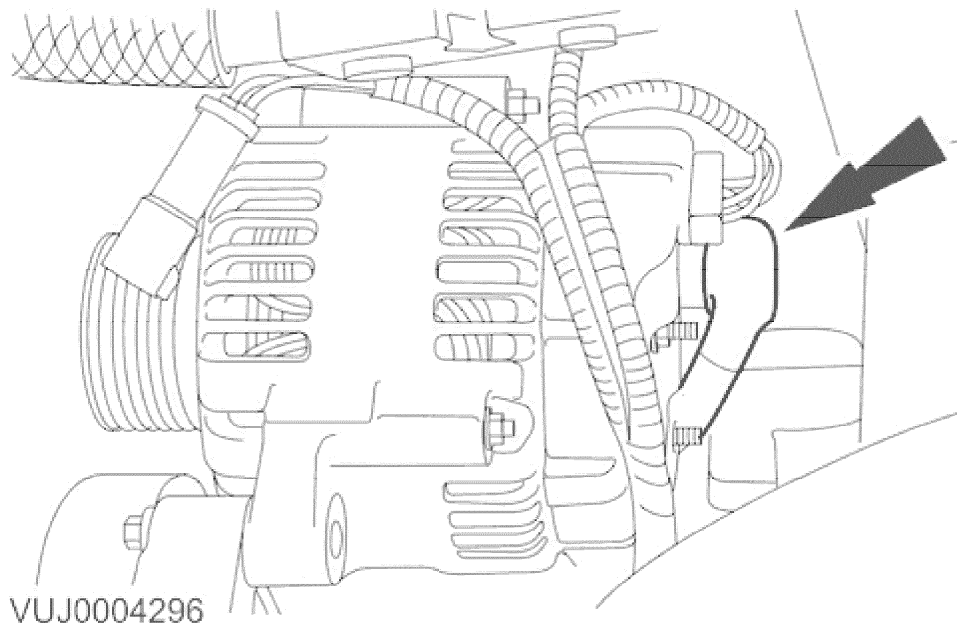


3. Detach the generator battery positive cable protective cover.

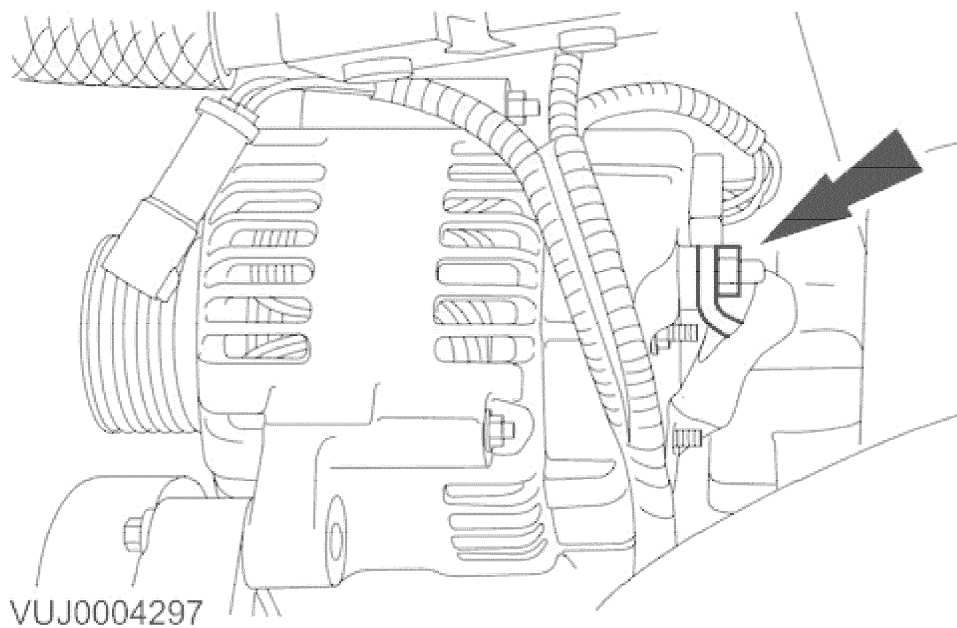


4. Disconnect the generator battery positive cable electrical connector.

## 2004.25 X-TYPE - Generator and Regulator - 414-02

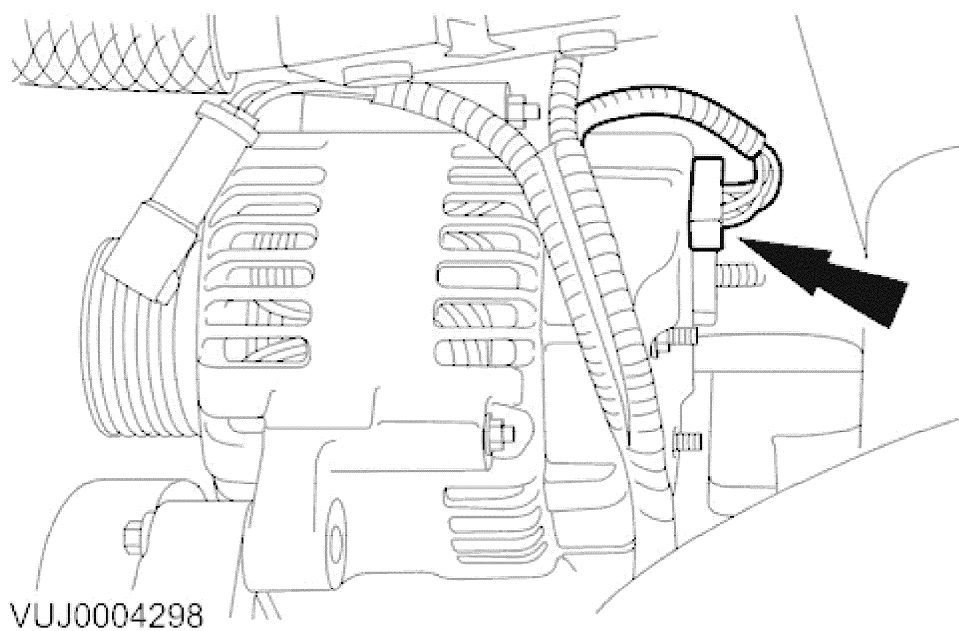


5. Disconnect the generator electrical connector.

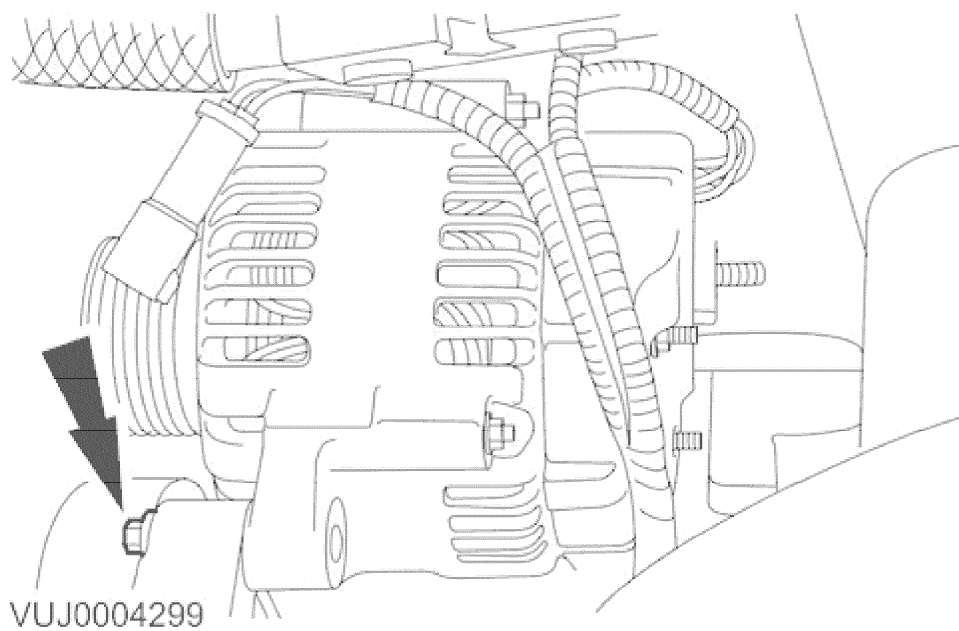


6. Remove the generator lower retaining bolt.

## 2004.25 X-TYPE - Generator and Regulator - 414-02

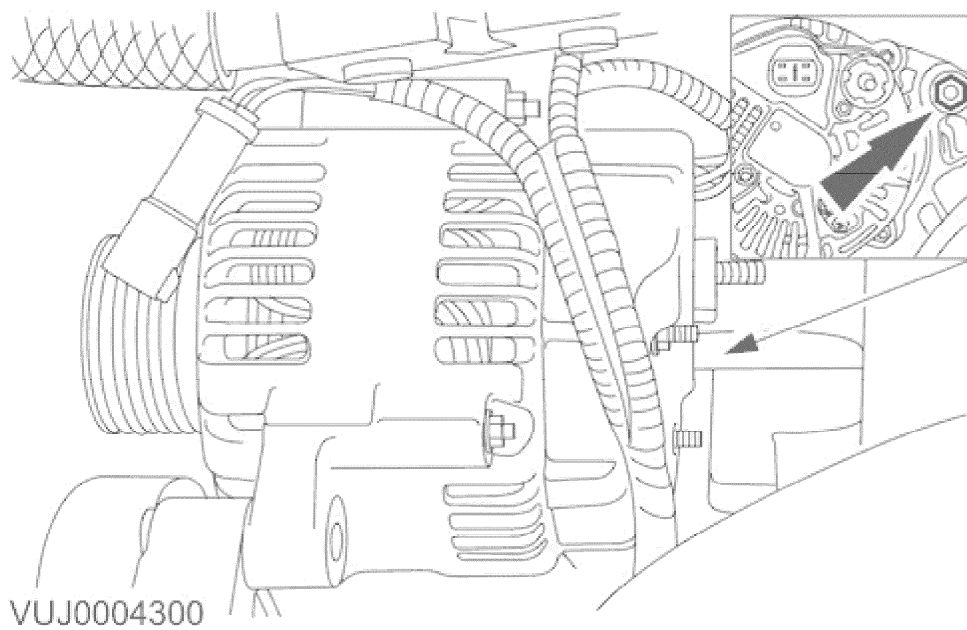


7. Remove the generator.
  - Remove the generator upper retaining bolts.

### Installation

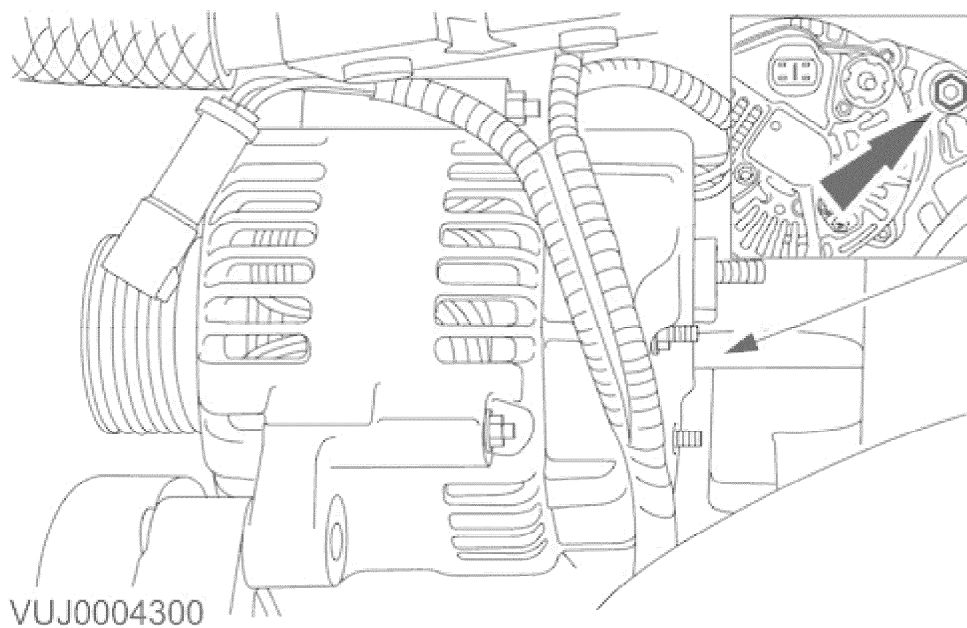


1. To install, reverse the removal procedure.
  - Tighten to 47 Nm.

## 2004.25 X-TYPE - Generator and Regulator - 414-02

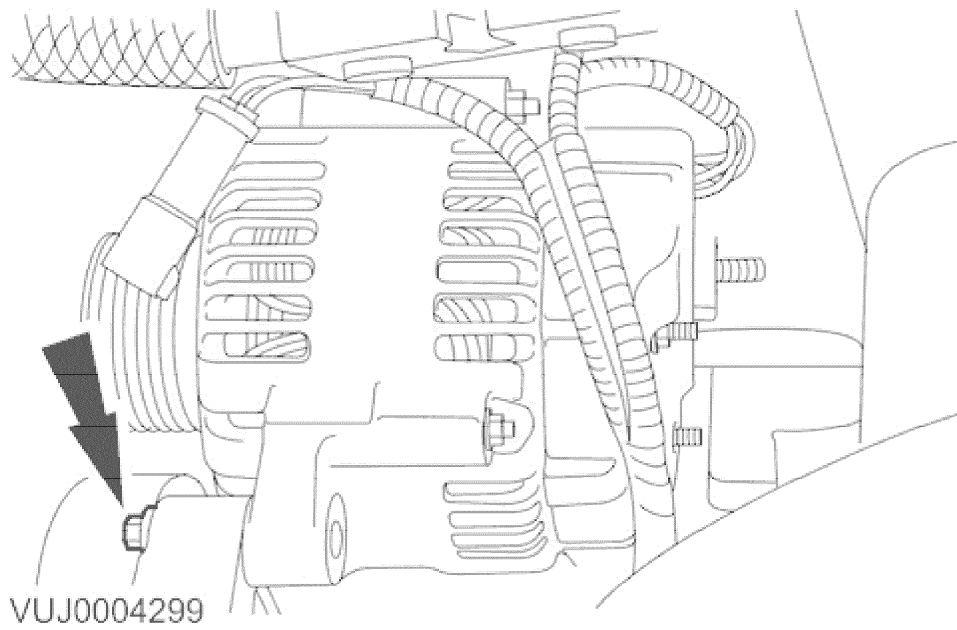

2. Tighten to 25 Nm.

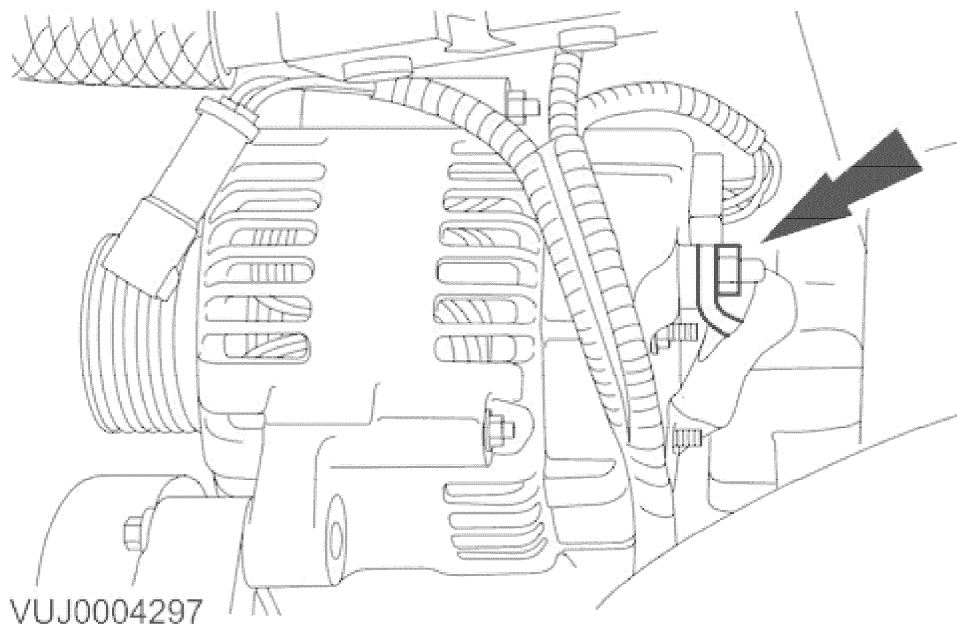

3. Tighten to 12 Nm.