



Parking Brake and Actuation - Parking Brake Cable Adjustment Vehicles With: Manually Adjusted Parking Brake

General Procedures

Special Tool(s)

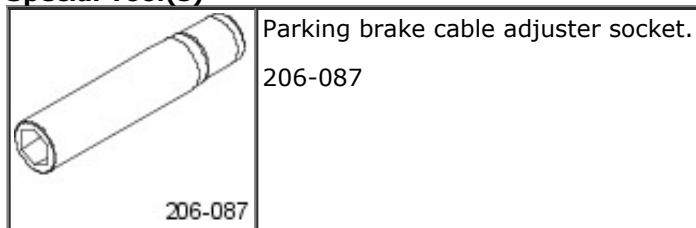


1. Release the parking brake.
2. Raise and support the vehicle.
For additional information, refer to: [Lifting](#) (100-02 Jacking and Lifting, Description and Operation).
3. **NOTE:** Make sure the handbrake is in OFF position.

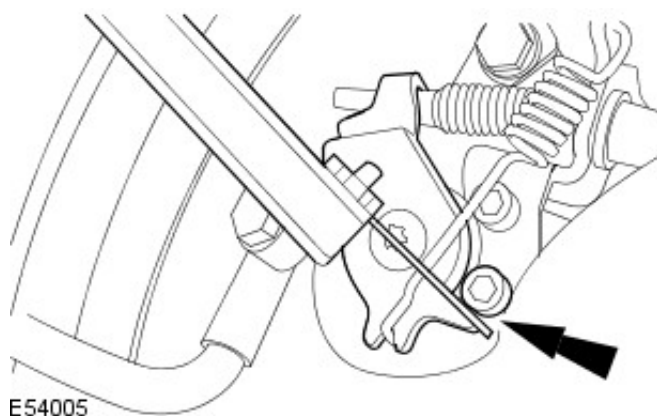


NOTE: The caliper gap must be between 0.1mm and 1.5mm on one side of the vehicle. The other side of the vehicle must be between 0mm (no gap) and 1.5mm. If the vehicle is within specification, no further action is required. If the vehicle is not within specification, carry out steps 4 to 8.

Using suitable feeler gauges, measure the gap between the parking brake caliper lever and the parking brake caliper lever stop on both sides of the vehicle.

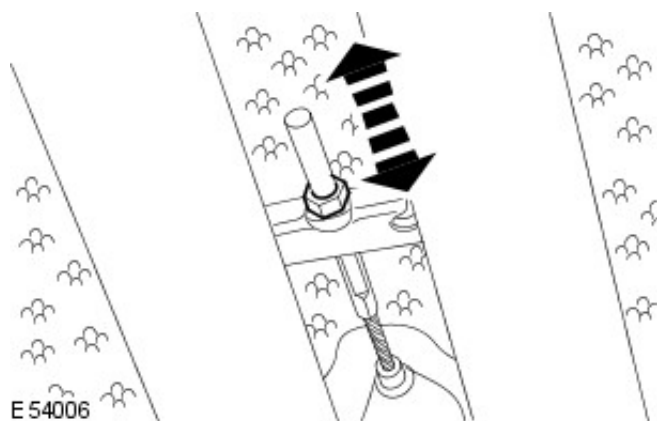


4. Using special tool 206-087 adjust the parking brake cable to obtain the required measurement.

5. Lower the vehicle.

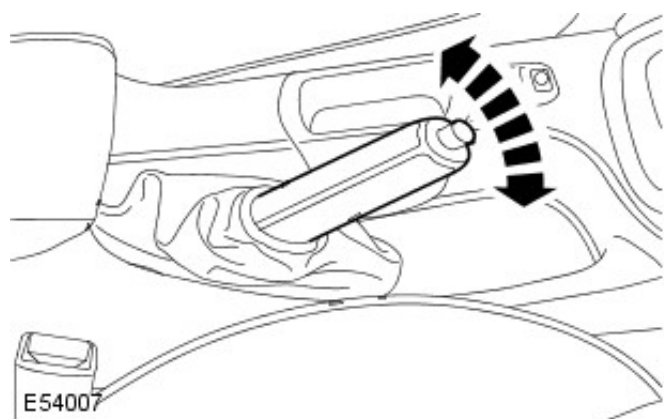

6. Operate the parking brake lever to maximum travel five times to allow the parking brake cables to stretch.

7. Raise the vehicle.

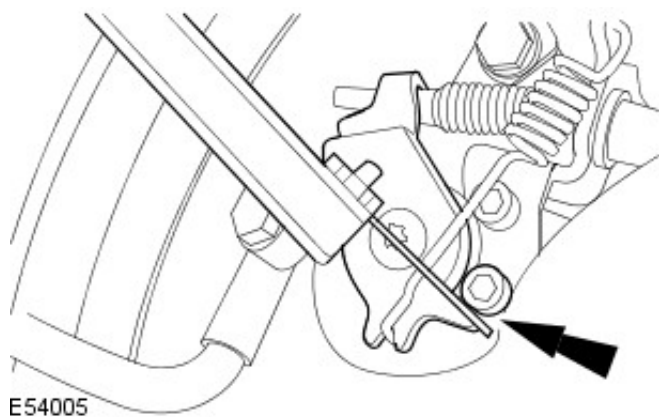

8. **NOTE:** Make sure the handbrake is in OFF position.

NOTE: The caliper gap must be between 0.1mm and 1.5mm on one side of the vehicle. The other side of the vehicle must be between 0mm (no gap) and 1.5mm. If the vehicle is within specification, no further action is required. If the vehicle is not within specification, carry out steps 4 to 8.

Using suitable feeler gauges, measure the gap between the parking brake caliper lever and the parking brake caliper lever stop on both sides of the vehicle.