


# Door Locks

## Operation

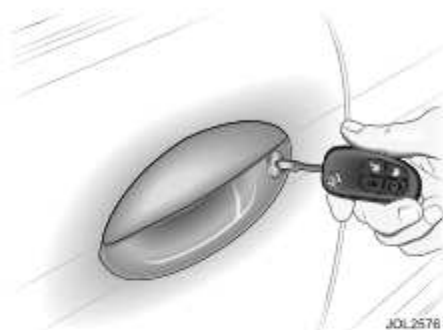

All doors can be locked and unlocked either remotely using the key transmitter buttons, or by using the integrated key.

## Smart Locking

This feature helps prevent locking the key in the vehicle. If one of the front doors is open and an attempt is made to lock the doors using a door interior locking lever, all doors will become unlocked.

If the hood, luggage compartment or a door is open, the vehicle can only be locked from the outside by using a key in the driver's door lock.

It will not be possible to lock the vehicle with a key transmitter if the luggage compartment, hood or a door is open.

## Vehicle Locking and Unlocking

### To lock the vehicle and set alarm

- Press the lock button on the key transmitter, or;
- Put the key in the driver's door lock, turn the key towards the rear of the vehicle and release.

The direction indicators will flash once, the security light on the centre console will start flashing and, after 20 seconds, the alarm will be set.

If a door, the hood or the luggage compartment are open and an attempt is made to lock the vehicle, the direction indicators will flash five times and the horn will chirp twice as a warning that the vehicle is not secure.

### To unlock the vehicle and disarm the alarm system using a key:

- Put the key in the driver's door lock, turn the key towards the front of the vehicle and release.

**Single-stage unlocking** - This unlocks all doors and the luggage compartment and turns on the interior lights.

**Two-stage unlocking** - This only unlocks the driver's door (and the Sedan luggage compartment) and turns on the interior lights. A second turn of the key is required to unlock all doors (and the Wagon tailgate).

### To unlock the vehicle and disarm the alarm system using a key transmitter

- Press the unlock button on the key transmitter.

**Single-stage unlocking** - This unlocks all doors and the luggage compartment and turns on the interior lights.

**Two-stage unlocking** - This only unlocks the driver's door (and the Sedan luggage compartment) and turns on the interior lights. A second press of the button is required to unlock all doors (and the Wagon tailgate).