



2004 X-TYPE - Engine Cooling - 303-03

- Remove and discard the seals.

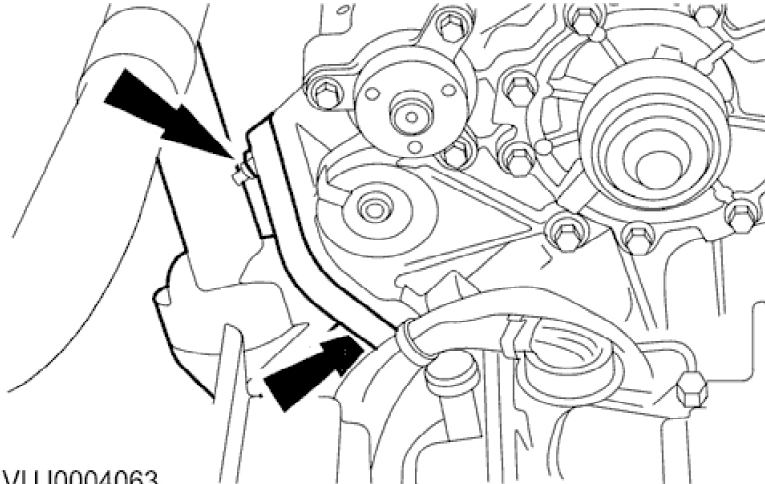


VUJ0004063

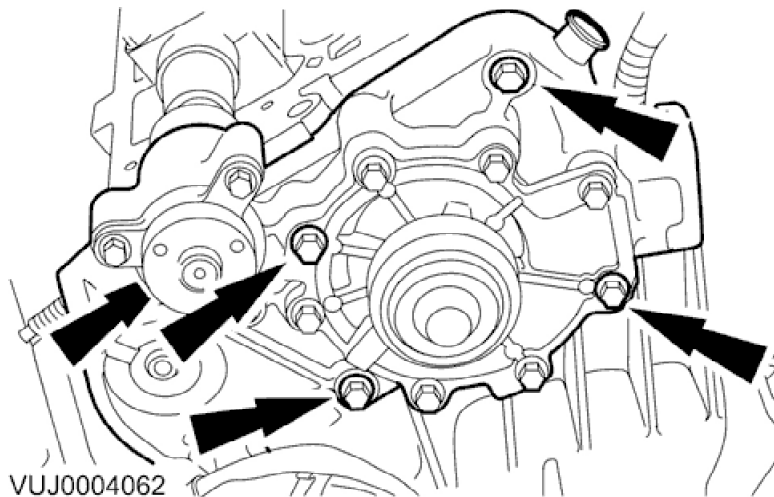

VUJ0004062


9. Remove the water pump housing.
- Remove and discard the gasket.

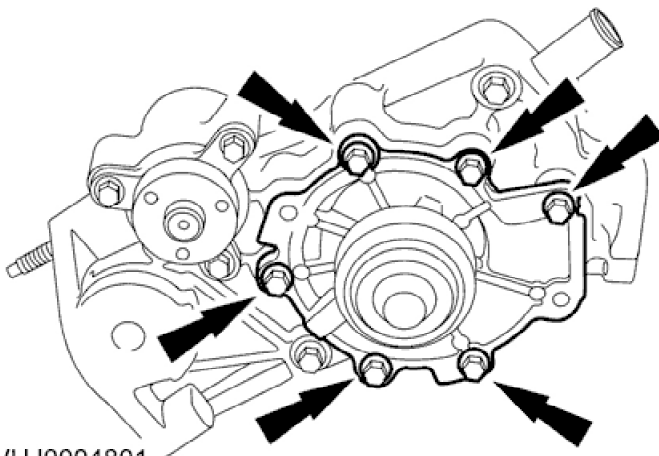

VUJ0004801

10. Remove the water pump from the water pump housing.
- Remove and discard the gasket from the water pump.

2004 X-TYPE - Engine Cooling - 303-03

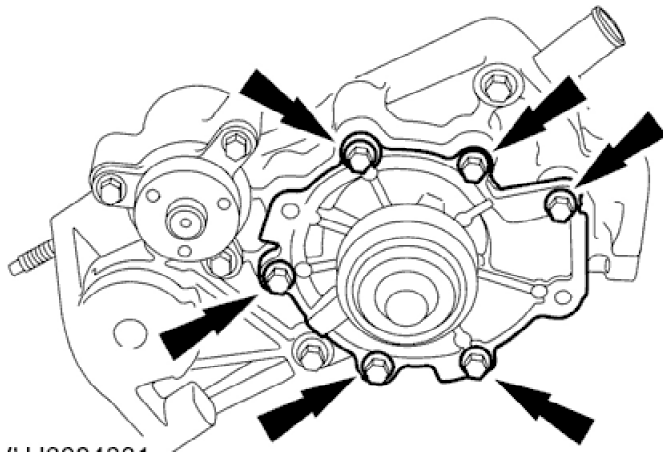


VUJ0004801

1. NOTE:

Install a new gasket.

To install, reverse the removal procedure.

- Tighten to 10 Nm.

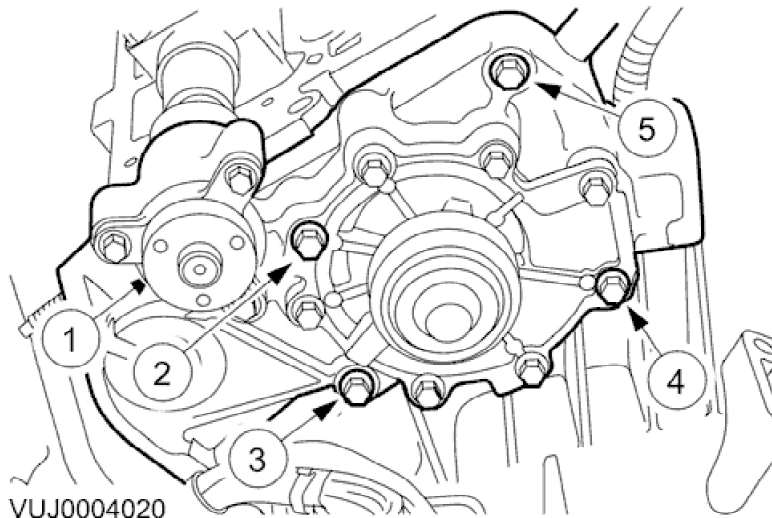

VUJ0004020

Make sure that the water pump housing is tightened in the sequence shown. Failure to follow this instruction may result in damage to the water pump drive pulley bearings.