



Front Muffler 30.10.18

Removal


1. Raise and support the vehicle. For additional information, refer to <<100-02>>.

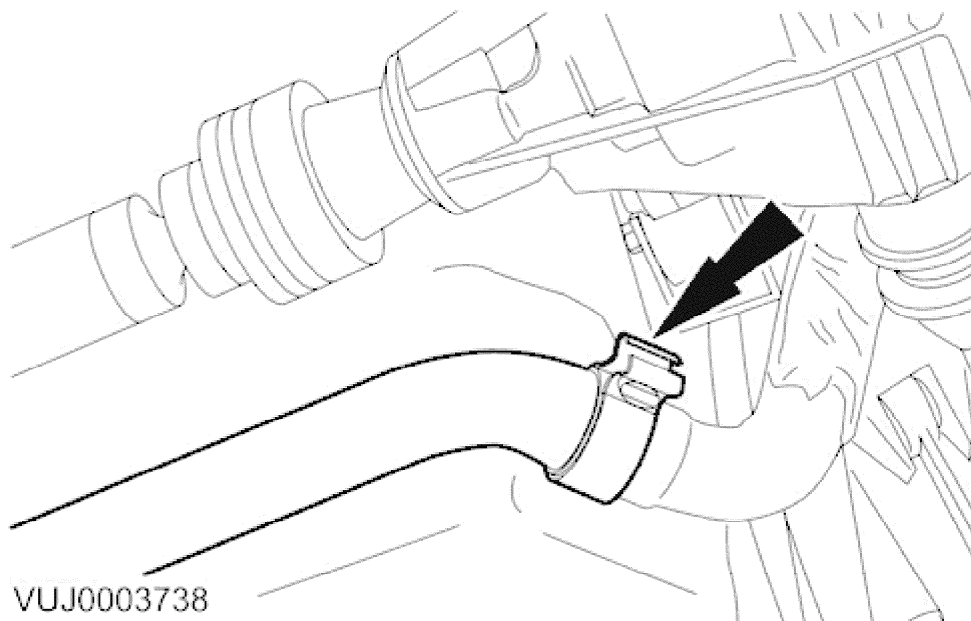

2. Loosen the rear muffler exhaust clamp nut.

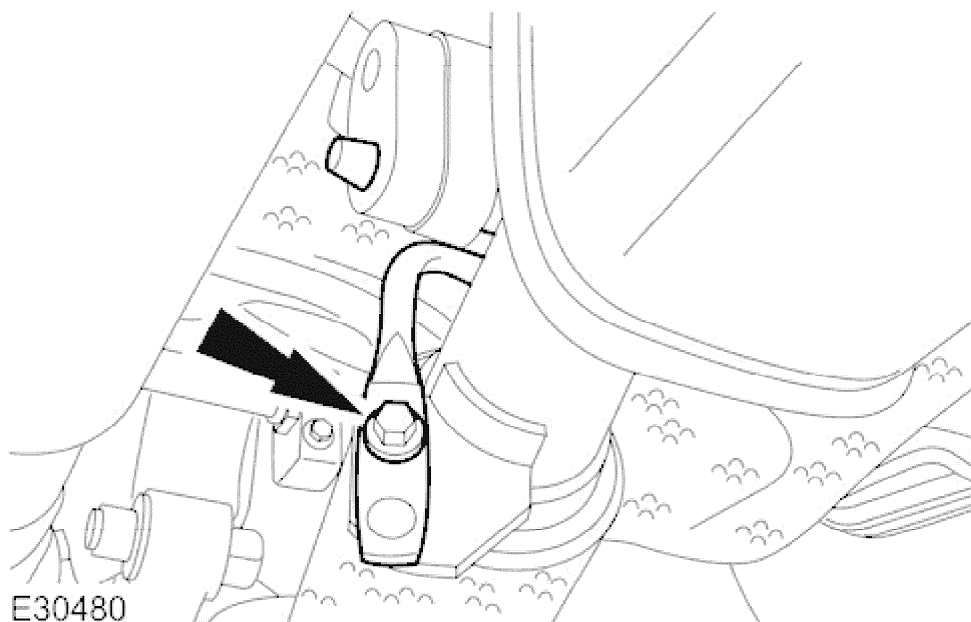


3. Detach the front muffler exhaust hanger isolator bracket.

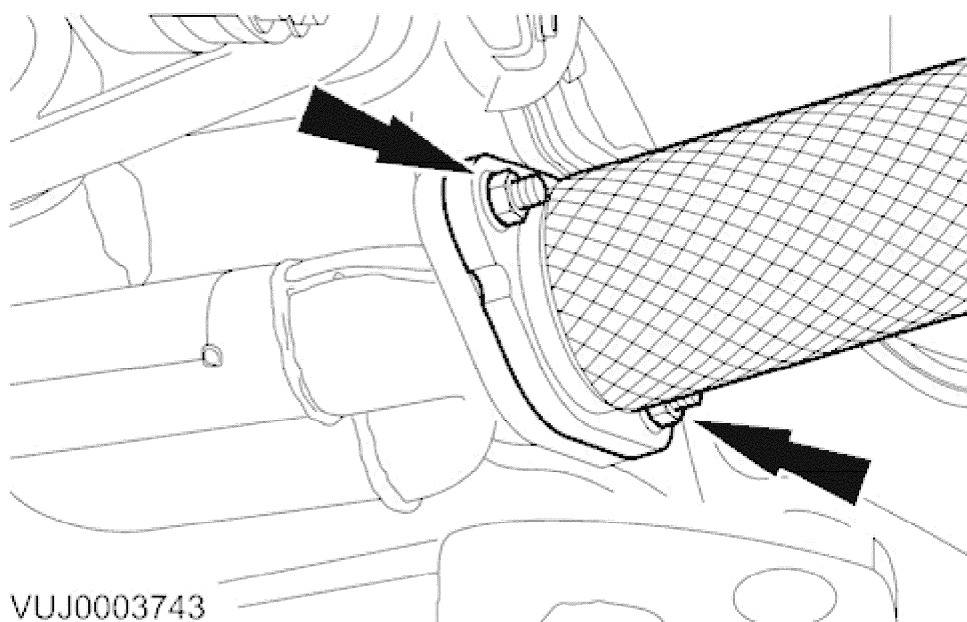


VUJ0003743

4. Remove the front muffler.
 - Remove and discard the gasket.

Installation

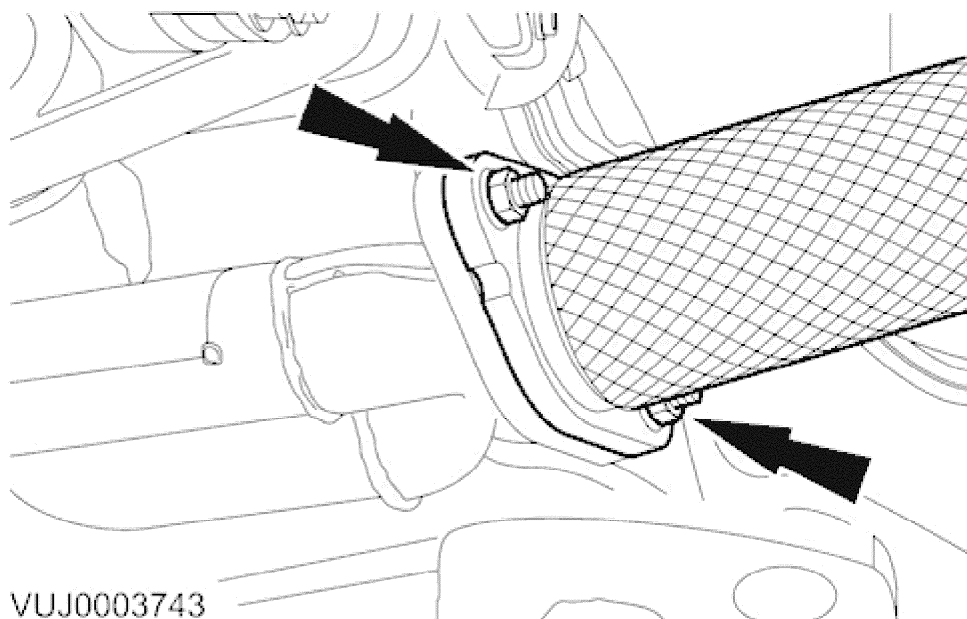

VUJ0003743

1.  **CAUTION:**
The exhaust hanger isolators are constructed of a special material. Use only the correct specification exhaust hanger isolators.

NOTE:

Check the exhaust hanger isolators for damage or fatigue. Install new exhaust hanger isolators if required.

NOTE:

Make sure the front muffler does not foul the underside of the vehicle.


2002 X-TYPE - Exhaust System - 309-00

NOTE:


Install a new gasket.

To install, reverse the removal procedure.

- Tighten to 55 Nm.

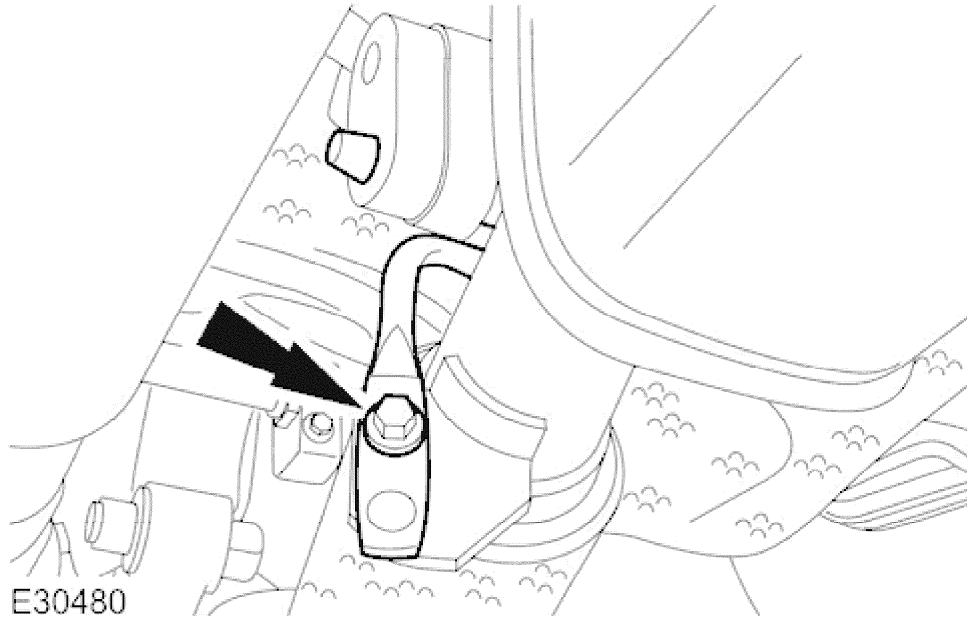

2. Tighten bolt to 25 Nm.

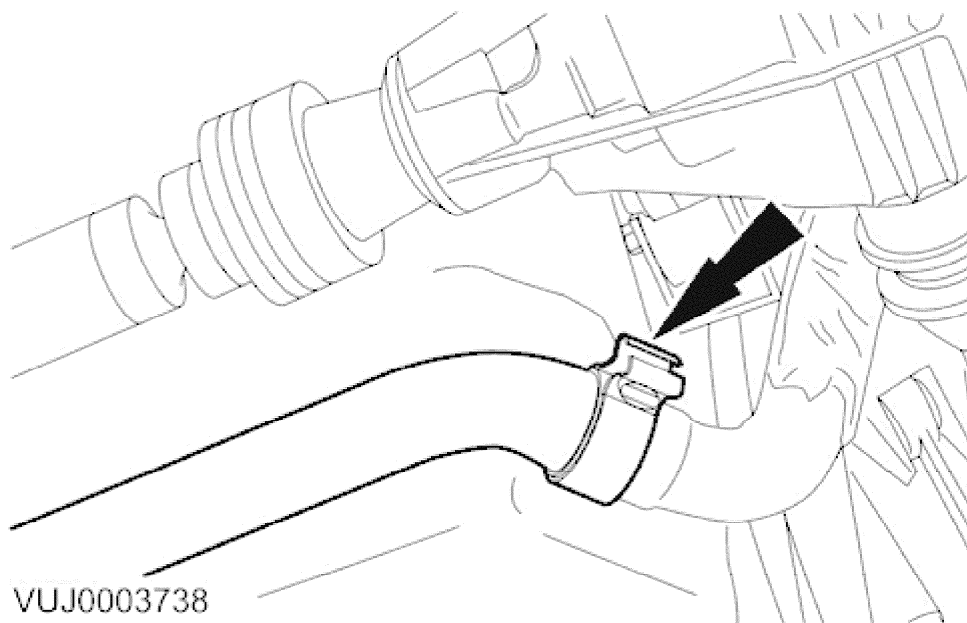

3. Tighten nut to 55 Nm.