


# Audio Unit - Steering Wheel Audio Controls


## Removal and Installation

1. Remove the steering wheel.  
For additional information, refer to: [Steering Wheel](#) (211-04 Steering Column, Removal and Installation).
2. Remove the steering wheel finisher trim panel.

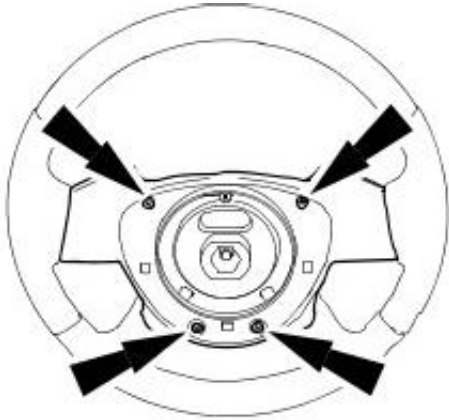


E48616

3. Disconnect the electrical connector.

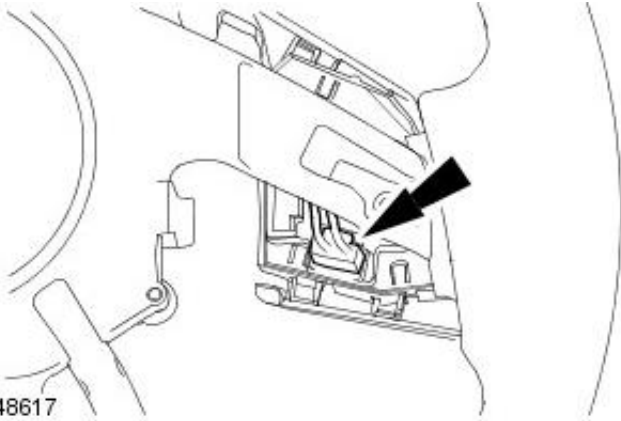

E48617

4. Remove the steering wheel audio controls.

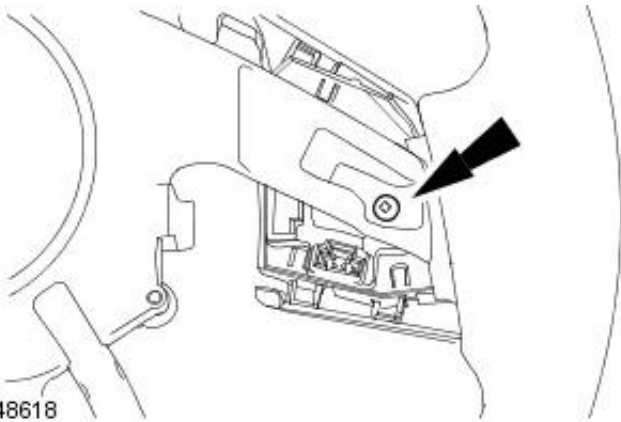

E48618

## Installation

1. To install, reverse the removal procedure.
  - Tighten to 4 Nm.