

**Fig. 08.9**

**COMPONENTS**

Component	Connector(s)	Connector Description	Location
ACCESSORY CONNECTOR - REAR	CA146	3-WAY / BLACK	TRUNK, LH REAR
ACCESSORY CONNECTOR - TRAILER TOWING	T4001	DATA NOT AVAILABLE	
CARAVAN CONNECTOR	T4125	DATA NOT AVAILABLE	
HIGH-MOUNT STOP LAMP - ESTATE (WAGON)	W6B	6-WAY / BLACK	REAR SPOILER
LICENSE PLATE LAMP - LH ESTATE (WAGON)	W19	2-WAY / BLACK	TAIL GATE
LICENSE PLATE LAMP - RH ESTATE (WAGON)	W19	2-WAY / BLACK	TAIL GATE
TAIL LAMP UNIT - LH	CA137	7-WAY / BLACK	TRUNK, LH REAR
TAIL LAMP UNIT - RH	CA138	7-WAY / BLACK	TRUNK, RH REAR
TRAILER TOWING CONNECTOR	T312N	DATA NOT AVAILABLE	
TRAILER TOWING MODULE	TT1	DATA NOT AVAILABLE	
	TT2	DATA NOT AVAILABLE	
	TT3	DATA NOT AVAILABLE	

**HARNES IN-LINE CONNECTORS**

Connector	Connector Description	Location
CA382	2-WAY / BLACK / CABIN HARNES TO TRAILER HARNES	TRUNK / ADJACENT TO LH REAR TAIL LAMP
TT6	DATA NOT AVAILABLE	
TT7	DATA NOT AVAILABLE	
WG1	4-WAY / BLACK / CABIN HARNES TO TAIL GATE GLASS HARNES	ROOF / CENTER REAR
WLJ	5-WAY / BLACK / CABIN HARNES TO TAIL GATE LINK LEAD	ROOF / CENTER REAR
WT3	5-WAY / BLACK / CABIN HARNES TO TAIL GATE HARNES	TAIL GATE

**GROUND**

Ground	Harness	Location
G1	CA	TRUNK / UNDER LH TAIL LAMP UNIT
G2	CA	TRUNK / UNDER LH TAIL LAMP UNIT
G59	CA	REAR / UNDER RH REAR ROOF PANEL

Refer to the front of this book for detailed information and illustrations regarding the location and identification of harnesses, relays, fuses, grounds, control modules and control module pins.

