


Automatic Transmission/Transaxle - Vehicles With: 5-Speed Automatic Transaxle - JATCO - Transmission Fluid Drain and Refill

General Procedures


Drain

1. Raise and support the vehicle. For additional information, refer to For additional information, refer to: [Lifting](#) (100-02 Jacking and Lifting, Description and Operation).

2. Place a suitable container under the transmission drain plug.


3.  **CAUTION:** If the automatic transmission fluid is very dirty or it contains metallic particles, then along with a new transmission, install a new automatic transmission fluid cooler and lines.

Remove the transmission drain plug.

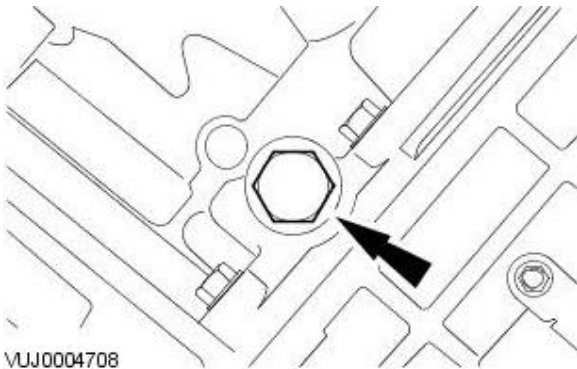

4. Install the transmission drain plug.


- Tighten to 45 Nm.

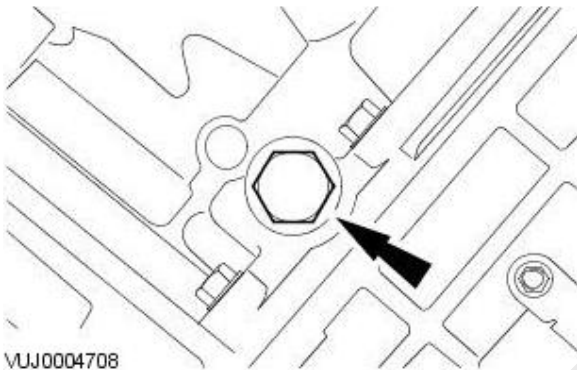

Refill

5. Lower the vehicle.

6. Remove the automatic transmission fluid charging pipe cap.

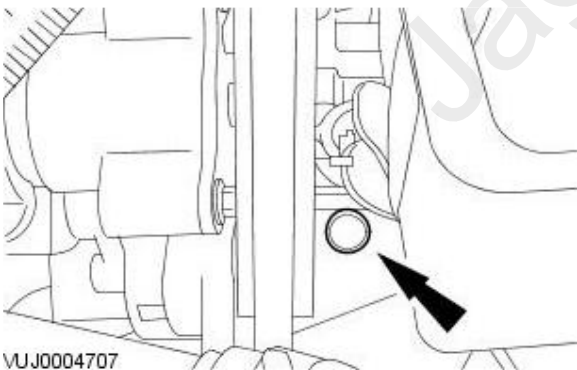

7. **NOTE:** Use automatic transmission fluid WSS-M2C922-A1 or equivalent meeting Jaguar specification.

Fill the automatic transmission with 8 litres of automatic transmission fluid through the automatic transmission fluid charging pipe.



8. Carry out a fluid level check and adjustment. For additional information, refer to

For additional information, refer to: [Transmission Fluid Level Check](#) (307-01B Automatic Transmission/Transaxle - Vehicles With: 6-Speed Automatic Transaxle - AWF21, General Procedures).

Automatic Transmission/Transaxle - Vehicles With: 5-Speed Automatic Transaxle - JATCO - Transmission Fluid Level Check

General Procedures

1. Raise and support the vehicle. For additional information, refer to Section [100-02 Jacking and Lifting](#).
2. Connect the Jaguar Approved Diagnostic System.
3. Make sure J-Gate shift selector is in the Park position (P).
4. With the engine running and the foot brake applied, move the J-Gate shift selector through "P-R-N-D-4-3-2" and back to the "P" position to circulate the automatic transmission fluid until the temperature reaches 30 to 40°C (86 to 104°F) on the Jaguar Approved Diagnostic System.
5. When the automatic transmission fluid temperature reaches 35°C (95°F) check that the selector lever is in the "P" position raise the vehicle.
6. With the engine running, remove the automatic transmission fluid level tube plug.
 - Remove and discard the level plug and sealing washer.

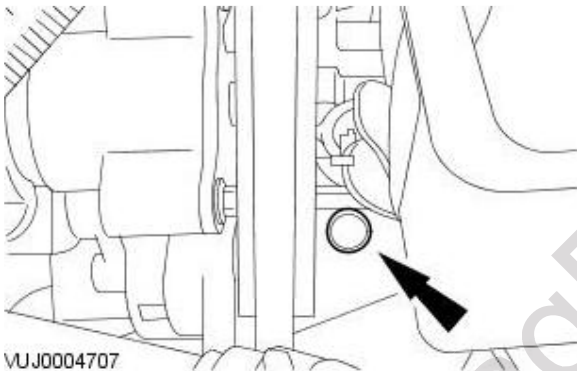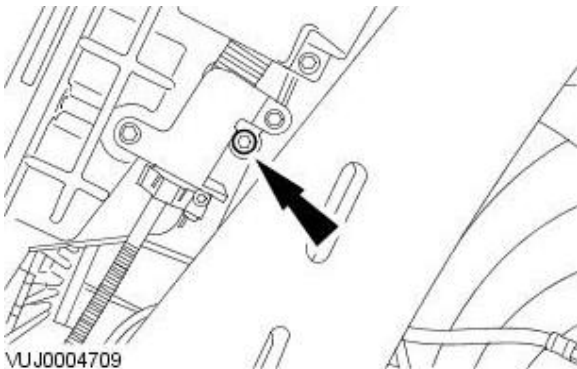

7. **NOTE:** Use automatic transmission fluid WSS-M2C922-A1 or equivalent meeting Jaguar specification.


If the automatic transmission fluid does not come out of the transmission fluid level tube the automatic transmission fluid level is insufficient. If this is the case add the automatic transmission fluid in 0.5 litre units into the automatic transmission fluid charging pipe until the automatic transmission fluid comes out of the automatic transmission fluid level tube.

- Remove the automatic transmission fluid charging pipe cap.


8. **NOTE:** Make sure the automatic transmission fluid temperature does not exceed 40°C (104°F). If the automatic transmission fluid temperature does exceed 40°C (104°F) stop the automatic transmission fluid level check and allow the automatic transmission fluid to cool until the temperature reaches 30 to 40°C (86 to 104°F).

Allow the automatic transmission fluid to come out of the automatic transmission fluid level tube until the overflow stops at a temperature of no more than 40°C (104°F).

9. If when the automatic transmission fluid level plug is first removed and automatic transmission fluid comes out of the automatic transmission fluid level tube, allow the automatic transmission fluid to come out of the automatic transmission fluid level tube until the overflow stops at a temperature of no more than 40°C (104°F).
10. Install the transmission fluid level plug.
 - Install a new level plug and sealing washer.
 - Tighten to 15 Nm.

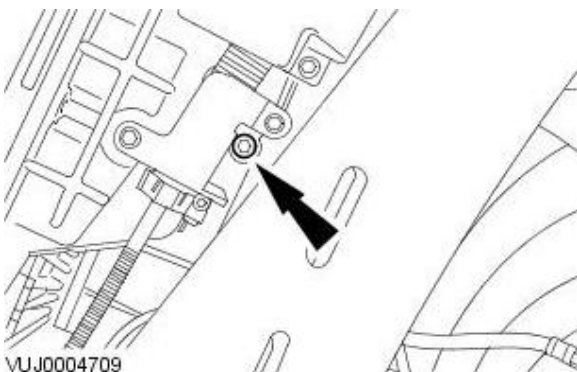

11. Install the automatic transmission fluid charging pipe cap.

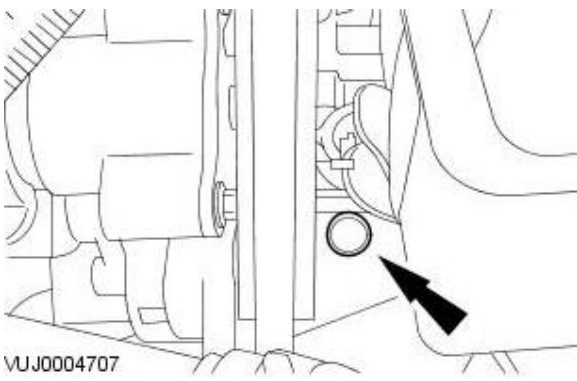

VUJ0004707

12. Lower the vehicle.

13. Disconnect the Jaguar Approved Diagnostic System.

JagDocs.com