


## Headliner 76.64.01


### Removal

1. Remove the sun visors. For additional information, refer to <<Sun Visor>>.

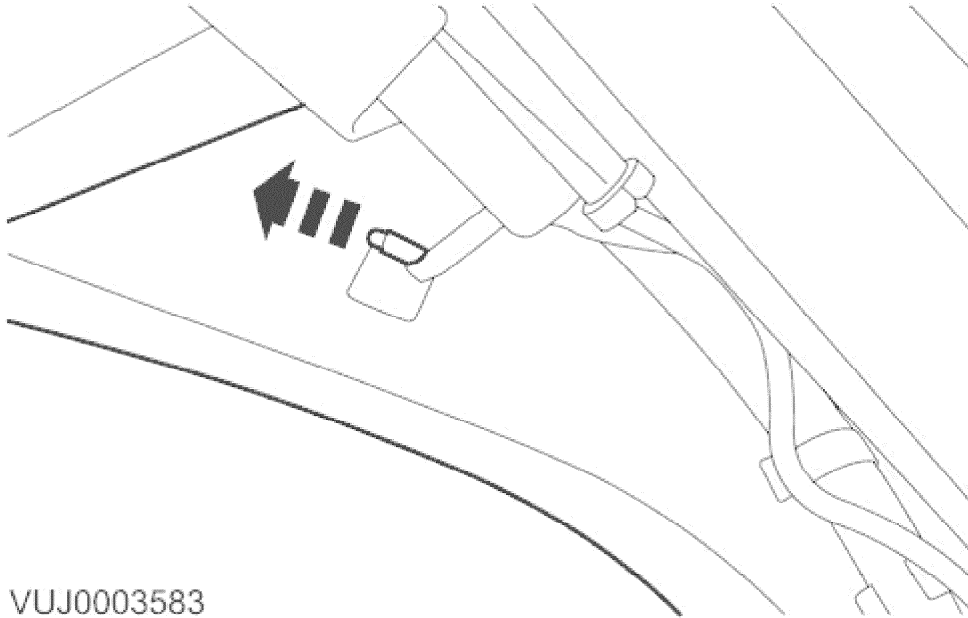


VUJ0003583

2. Remove the C-pillar trim panels.

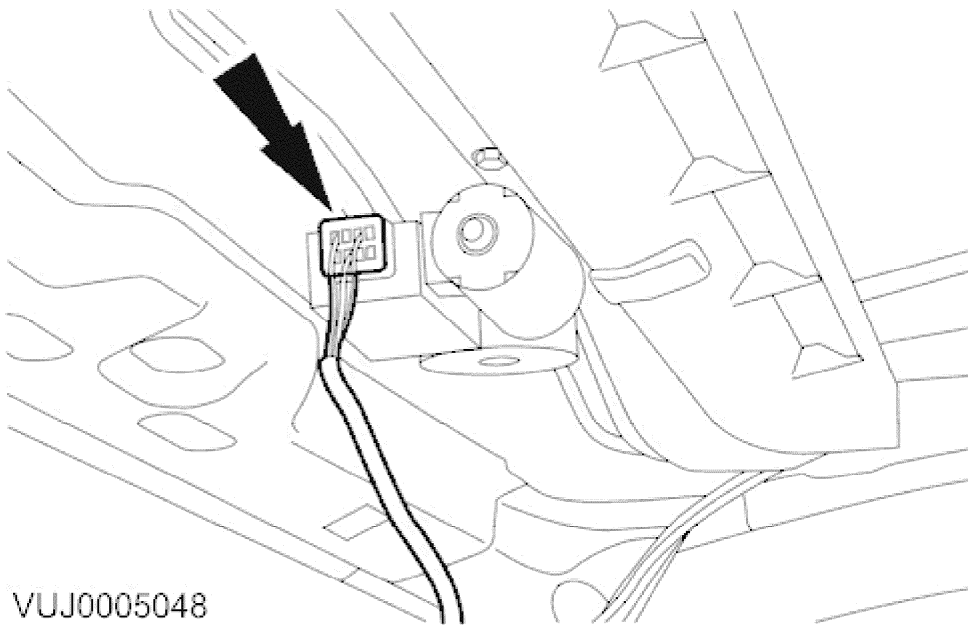


VUJ0005048

3. Disconnect the sunroof motor electrical connector.

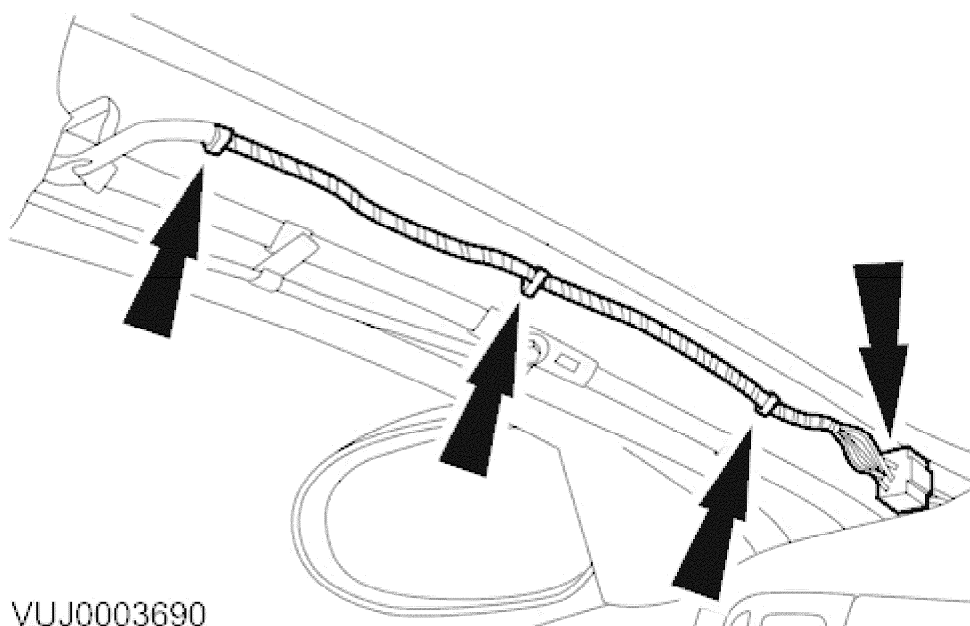

VUJ0003690

4. Disconnect the left-hand electrical connector and detach the wiring harness.

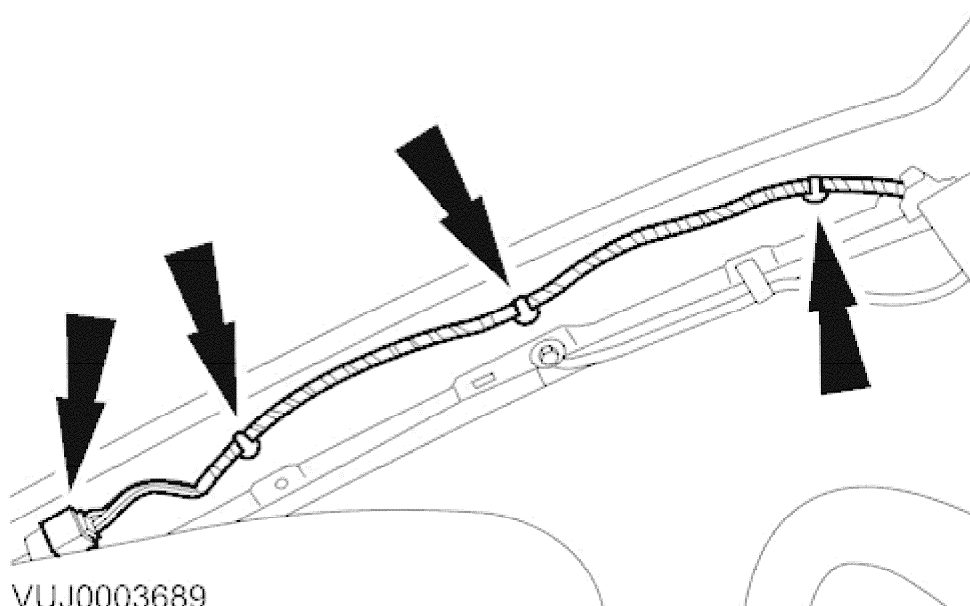


VUJ0003689

5. Disconnect the right-hand electrical connector and detach the wiring harness.

6. Remove the RH lower B-pillar trim panel. For additional information, refer to <<**B-Pillar Trim Panel—Lower**>>.

7. Remove the rear seat cushion. For additional information, refer to <<**501-10**>>.

8. Recline both the front seat backrests to allow removal of the headliner through the rear door opening.

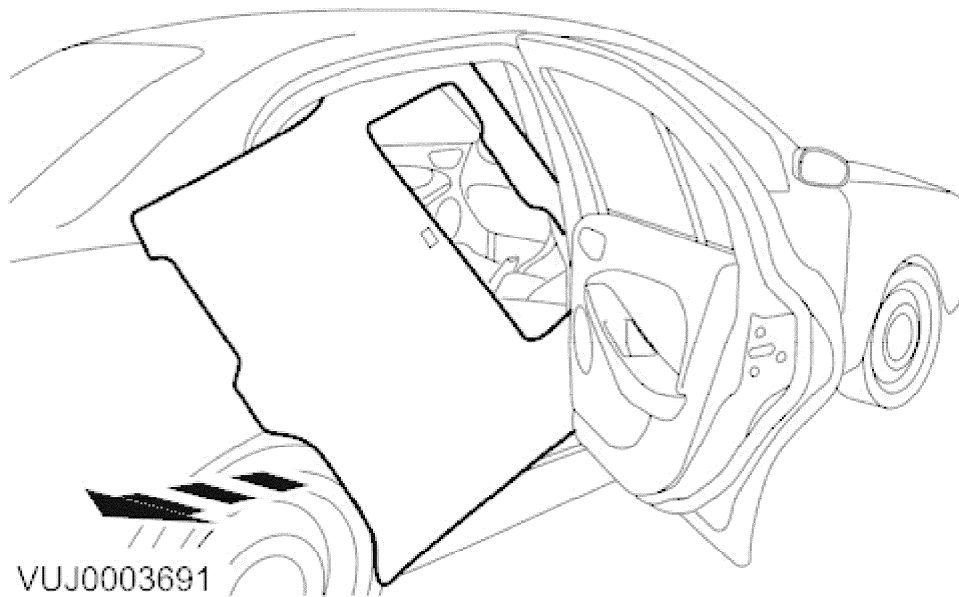

9. Remove the headliner.

**Installation**

1. To install, reverse the removal procedure.