

DYNAMIC STABILITY CONTROL (DSC) (AMBER)



Flashes when DSC is active.

If there is a fault, this warning lamp will illuminate in the instrument panel and the Message center will display **DSC NOT AVAILABLE**.

The vehicle can still be driven, but the DSC system will not activate under wheel spin or slide conditions. Seek qualified assistance as soon as possible.

DYNAMIC STABILITY CONTROL (DSC) OFF (AMBER)



Illuminates when DSC is switched off. A chime will also sound and the message DSC OFF is displayed in the Message center.

If Trac DSC is selected, the warning lamp will also illuminate and the message **TRAC DSC** is displayed for 4 seconds.

REAR FOG LAMP (AMBER)



Illuminates when the rear fog lamps are switched on.

ADAPTIVE CRUISE CONTROL (AMBER)



Illuminates when Adaptive Cruise Control (ACC) is active, to indicate that the vehicle is in follow mode.

FORWARD ALERT (AMBER)



Illuminates when Forward alert is active.

AIR BAG (AMBER)



Flashes and then illuminates constantly if the air bag system develops a fault. Seek qualified assistance as soon as possible.

AUTOMATIC SPEED LIMITER (AMBER)



Illuminates when the Automatic Speed Limiter (ASL) is active.

ADAPTIVE FRONT LIGHTING SYSTEM (AMBER)



Illuminates when there is a system fault. The headlamps will still operate, but without this feature operating correctly. Seek qualified assistance as soon as possible.

TIRE PRESSURE MONITORING SYSTEM (YELLOW)



Illuminates when 1 or more tires are significantly under-inflated. The vehicle should be stopped as soon as safely possible and the tires checked and inflated to the recommended pressure.

HIGH BEAM (BLUE)



Illuminates when the high beam headlamps are switched on or flashed.

HIGH BEAM ASSIST (GREEN)



Illuminates when the auto high beam feature has switched on the high beams.