

Information and Entertainment System - Digital Audio Module

Removal and Installation

Removal

NOTES:




Removal steps in this procedure may contain installation details.



Some variation in the illustrations may occur, but the essential information is always correct.


1. Refer to: [Loadspace Trim Panel LH](#) (501-05 Interior Trim and Ornamentation, Removal and Installation).

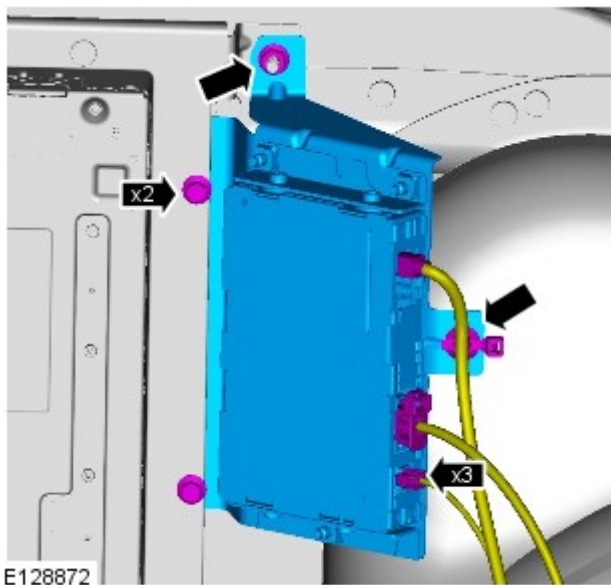

2. Torque: 10 Nm

3.  NOTE: Do not disassemble further if the component is removed for access only.

Torque: 10 Nm

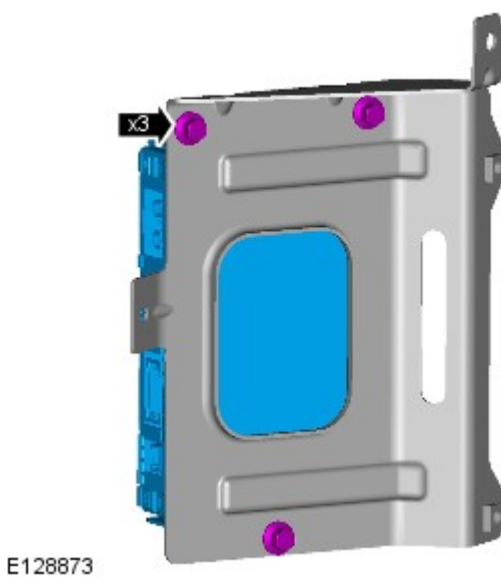

Installation

1. To install, reverse the removal procedure.

