

Information and Entertainment System - Satellite Radio Tuner

Removal and Installation

Removal

NOTES:




Removal steps in this procedure may contain installation details.




 
Some variation in the illustrations may occur, but the essential information is always correct.

1. Refer to: [Loadspace Trim Panel LH](#) (501-05 Interior Trim and Ornamentation, Removal and Installation).

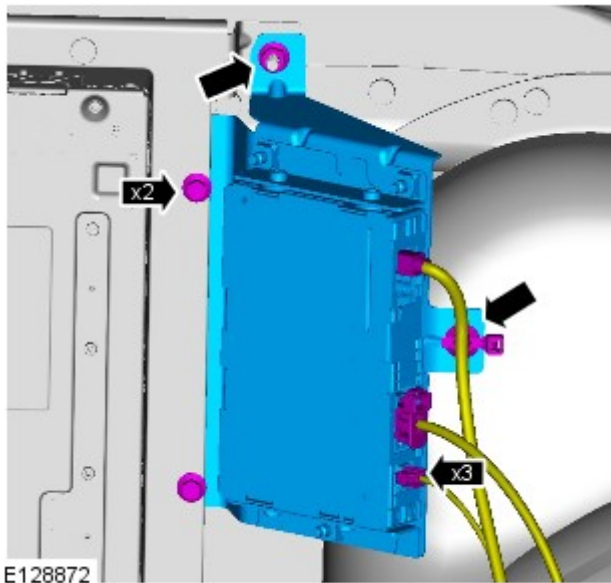

2. Torque: 10 Nm

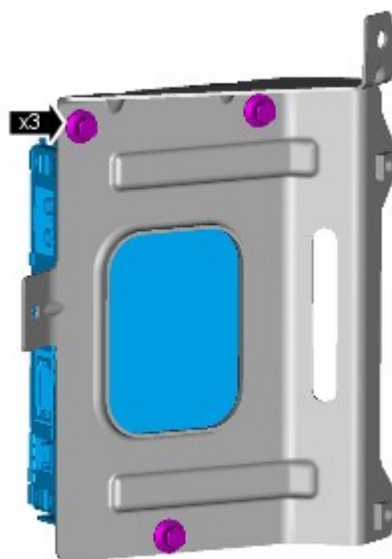

3.  NOTE: Do not disassemble further if the component is removed for access only.

Torque: 10 Nm

Installation

1.



NOTE: If a new component is installed, a link lead must be installed to the module in the position shown.



E139902

2. To install, reverse the removal procedure.