

## Parking Aid - Parking Aid Module

Removal and Installation

### Removal

#### NOTES:



Removal steps in this procedure may contain installation details.





LHD illustration shown, RHD is similar.

1. Refer to: [Battery Disconnect and Connect](#) (414-01 Battery, Mounting and Cables, General Procedures).

 
2. Refer to: [Cowl Side Trim Panel](#) (501-05 Interior Trim and Ornamentation, Removal and Installation).

3. Torque: 5 Nm

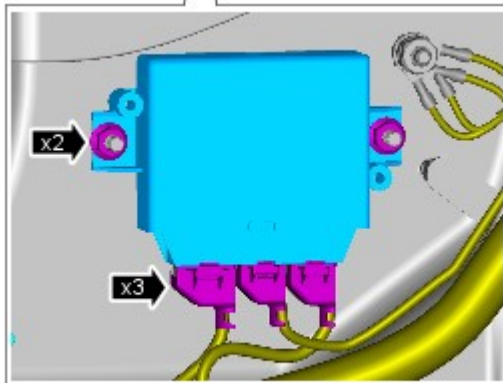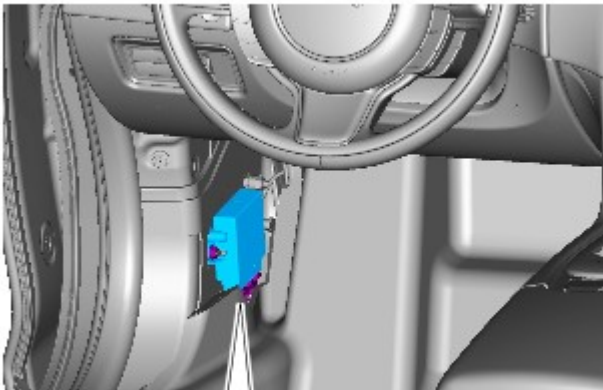

E127415

### Installation

1.  NOTE: New units must be configured using the Programmable Module Installation Routine in the diagnostic tool.

To install, reverse the removal procedure.