



Interior Trim and Ornamentation - Cowl Side Trim Panel


Removal and Installation

Removal


1. Refer to: [Front Scuff Plate Trim Panel](#) (501-05 Interior Trim and Ornamentation, Removal and Installation).

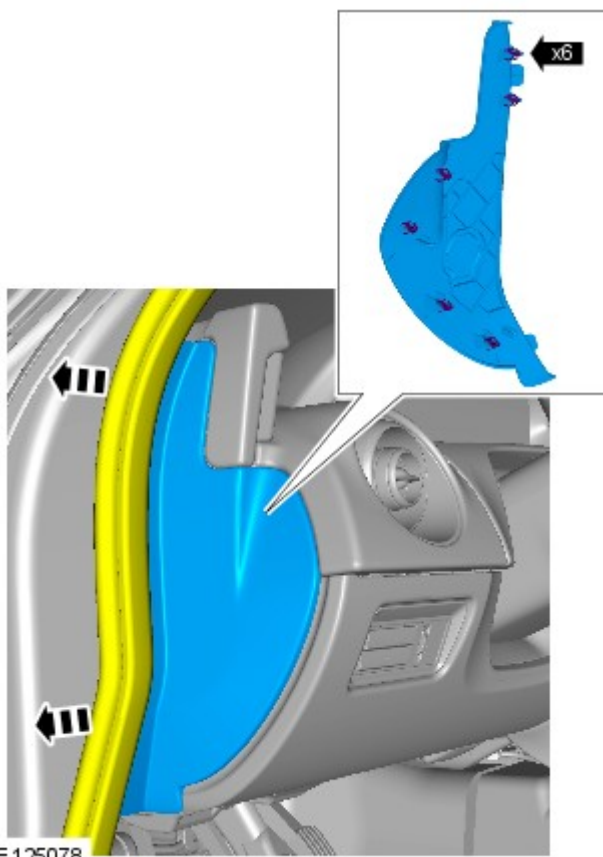


2.  NOTE: Left-hand shown, right-hand similar.

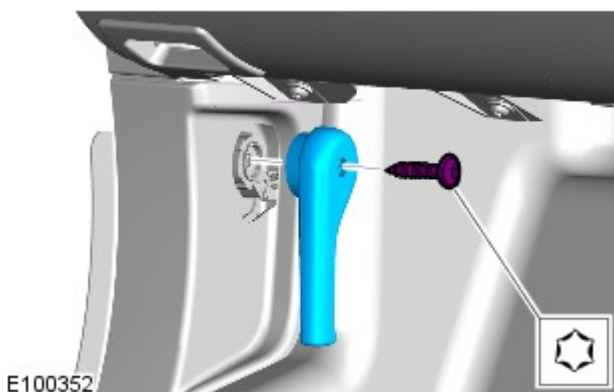

3. Torque: 3 Nm

4.  CAUTION: Make sure that the component is correctly located on the locating pegs.

-  NOTE: Left-hand shown, right-hand similar.

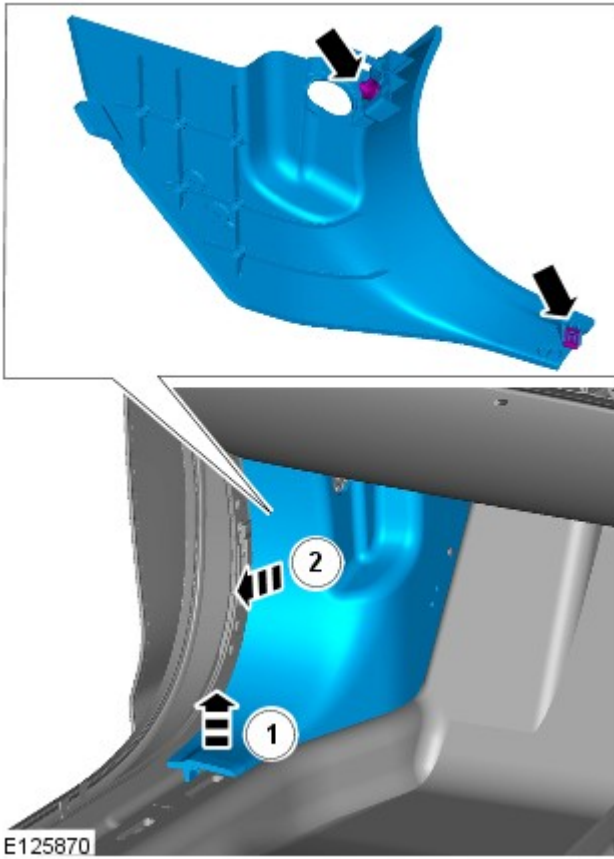

Installation

1. To install, reverse the removal procedure.