## Published: 22-Apr-2012 Seating - Rear Seat Backrest Removal and Installation


# Removal

 $\Delta$ NOTE: Removal steps in this procedure may contain installation details.


All vehicles


1.

2.

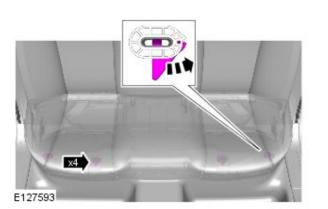


E127594

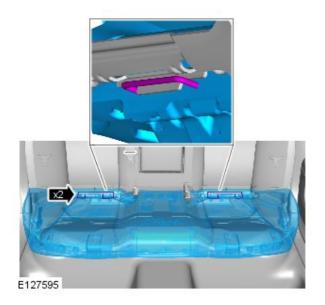

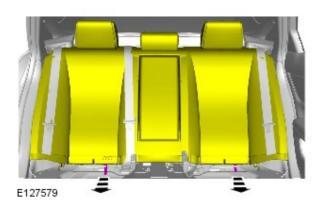

Vehicles with rear passenger entertainment system

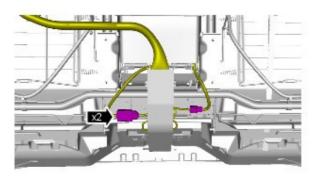

E127581


5.

4.

All vehicles







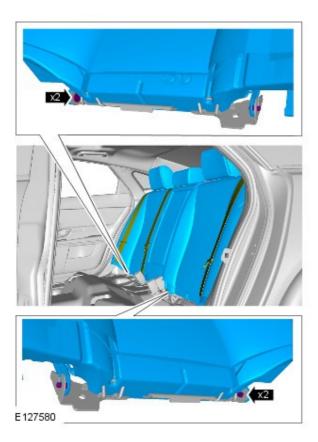


8.

7.

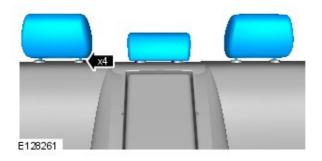

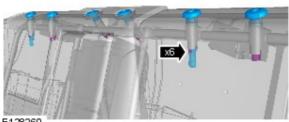


E128260

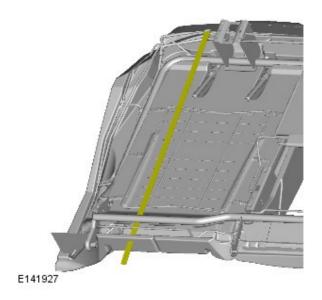







12.

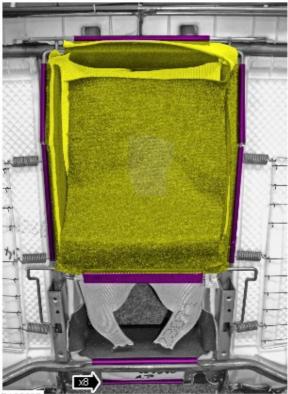

E128265



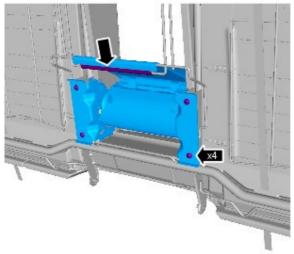

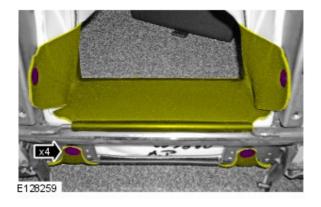

14. *Torque:* <u>8 Nm</u>

15.


17.





18.



Vehicles with heated rear seat

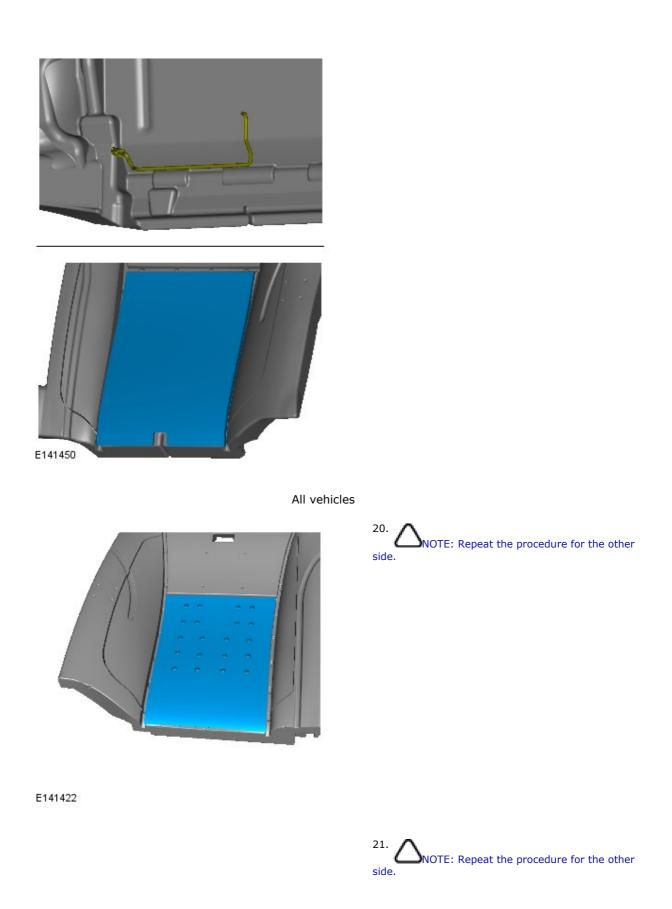


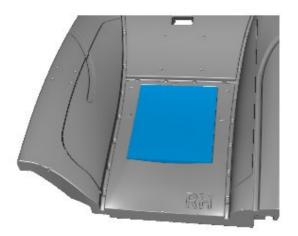

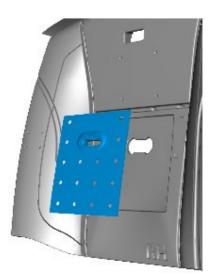

# E141451

# Installation

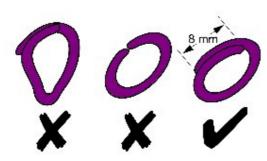

V4001063

1. NOTES:

22.

side.

Make sure that new hog rings are installed.


NOTE: Repeat the procedure for the other

Use hog ring pliers to close the hog rings. Do not use any other tool. The hog rings must be closed to overlap as illustrated.

2. NOTES:

 $\Delta$ Make sure that the hogrings are installed in the sequence shown.



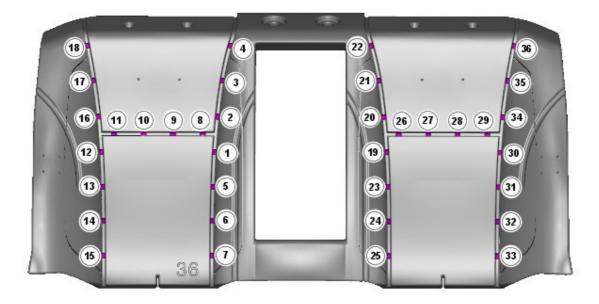



3. ANOTE: Make sure that all the clips are correctly installed.

4. To install, reverse the removal procedure.