


Exterior Lighting - Exterior Lighting - Component Location

Description and Operation

COMPONENT LOCATION

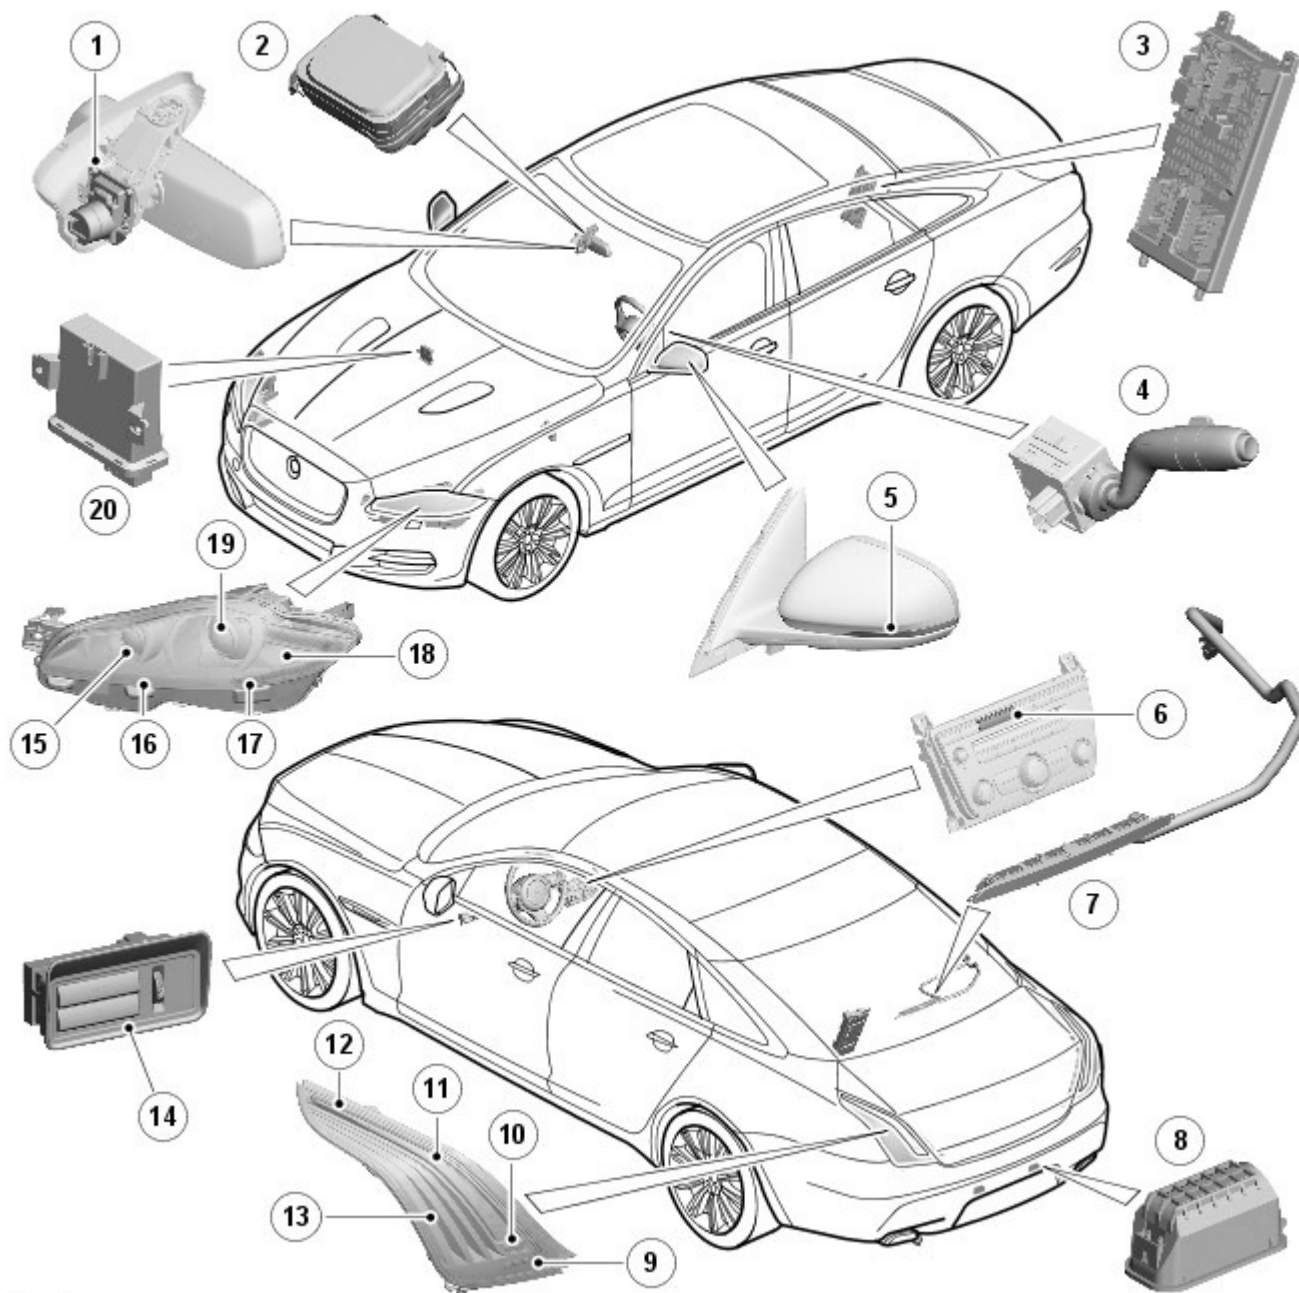

E126901

Item	Description
1	Auto High Beam control module (inside mirror body)
2	Rain/light sensor
3	Central Junction Box (CJB)
4	Lighting control switch - LH (left-hand) steering column multifunction switch
5	Side repeater lamp (2 off)
6	Hazard warning lamp switch
7	High mounted stop lamp
8	License plate lamp (2 off)
9	Rear fog lamp LED's
10	Reverse lamp LED's
11	Rear turn signal indicator LED's