


CONNECTOR QUICK REFERENCE GUIDE

Document Objective: To provide basic connector location information only, including in-lines and grounds.

All paper copies are uncontrolled.

For detailed connector information refer to the Electrical Reference Library (ERL).


Note: For improved clarity some harnesses have been omitted completely e.g. engines, seats, bumpers, steering, climate control and some link leads.

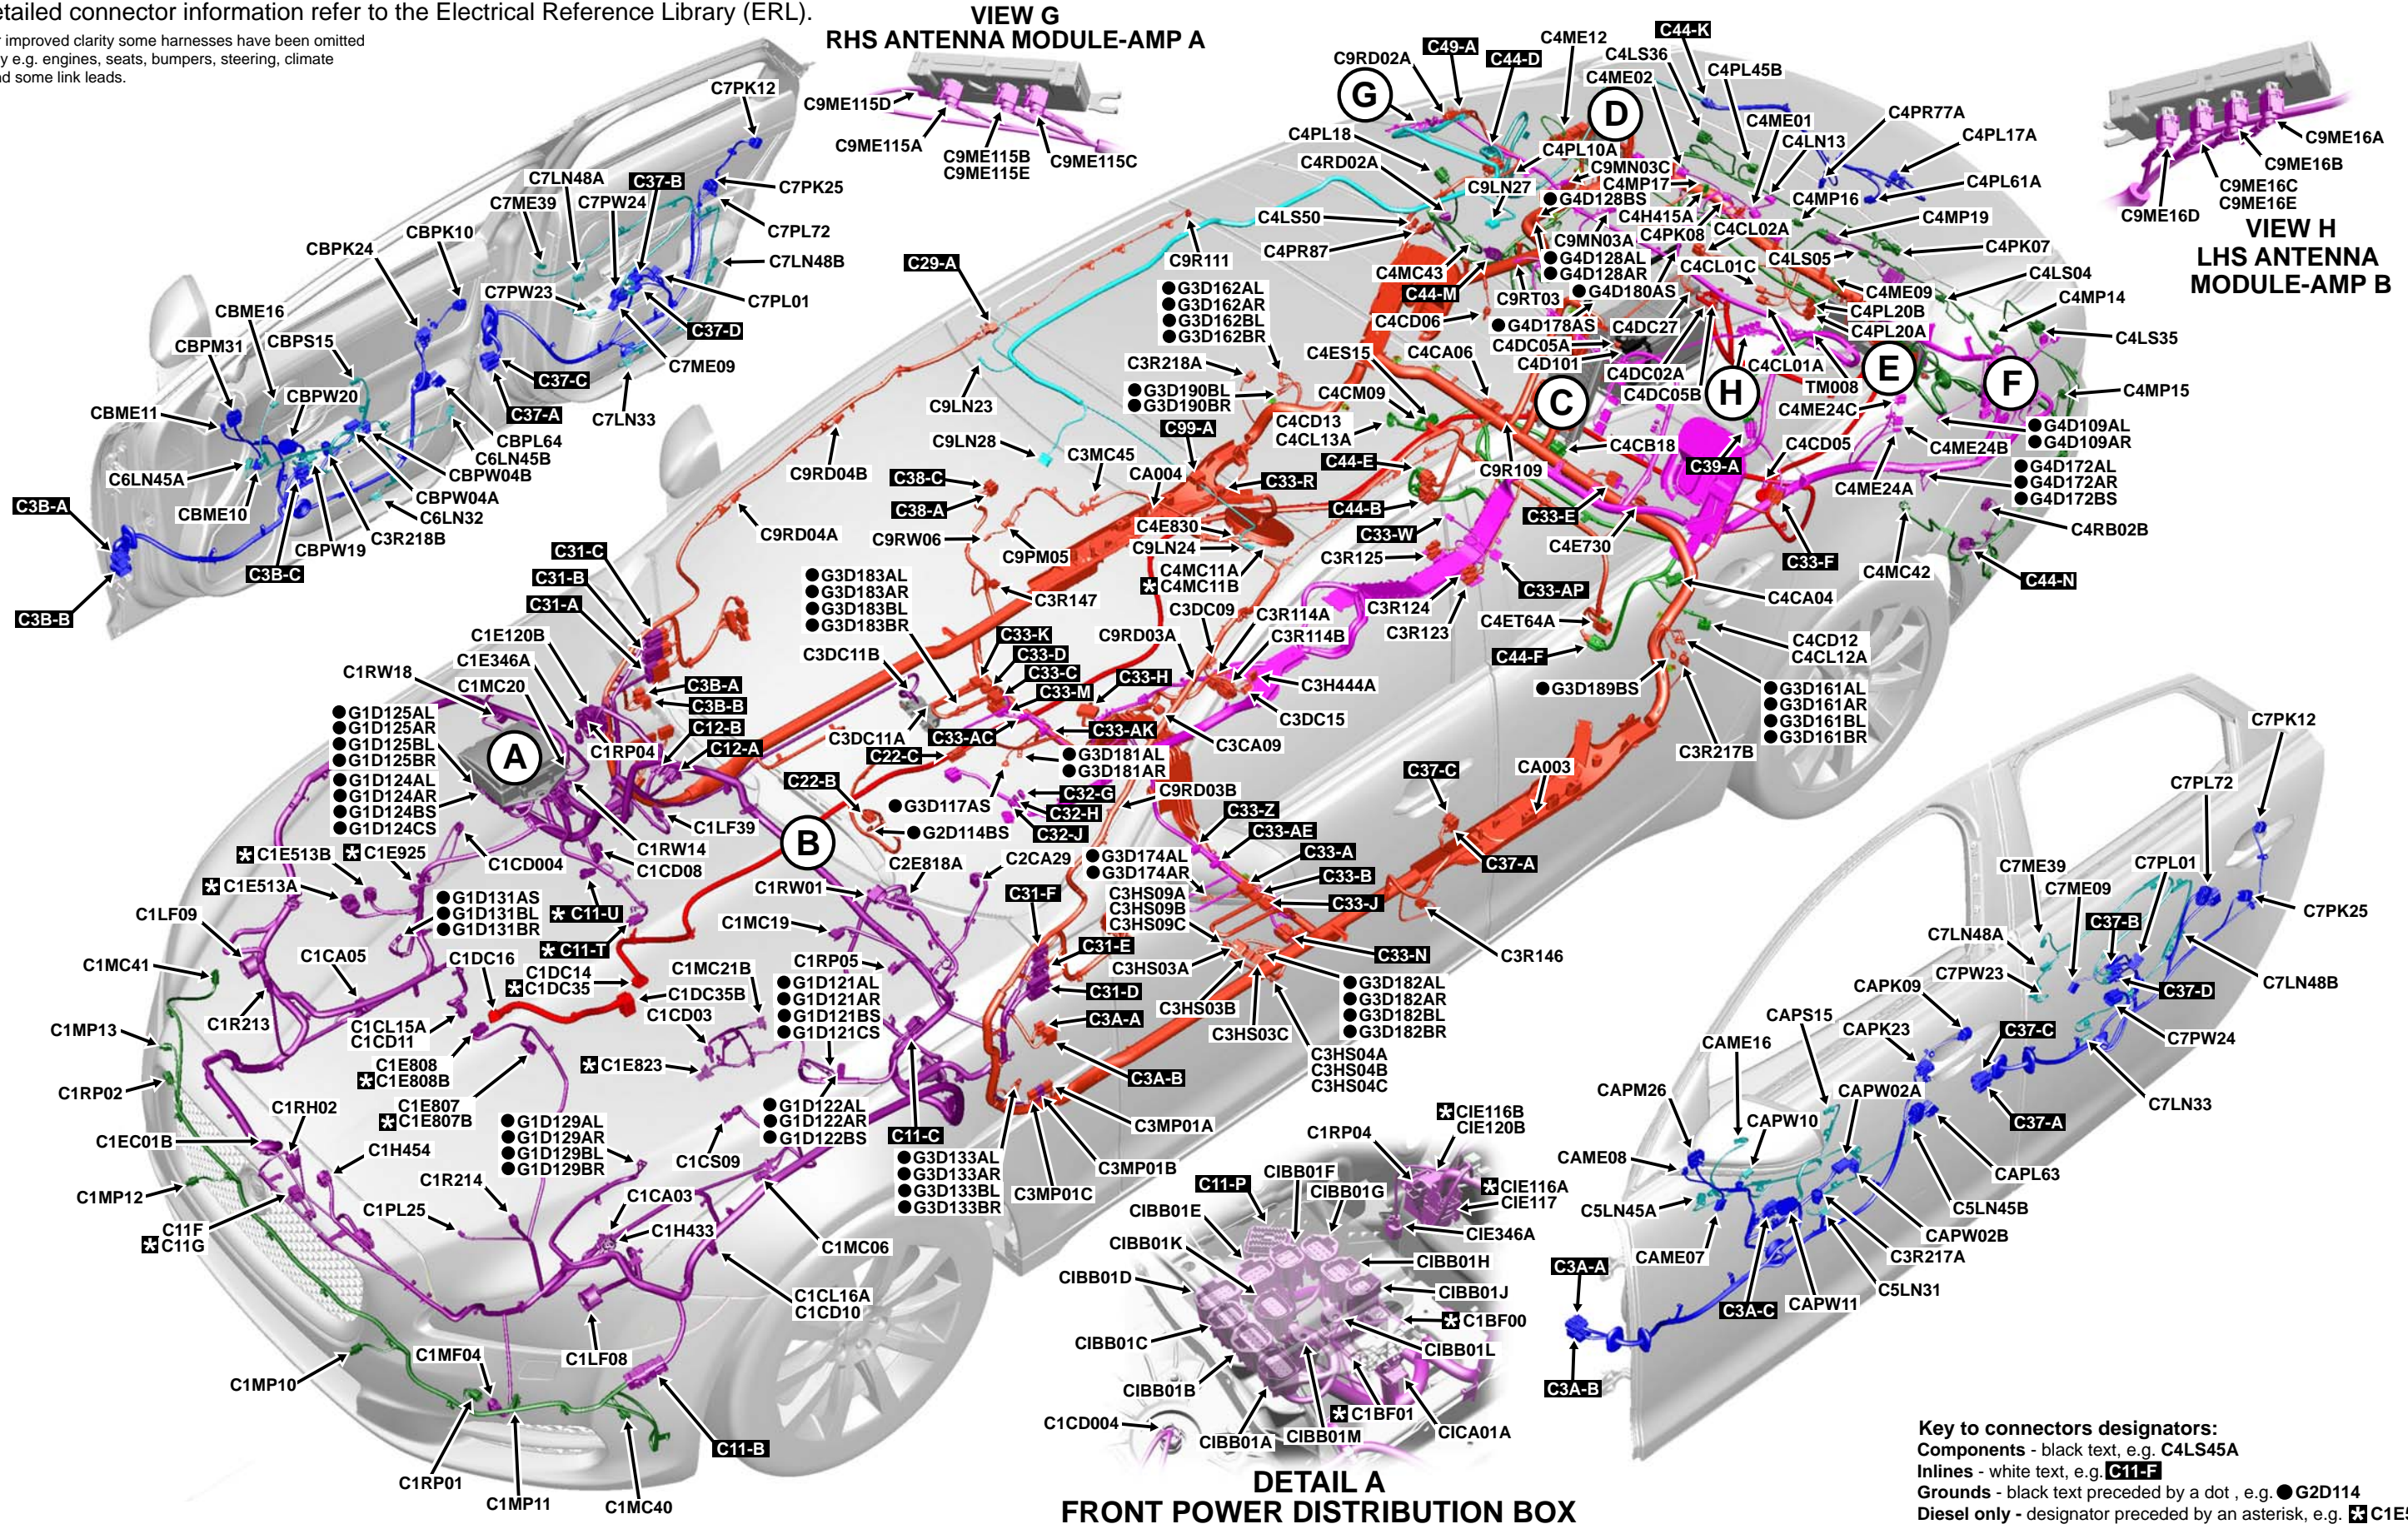


CONNECTOR QUICK REFERENCE GUIDE

All paper copies are uncontrolled.


DETAIL B IP AND CENTRE CONSOLE

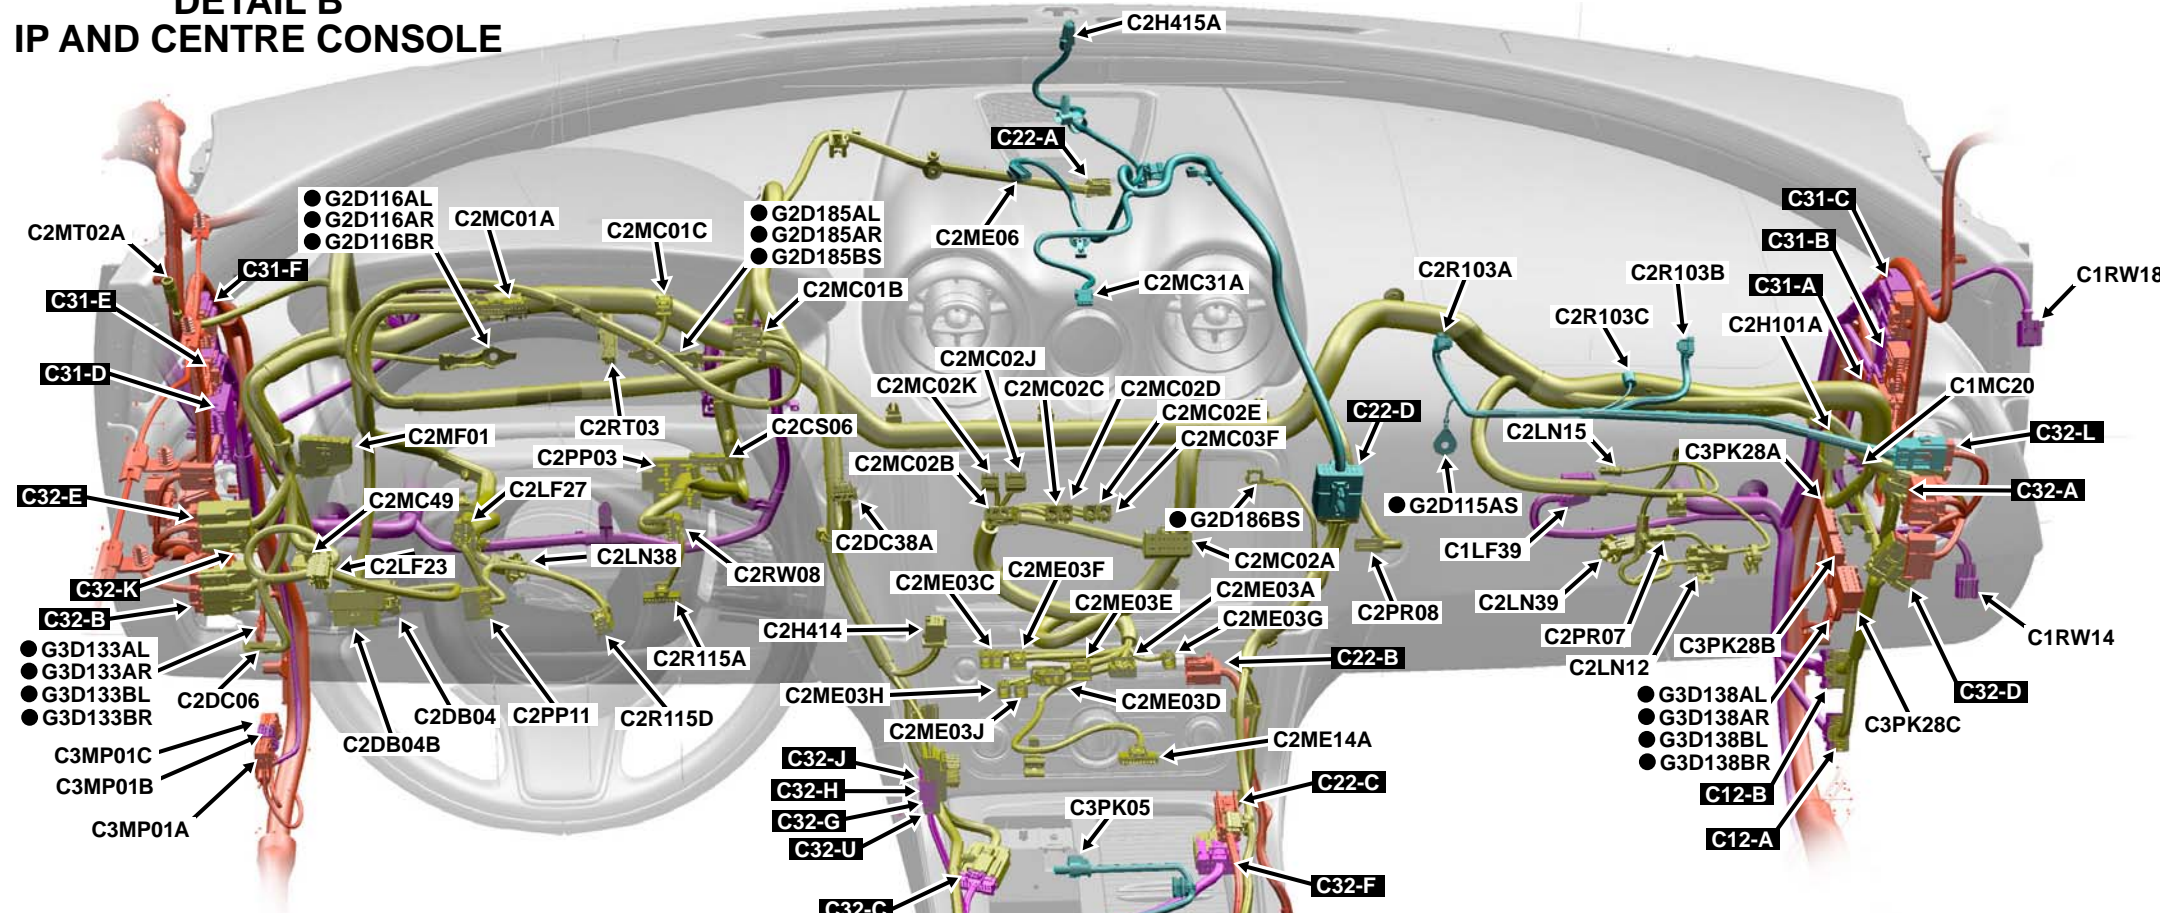


DETAIL D REAR RH QUARTER

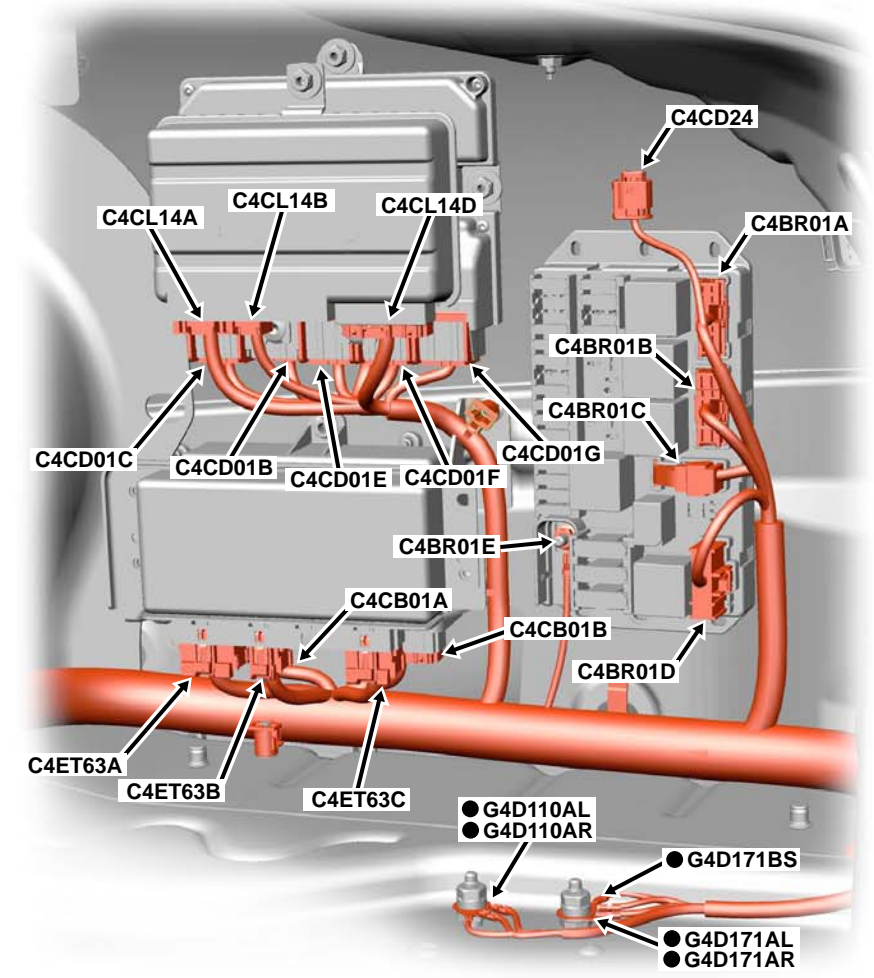

DETAIL F REAR LH QUARTER

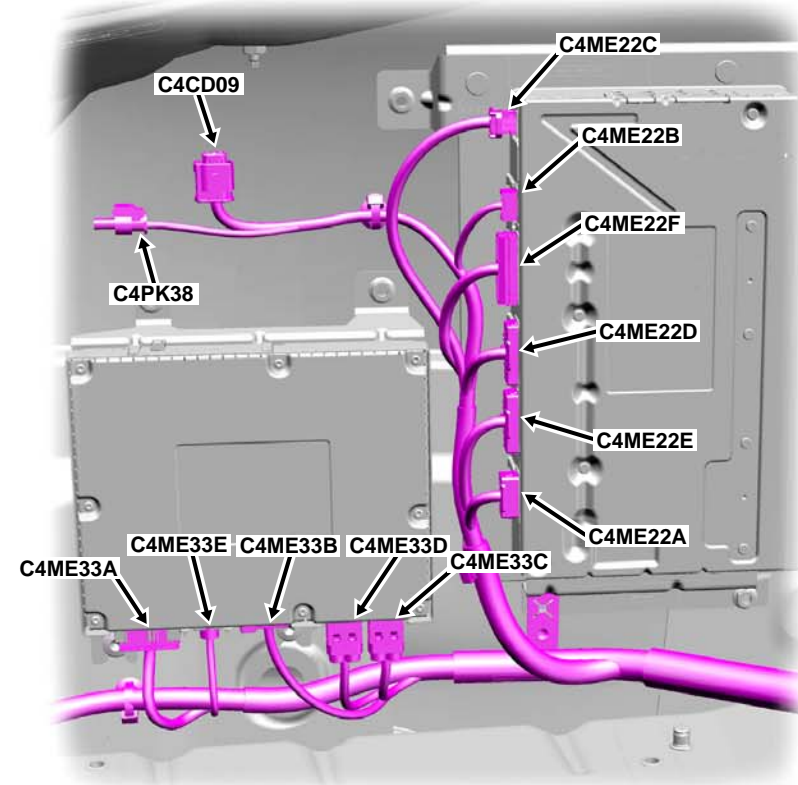

DETAIL C BEHIND REAR SEATS AREA

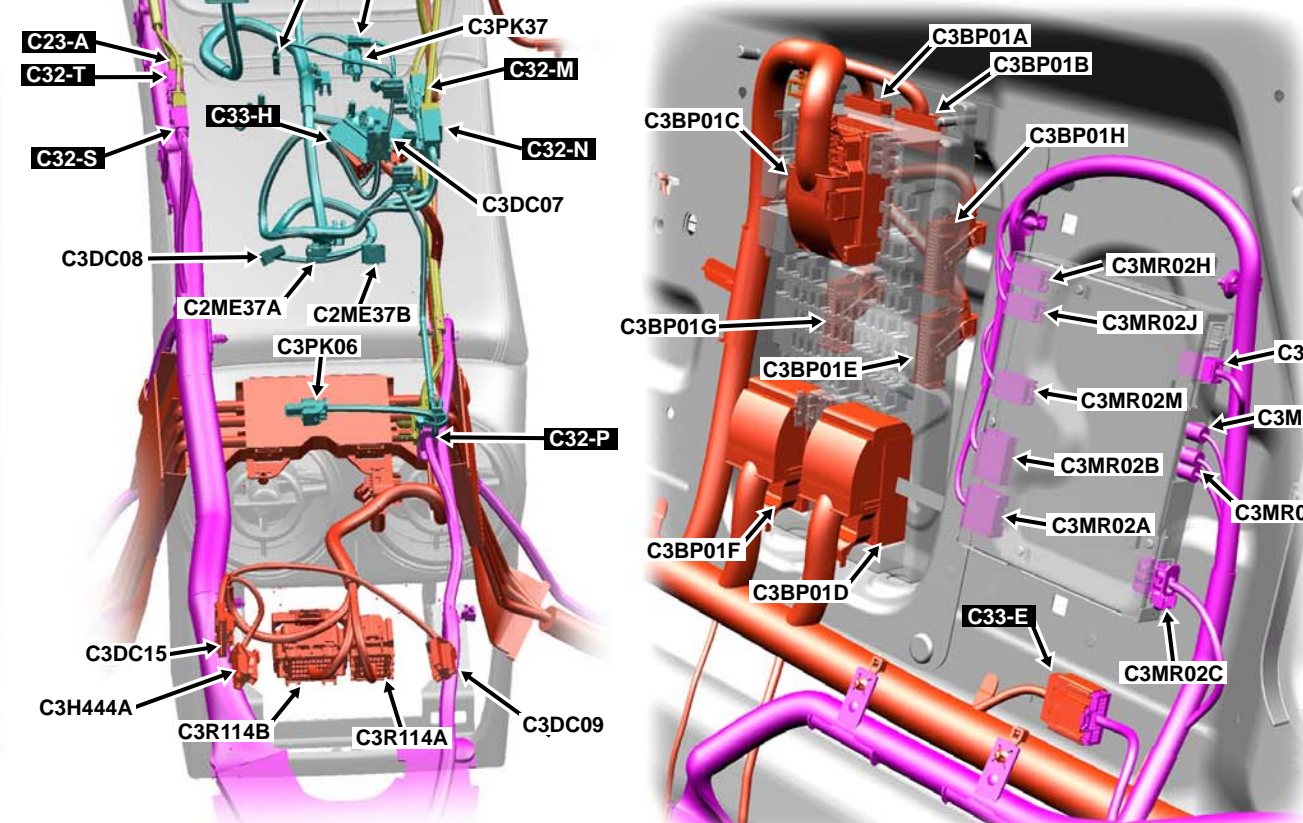

DETAIL E REAR OF LUGGAGE COMPARTMENT

