


CONNECTOR QUICK REFERENCE GUIDE

Document Objective: To provide basic connector location information only, including in-lines and grounds.

All paper copies are uncontrolled.

For detailed connector information refer to the Electrical Reference Library (ERL).

Note: For improved clarity some harnesses have been omitted completely e.g. engines, seats, bumpers, steering, climate control and some link leads.

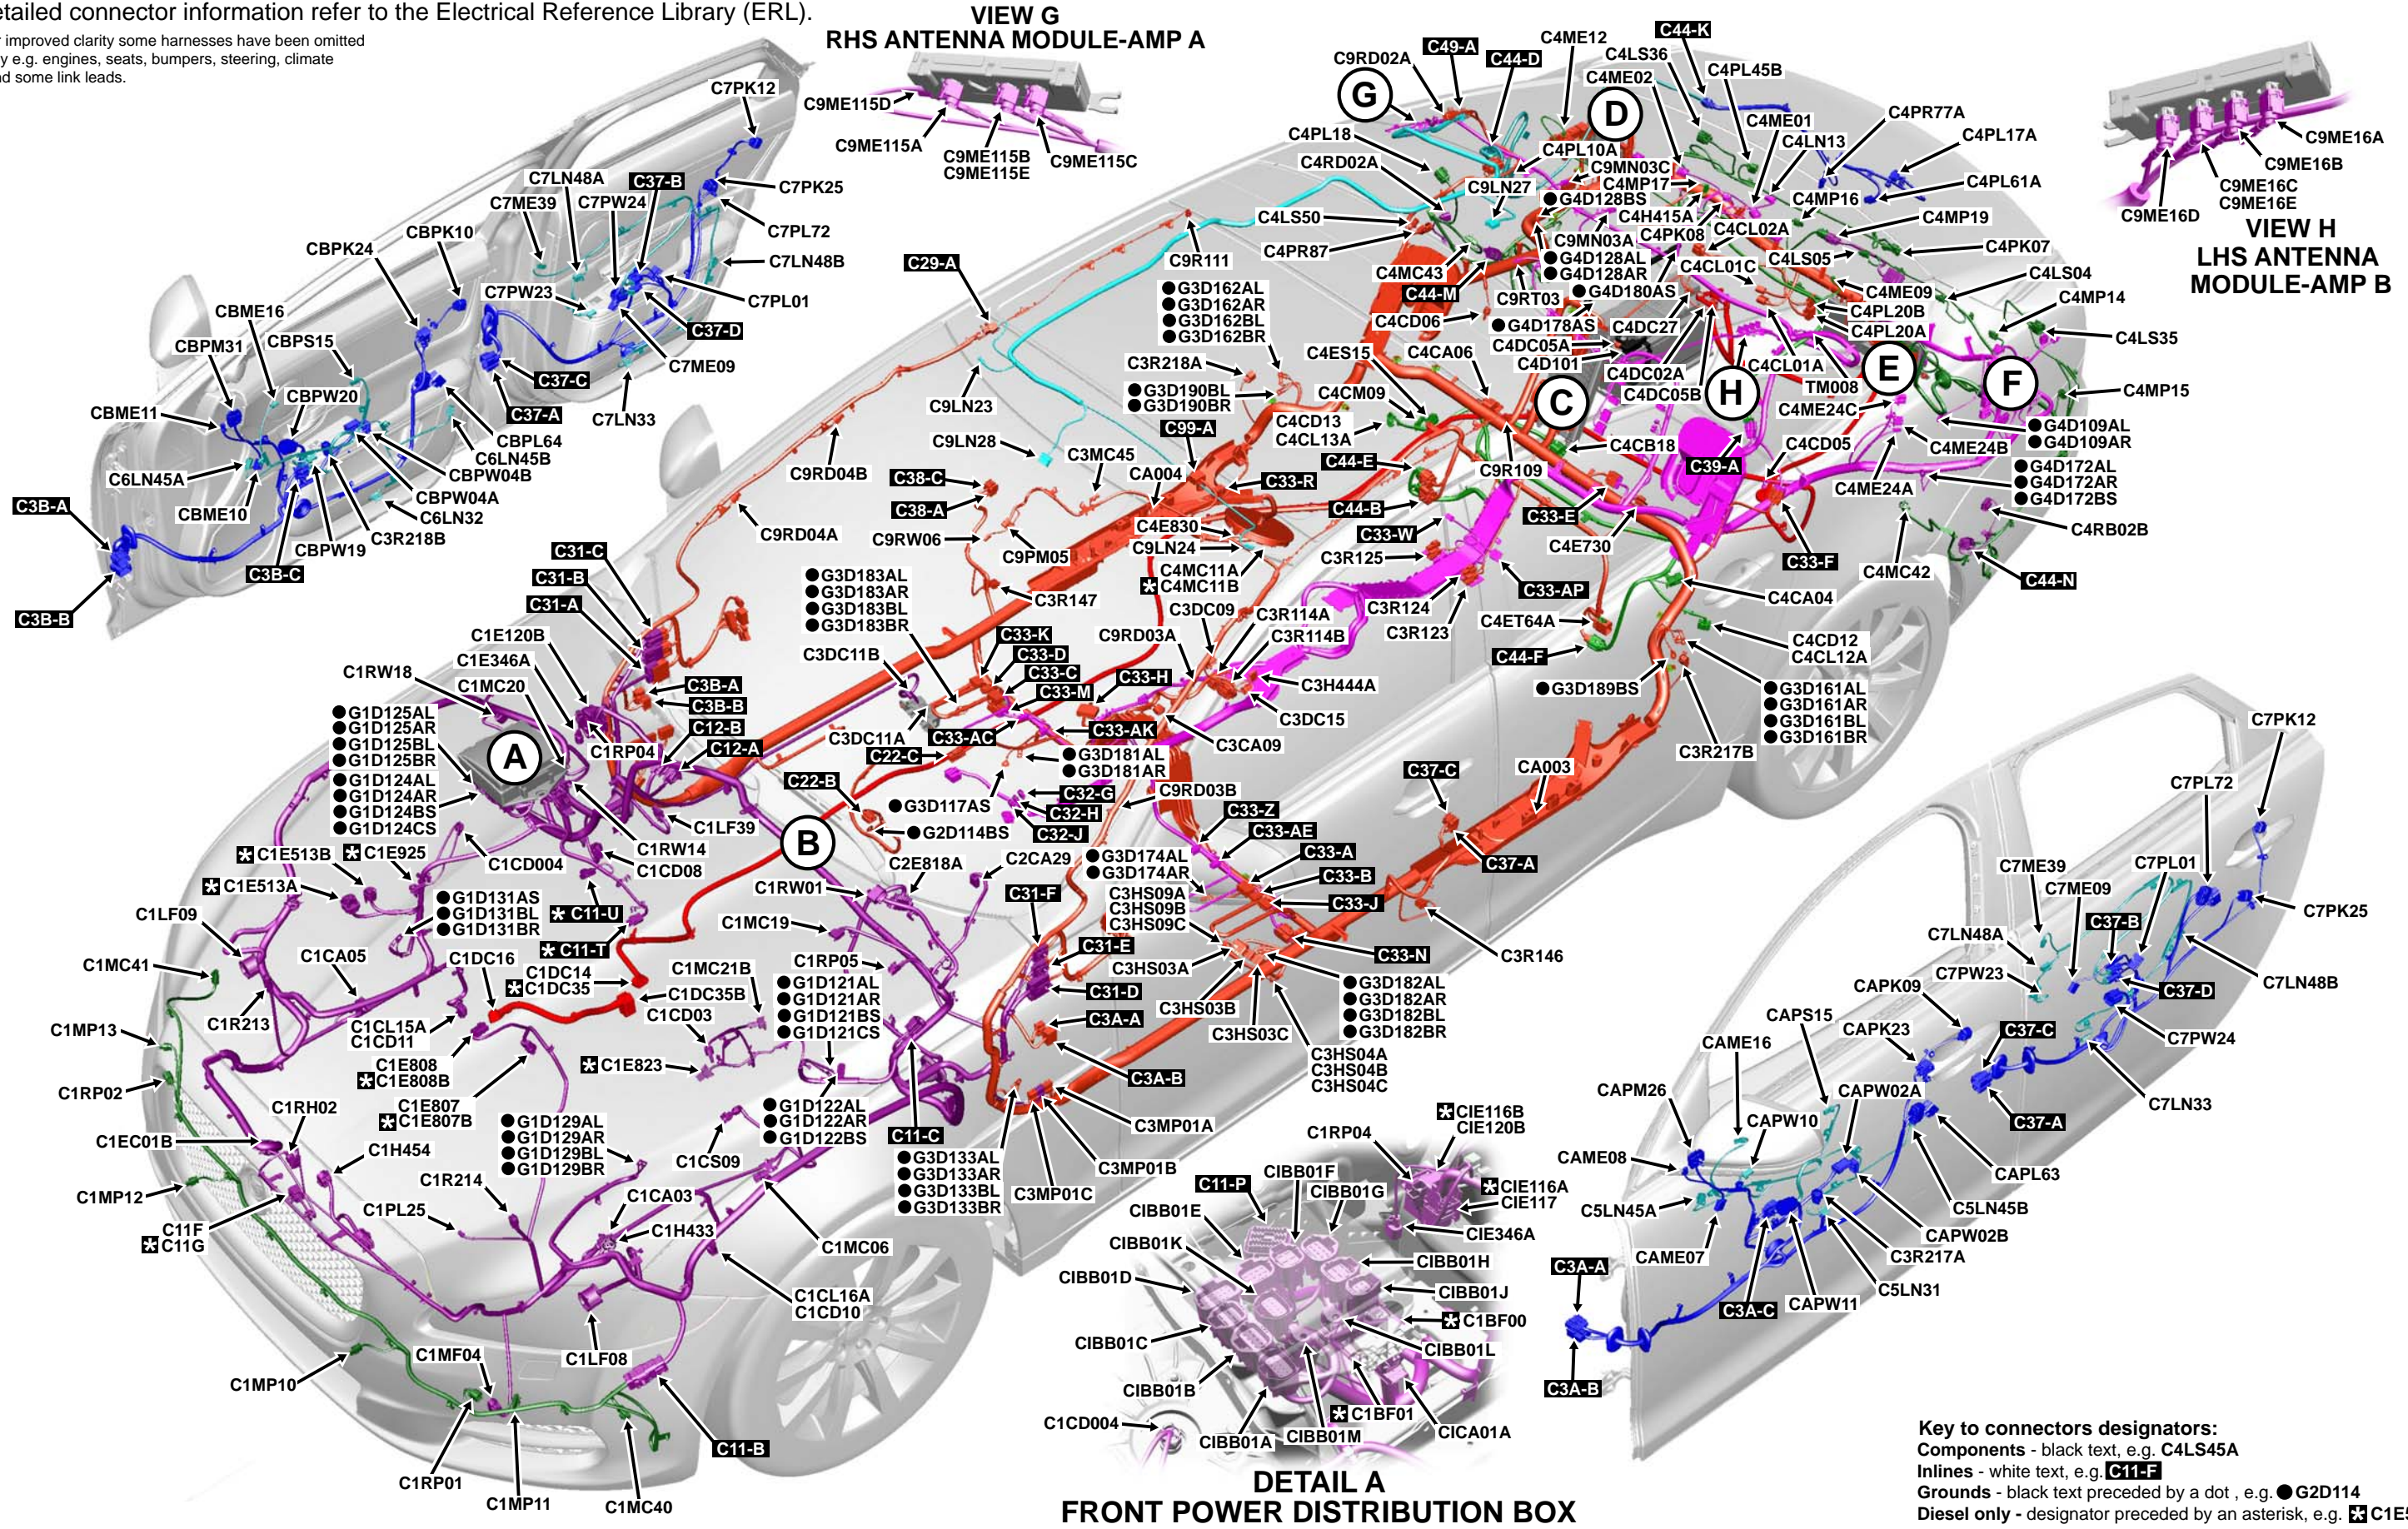


Key to connectors designators:
 Components - black text, e.g. C4LS45A
 Inlines - white text, e.g. C11-F
 Grounds - black text preceded by a dot, e.g. ●G2D114
 Diesel only - designator preceded by an asterisk, e.g. *C1E513A


CONNECTOR QUICK REFERENCE GUIDE

All paper copies are uncontrolled.


DETAIL B IP AND CENTRE CONSOLE

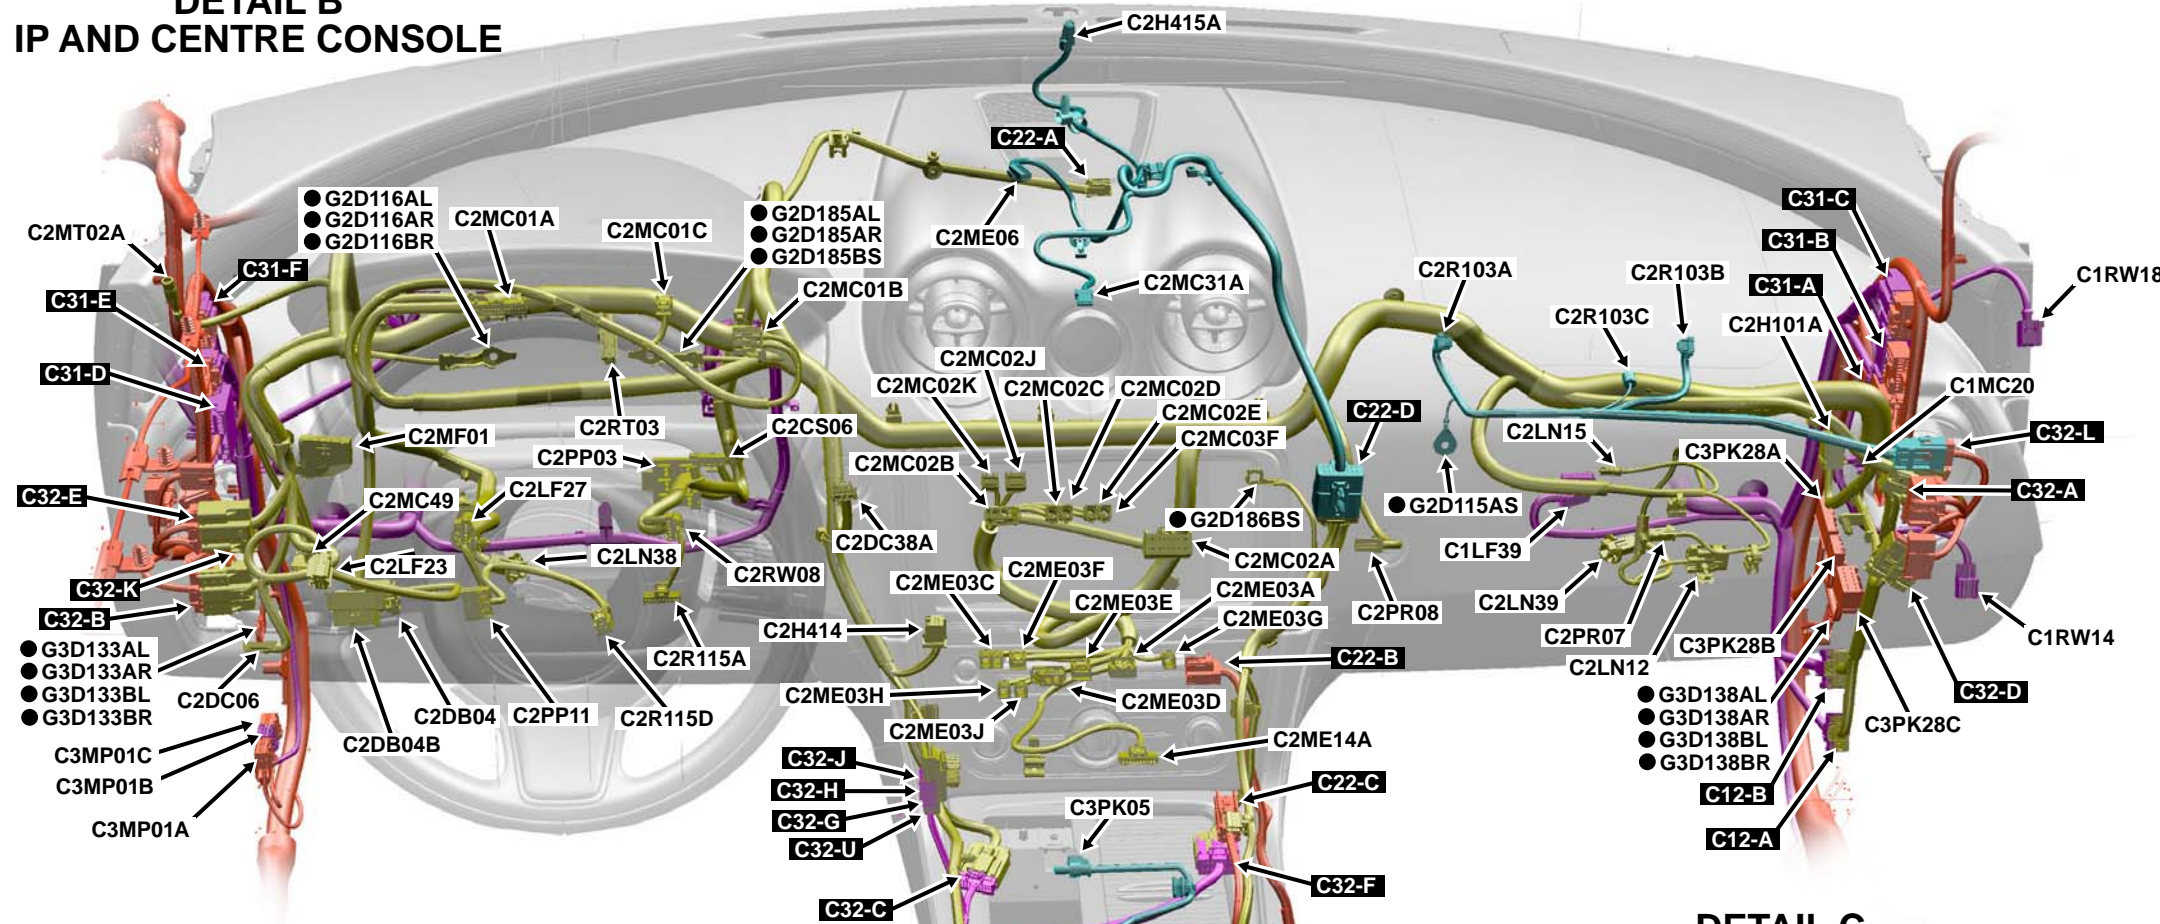


DETAIL D REAR RH QUARTER

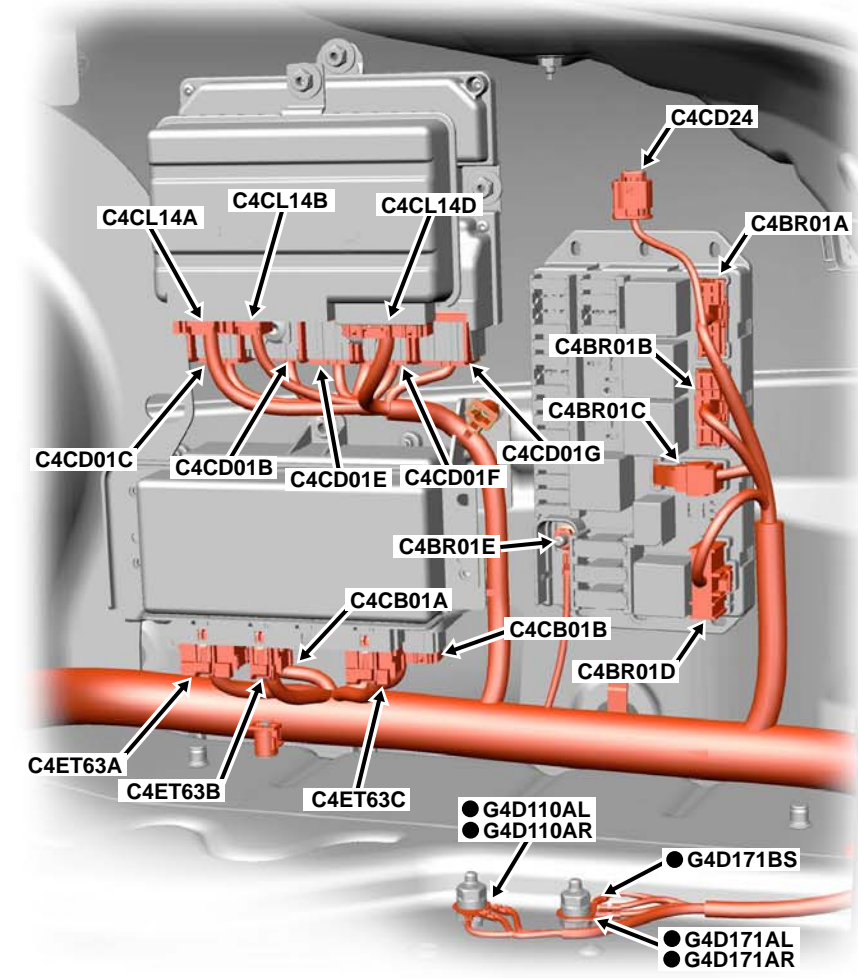

DETAIL C BEHIND REAR SEATS AREA

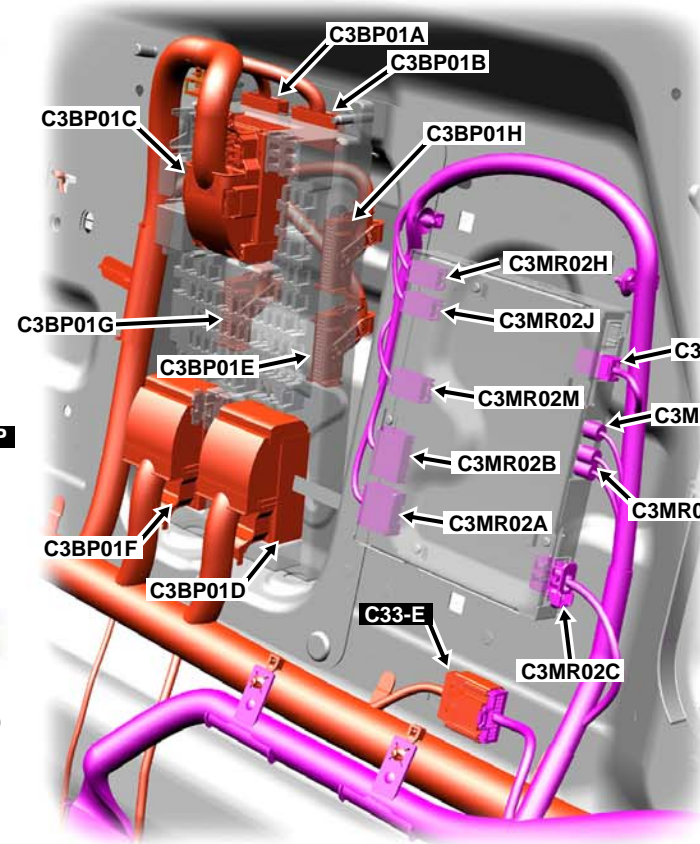

DETAIL E REAR OF LUGGAGE COMPARTMENT

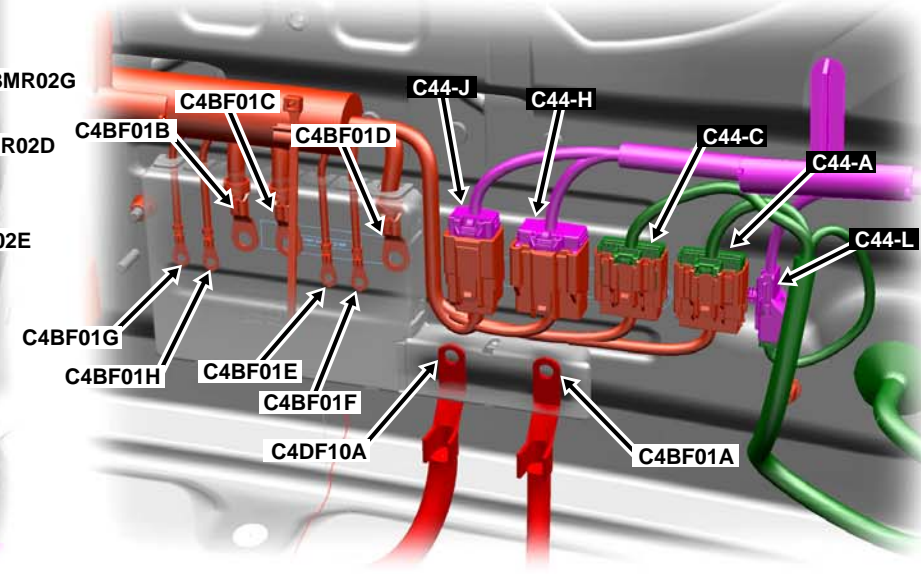

DETAIL F REAR LH QUARTER

