

INSTRUMENT PANEL AND CONSOLE

GLOVE COMPARTMENT (G1267528)

REMOVAL AND INSTALLATION

76.52.03

GLOVE BOX  
- RENEW

ALL  
DERIVATIVES

0.70


USED WITHINS

REMOVAL

NOTE:


Removal steps in this procedure may contain installation details.

1.

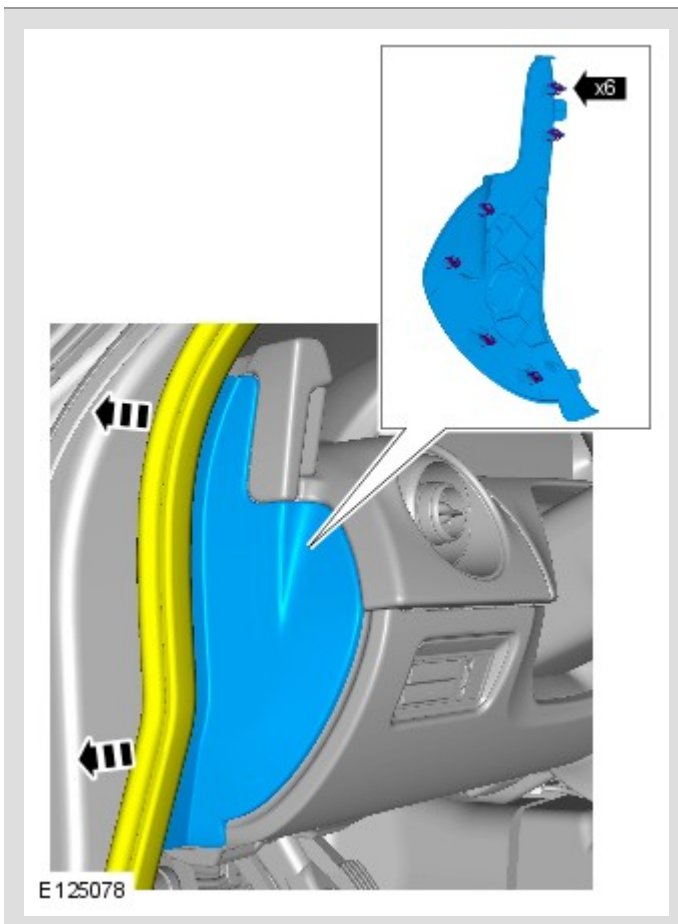


**⚠ CAUTION:**

Take extra care not to damage the edges of the component.

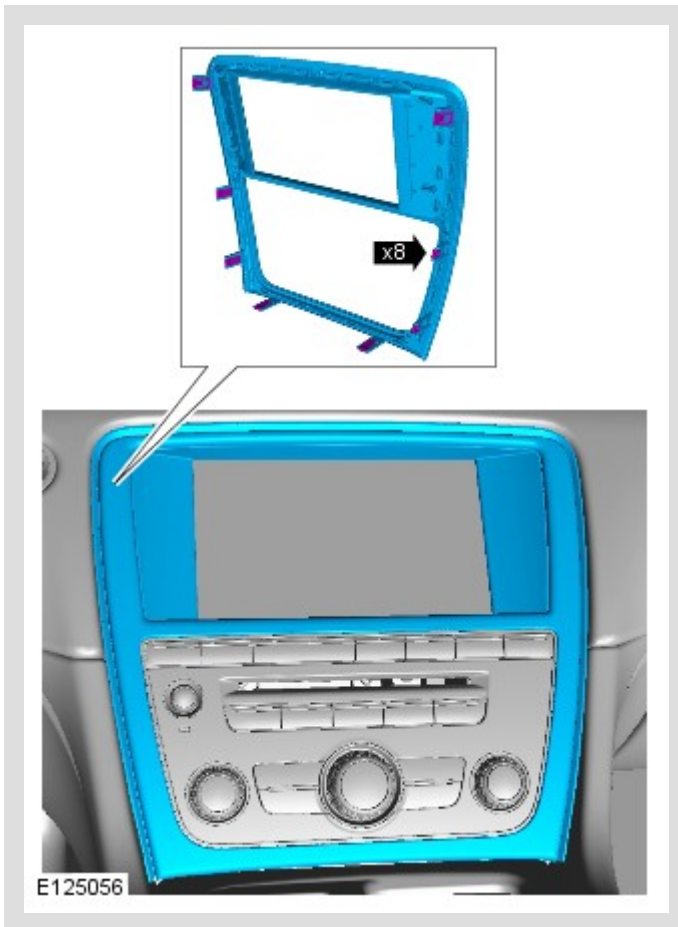

3.


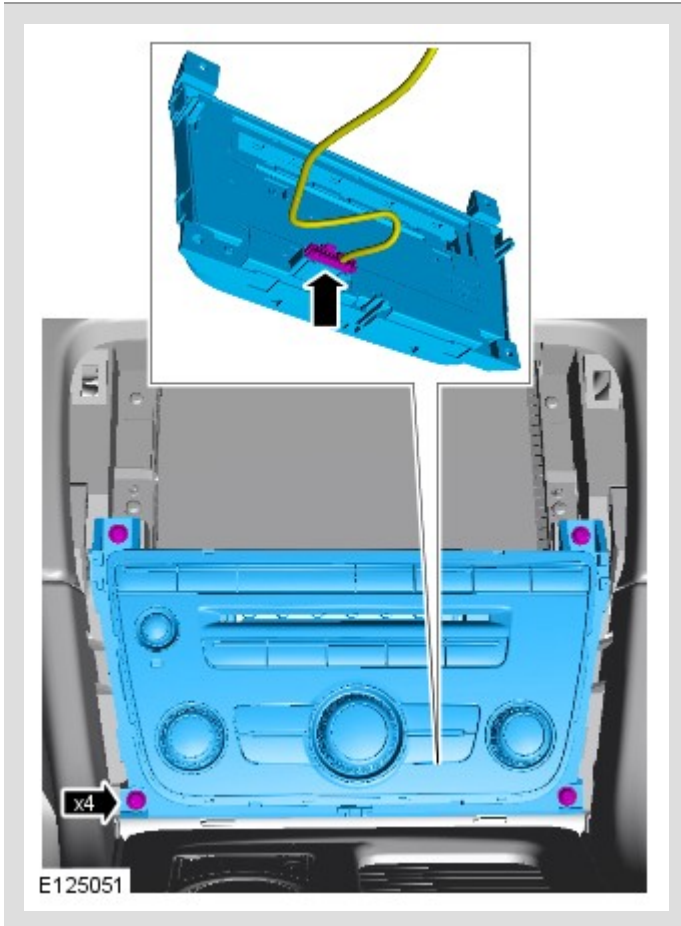


4.



**⚠ CAUTION:**

Take extra care not to damage the edges of the component.

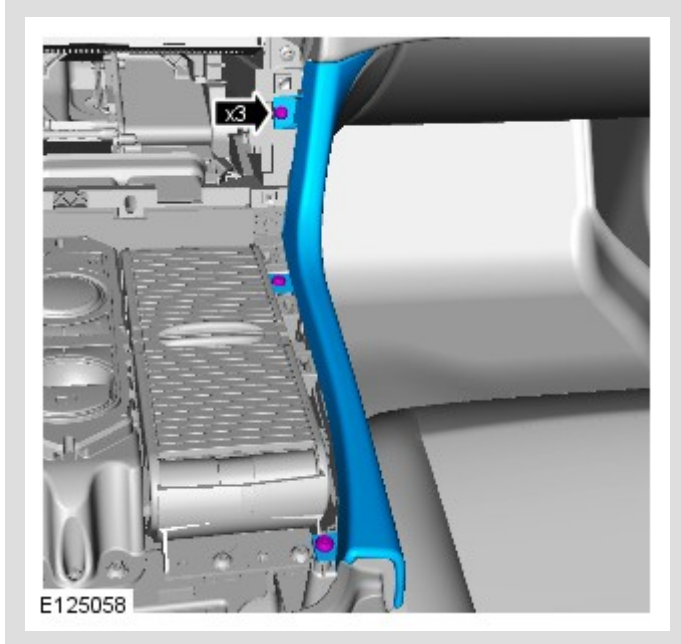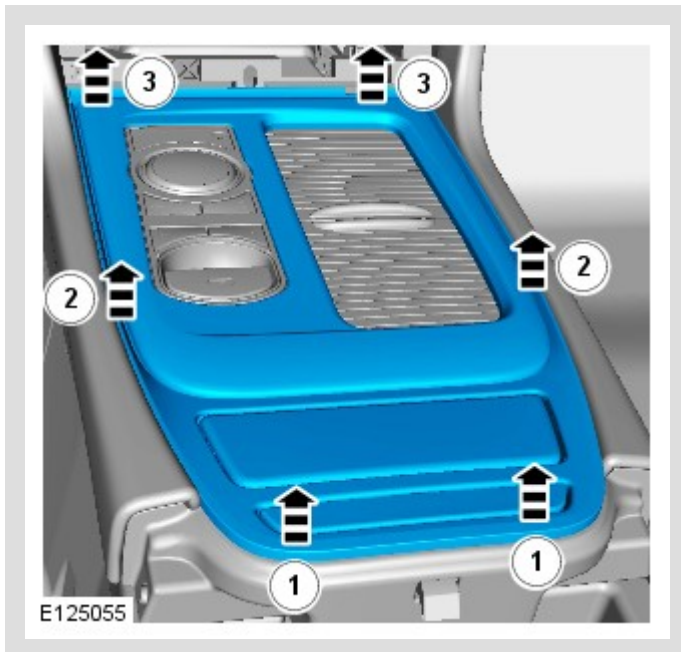



*Torque: 2 Nm*



△ NOTE:


Some variation in the illustrations may occur, but the essential information is always correct.

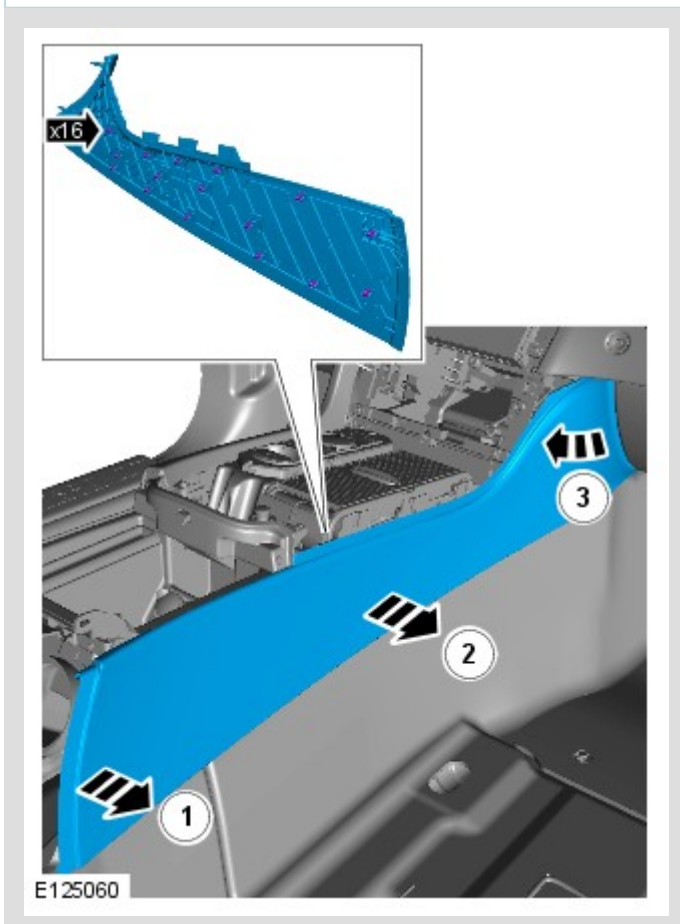

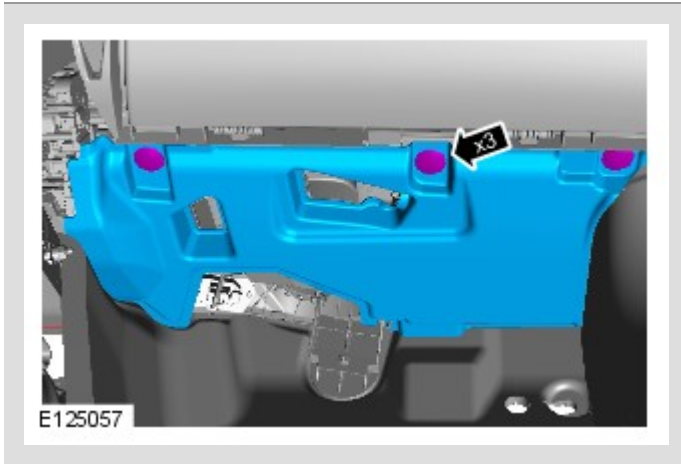


⚠ CAUTION:

LH illustration shown, RH is similar.

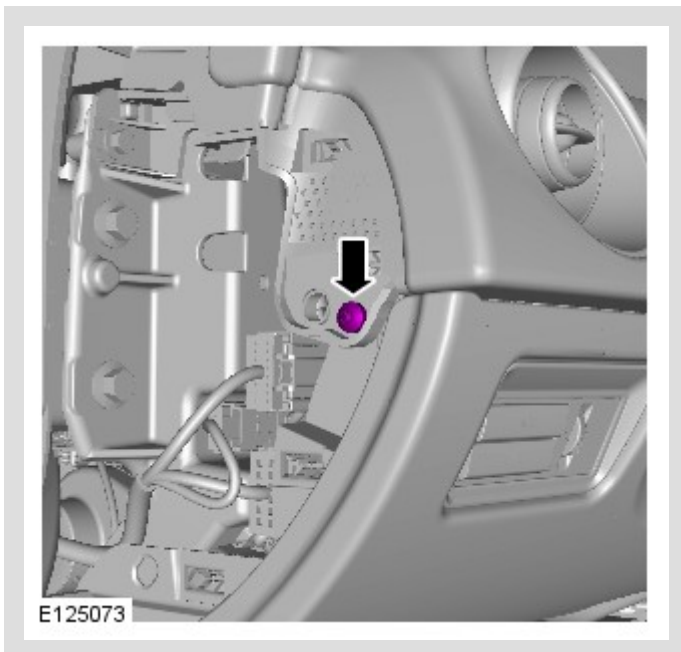


*Torque: 2.5 Nm*

11.

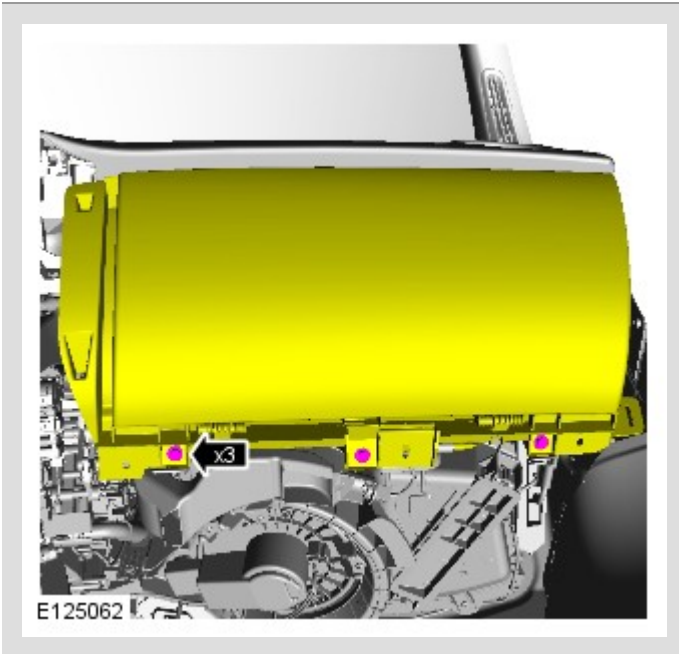


*Torque: 9 Nm*

12.

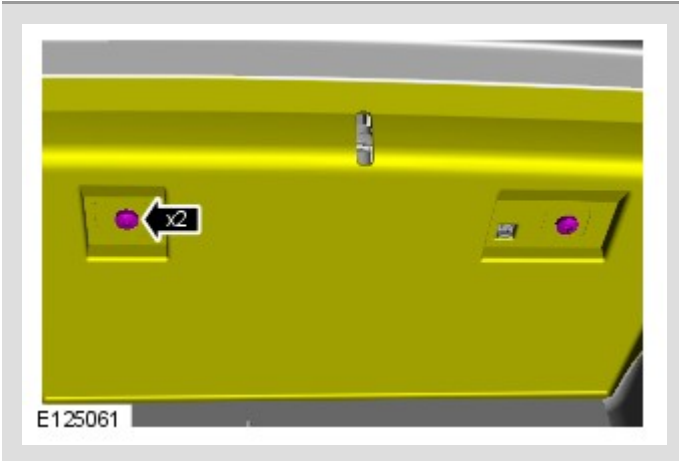



*Torque: 2.5 Nm*

13.

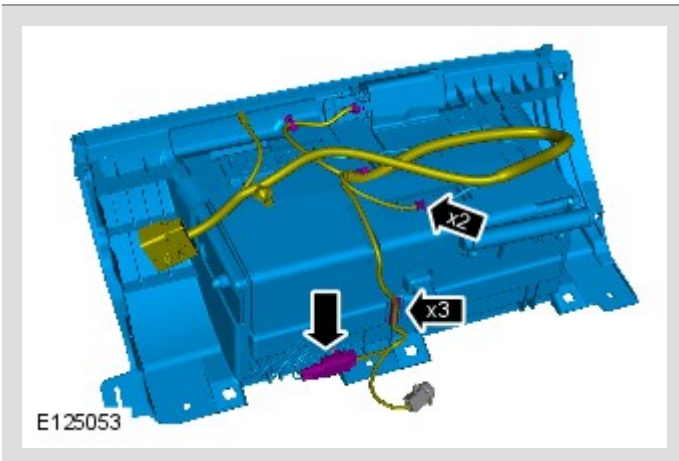

△ NOTES:


- Some variation in the illustrations may occur, but the essential information is always correct.
- Do not disassemble further if the component is removed for access only.

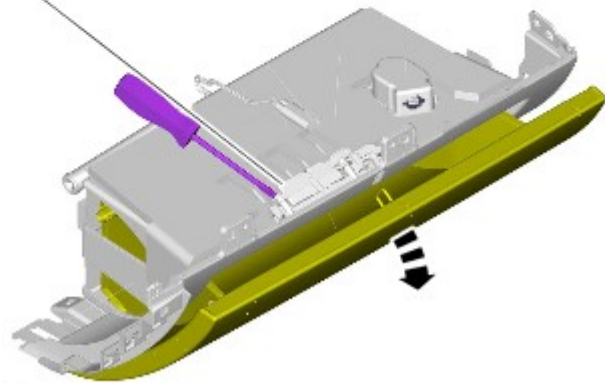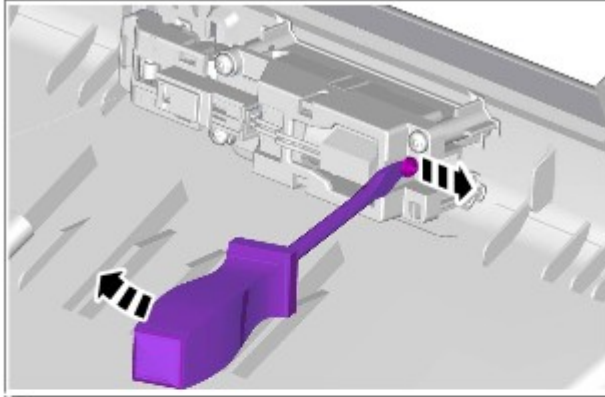

E96849

△ NOTE:


Some variation in the illustrations may occur, but the essential information is always correct.

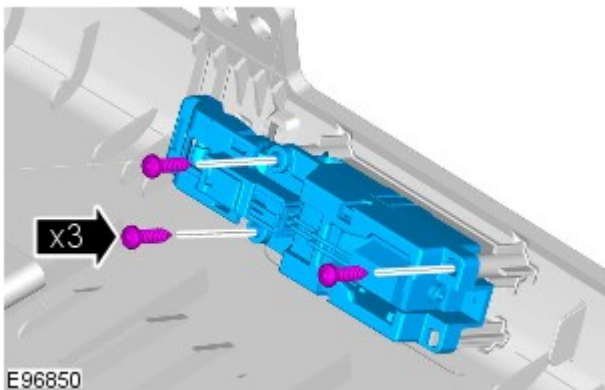

E96850

Torque: 2 Nm



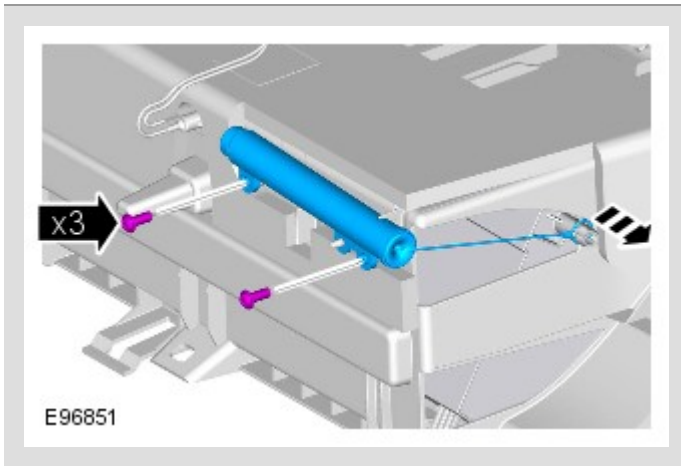

*Torque: 2 Nm*

## INSTALLATION

1.

To install, reverse the removal procedure.