

## TOUCH SCREEN USE

### NOTICE

*Always run the engine during prolonged use of the touch screen.*

The buttons on the center console, below the touch screen display, are referred to as **hard buttons** and should be pressed firmly. The touch screen buttons are referred to as **soft keys** and only require short, light pressure to function. Do not use excessive pressure.

## TOUCH SCREEN DISPLAY ICONS

Touch screen display icons are as follows (they may not all be displayed at the same time):



Audio/Video: Touch to select the Audio/Video menu.



Climate: Touch to select the Climate control menu.



Navigation: Touch to select the Navigation menu.



Back soft key: Touch to return to the previous screen displayed.



Shows the current status of the relevant heated/ventilated seat.

## TOUCH SCREEN CARE

### NOTICE

*Do not use abrasive cleaners on the touch screen. For approved cleaning products, contact your Dealer/Authorized Repairer.*

## TOUCH SCREEN SETUP

- Select **Setup** from the Home menu.

Touch screen setup is split into categories: **Screen**, **System** and **Vehicle**, as detailed below.

## SCREEN SETTINGS

- **Brightness/Contrast:** Select to adjust the touch screen brightness and contrast levels and to turn auto-dimming (for night driving) on or off.
- **Screensaver:** Select to change the screensaver. Touch an option to select.
- **Screen animations:** Select to turn animated transitions between screens on or off.
- **Time out to home menu:** Select to set the length of time before an unused screen reverts to the Home menu, or to turn this feature on or off.

## SYSTEM SETTINGS

- **Button feedback:** Select to turn the soft key use confirmation tone on or off.
- **Clock adjust:** Select to change the clock between 12 and 24 hour display. Use the arrow soft keys to alter the time. Select **Date** to change the date, or to alter the date format (dd/mm or mm/dd). Select **Set**, to store any changed settings.
- **Home menu shortcuts:** Select to choose the 3 items from the displayed list, that you wish to appear on the Home menu as shortcuts. Touch an item from the list to select, select **Clear all** to deselect all items.
- **Language:** Select to change the vehicle Voice between **Male** and **Female** or to change the system language. Touch **Change** and select the desired language from the displayed list. Follow the on-screen instructions to confirm.
- **Volume presets:** Select to alter the volume for the various audible systems (traffic and news announcements, parking aid, phone etc.).