

Maintenance must be carried out at intervals not to exceed 15,000 miles or one year, whichever occurs first. Should the vehicle have a high proportion of short journeys or operate in severe conditions, Jaguar North America recommends that the maintenance procedures be performed at intervals not to exceed six months.

SERVICE	Interval: Miles x 1,000	15	30	45	60	75	90	105	120	135	150
	Interval: Years	1	2	3	4	5	6	7	8	9	10
Check function of all exterior lights, horn, wipers and warning lights		•	•	•	•	•	•	•	•	•	•
Inspect windshield wiper blades for wear		•	•	•	•	•	•	•	•	•	•
Apply Jaguar Screen Clean paste to exterior of front windshield			•		•		•		•		•
Check / top up brake fluid level		•	•	•	•	•	•	•	•	•	•
Check coolant protection / top up coolant level		•	•	•	•	•	•	•	•	•	•
Check / top up power assisted steering fluid level		•	•	•	•	•	•	•	•	•	•
Check / top up windshield washer fluid level		•	•	•	•	•	•	•	•	•	•
Check / top up battery electrolyte level			•		•		•		•		•
Check drive belt (and supercharger belt, if equipped) tension and wear indicators; replace inspected belts if necessary or as specified		•	•	•	•	•	•	•	•	•	•
Visually check under hood and under body for any fluid leaks		•	•	•	•	•	•	•	•	•	•
Inspect brake pads for wear; check rotor condition when pads are changed		•	•	•	•	•	•	•	•	•	•
Check suspension dampers for fluid leaks		•	•	•	•	•	•	•	•	•	•
Check tires (including spare tire): - pressure, tread depth and general condition - signs of uneven wear - correct size and type		•	•	•	•	•	•	•	•	•	•

SERVICE	Interval: Miles x 1,000	15	30	45	60	75	90	105	120	135	150
	Interval: Years	1	2	3	4	5	6	7	8	9	10
Verify electronic parking brake operation		•	•	•	•	•	•	•	•	•	•
Conduct road test		•	•	•	•	•	•	•	•	•	•
Replace engine oil and oil filter		•	•	•	•	•	•	•	•	•	•
Replace pollen filter – XF, XJ			•		•		•		•		•
Replace pollen filter – XK		•	•	•	•	•	•	•	•	•	•
Replace air filter element – XF, XJ Naturally Aspirated						•					•
Replace air filter element – XF, XJ Supercharged					•				•		
Replace air filter element – XK				•			•			•	
Replace brake fluid – XK		Every two years regardless of mileage									
Replace brake fluid – XF, XJ		Every three years regardless of mileage									
Replace spark plugs		105,000 miles									
Replace Supercharger drive belt (if equipped)		105,000 miles									
Replace accessory drive belt		150,000 miles									
Replace engine coolant		Every 10 years or 150,000 miles									