

## CLIMATE CONTROL SYSTEM - GENERAL INFORMATION

# AIR CONDITIONING COMPRESSOR COMMISSIONING [G1704335]

### GENERAL PROCEDURES

01.01.32	AIR CONDITIONING COMPRESSOR - COMMISSIONING PROCEDURE	ALL DERIVATIVES	0.10	USED WITHINS	+
----------	---	--------------------	------	--------------	---

### ACTIVATION

#### CAUTION:

Failure to follow this instruction may result in damage to the component.

1. Set the ignition to the on position, make sure the Air Conditioning (A/C) is in the off position.
2. Start the engine and allow to run for a minimum of 5 minutes.
3. Set the heater controls to 22°C, with the fan speed set to 75%.
4. Switch on the A/C system.
5. Open all air vents in the instrument panel.
6. Run the A/C system for a minimum of 5 minutes, while the engine is still at idle speed.
7. When the above procedure is completed, the compressor is stabilized with the oil being distributed evenly throughout the system.