


VIDEO MEDIA PLAYER CONTROLS

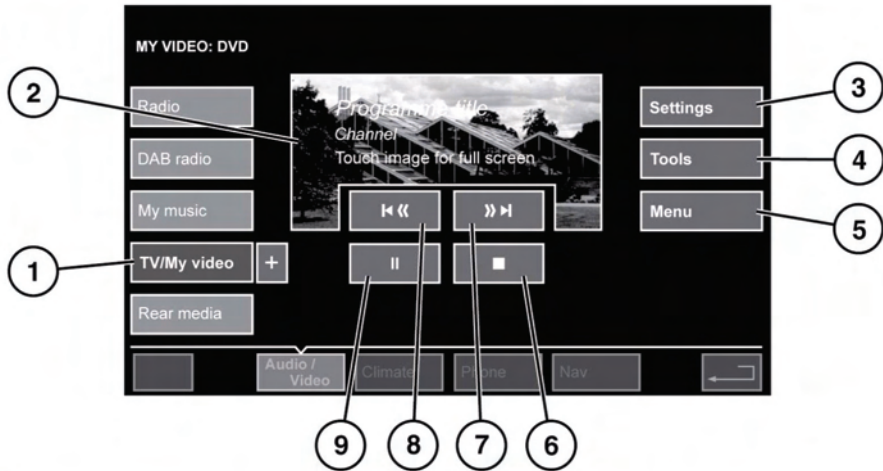

E132553

⚠ WARNING

Do not adjust the main audio unit's controls or allow the system to distract the driver while the vehicle is moving. Driver distraction can lead to accidents causing serious injury or death.

1. Select to view and select the desired video source (**DVD/CD/USB**) provided the relevant media is present.

Note: USB video requires DIVX codec of MP4/mpeg format.

2. Preview screen and video media information: Touch to select full screen mode.
3. Select to view the Settings menu.
4. Select to view the DVD tools options.
5. Select to view the DVD menu. This is replaced by a **Browse** soft key on some screens.
6. Select to pre-stop playback. A second touch will stop and reset the DVD.

7. Seek up: Select to view the next chapter on the video.
8. Seek down: Select to view the previous chapter on the video.
9. Select to pause/resume playback.

Note: For information on the use of the audio/video controls on the audio unit and steering wheel, see **104, AUDIO/VIDEO CONTROLS**.

LOADING DVDs

NOTICE

Do not force the disc into the slot.

NOTICE

Do not use irregular shaped DVDs and DVDs with a scratch protection film or self-adhesive labels attached.

NOTICE

Recordable (DVD-R or DVD+R) discs may not function correctly.

Video media player

NOTICE

Dual format, dual-sided discs (DVD Plus, CD-DVD format) are thicker than normal CDs and consequently playback cannot be guaranteed, and jamming may occur.

NOTICE

System does not play Blu-ray discs.

It is recommended that only high quality 4.7 in. (12 cm) circular discs are used.

To locate the DVD load slot and the eject button, see **104, AUDIO/VIDEO CONTROLS**.

VIDEO MEDIA INHIBIT WITH VEHICLE MOVING

The video media should only be viewed from the driving position when the vehicle is stationary, with the gear selector in Park (**P**) and the parking brake applied.

If **P** is deselected or the parking brake is released, the touch screen will revert to the My video menu and the relevant safety message will be displayed.

SETTINGS

Depending on the video media specification, there are 2 sub-menus within settings: **Options** and **VOD** (Video On Demand). The VOD option allows you to access VOD content from a DVD or USB device. When the video is downloaded from the website, a registration code must be entered in order to watch the content. If an invalid code is entered, playback will be inhibited.

Touch the **VOD** soft key on the Settings screen to view the registration code.

FULL SCREEN VIEW

The video media menu displays a small preview image of the video. Touch the preview image to select full screen mode. The video media controls and the playback status information are displayed for 5 seconds before disappearing.

Touch the screen again to view the controls and status information at any time.

To return to preview mode, touch and hold the full screen view.

FULL SCREEN VIEW CONTROLS

The seek controls operate in the same manner as they do in preview mode.

Use the relevant soft key to select the **4:3**, **16:9** or **Zoom** option.


TOOLS

The tools menu contains the following options:

- Subtitles.
- Angle.
- Audio.
- GOTO.

The GOTO menu allows you to access specific parts of the video, by **Chapter** or **Title**.

CONTROLS (FRONT TOUCH SCREEN)

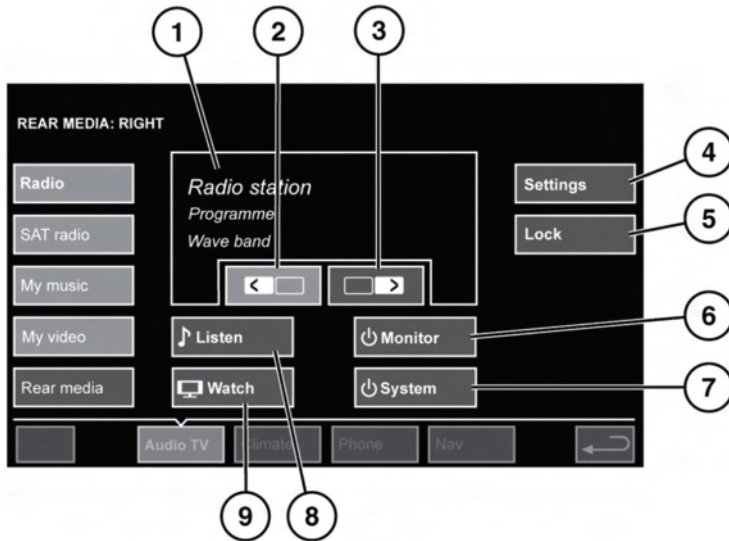

E132559

⚠ WARNING

Do not adjust the main audio unit's controls or allow the system to distract the driver while the vehicle is moving. Driver distraction can lead to accidents causing serious injury or death.

1. Current media display.
2. Left rear screen select.
3. Right rear screen select.
4. Settings screen.
5. Remote control lock.
6. Turns off the selected screen.
7. Rear media on/off.
8. Audio source select.
9. Video source select.

REAR MEDIA CONTROL FROM THE TOUCH SCREEN

When the main rear media control screen is displayed on the touch screen, the rear media remote control will be locked out. No part of the rear media system will operate until it is turned on via the touch screen.

REAR MEDIA SETTINGS

The rear media settings screen allows **Limousine Mode** and **Parental Control** to be turned on or off, and the **Age Warning** threshold to be set.

When **Limousine Mode** is on, the rear passengers will have control of the total cabin audio system via the remote control.


When **Parental Control** is on and the age limit is set, a message may be sent to the touch screen if the content is unsuitable.

Rear seat entertainment

Note: It remains the responsibility of the parent or guardian, even with parental control on, to ensure that the content is suitable for children to watch.

Note: When Parental Control is off the age limit slider is hidden.

TOUCH SCREEN REMOTE CONTROL

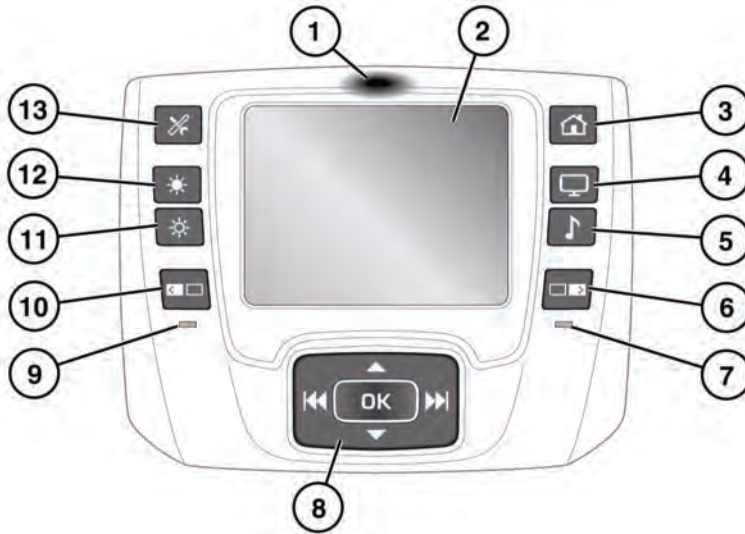

1. Press to undock remote control.

NOTICE

Do not press the touch screen to undock the remote control.

2. Touch screen.

3. Home screen.

4. Video source.

5. Audio source.

6. Right screen select.

7. Right screen tell-tale. Illuminates when right screen has been selected.

8. Cursor movement and option select buttons.

9. Left screen tell-tale. Illuminates when left screen has been selected.

10. Left screen select.

11. Touch screen brightness decrease.

12. Touch screen brightness increase.

13. Touch screen settings.

USING RSE

The system is operated using the remote control either while it is docked in the rear seat arm rest, or when it is removed and hand-held.

The remote is removed from the arm rest by pressing the top of the remote (1) to unlatch it.

NOTICE

Do not attempt to pull the remote control out of its docked position.

When the system is activated the remote control touch screen becomes active.



E132562

Using the appropriate button (**6** or **10**) or on screen soft key (right or left) to select the required screen, will allow options to be set and selected.

Note: A help screen is available from each screen/menu. To view the help screen for guidance on the available functions and options, touch the question mark (?) icon.



E132563

HEADPHONES

The volume control for each set of headphones is adjusted on the headphones.

REMOTE CONTROL BATTERY

The remote control battery is automatically recharged while the remote is docked. The battery is not serviceable and should not be changed or removed by the user.