

Auxiliary Blower Motor

Removal


- 1 . Disconnect the battery ground cable.

For additional information, refer to Battery Disconnect and Connect


- 2 Remove the floor console.

. For additional information, refer to Floor Console - Vehicles With: Auxiliary Climate Control (76.25.01)


- 3 . Disconnect the blower motor electrical connector.

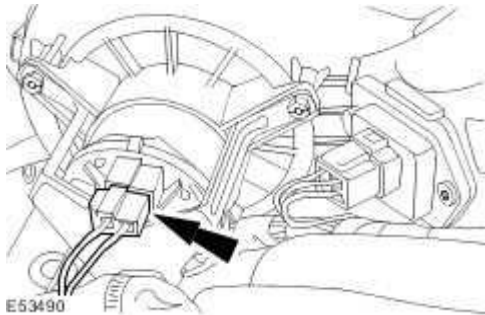

- 4 . Detach the heater core and evaporator core housing wiring harness.

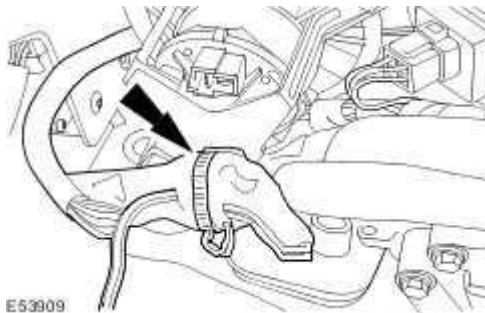


- 5 . Detach the heater core and evaporator core housing electrical connector.

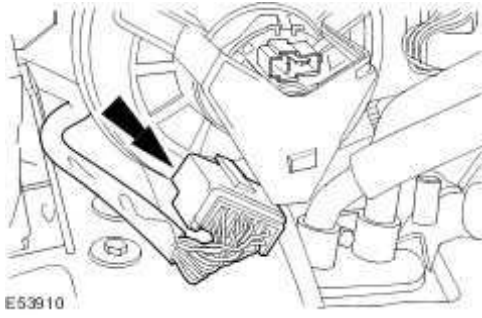


6 . Remove the blower motor retaining bracket.

▶ Remove the blower motor retaining bracket securing screws.

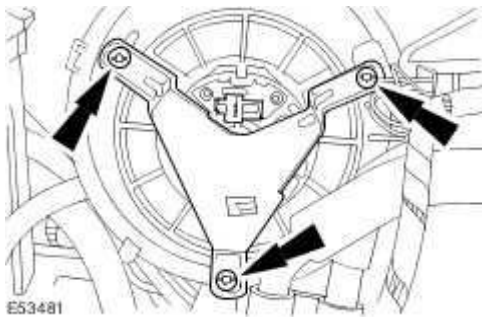

7 . Remove the blower motor.


▶ To aid removal, turn the blower motor in a clockwise direction.

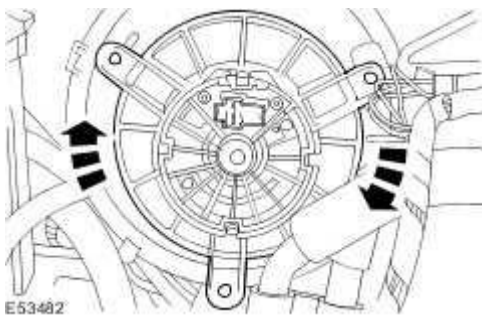

Installation


1 . Install the blower motor.

▶ To aid installation turn the blower motor in a counter-clockwise direction.

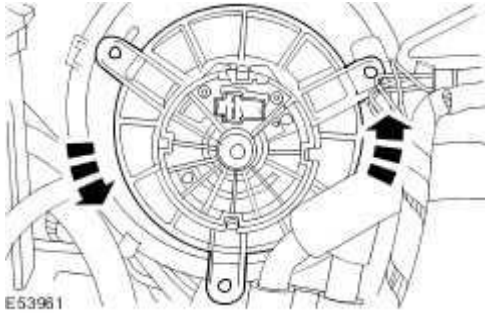


2 . Install the blower motor retaining bracket.


▶ Install the blower motor retaining bracket securing screws.

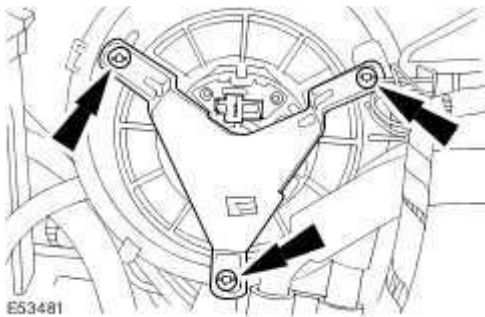


3 . Attach the heater core and evaporator core housing electrical connector.

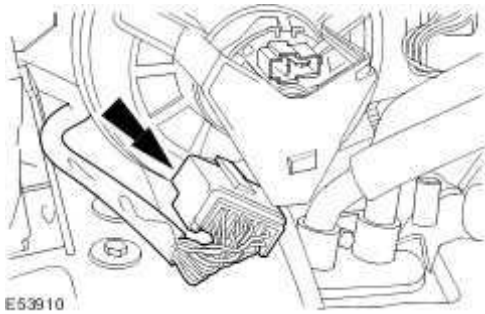

4 . Attach the heater core and evaporator core housing wiring harness.

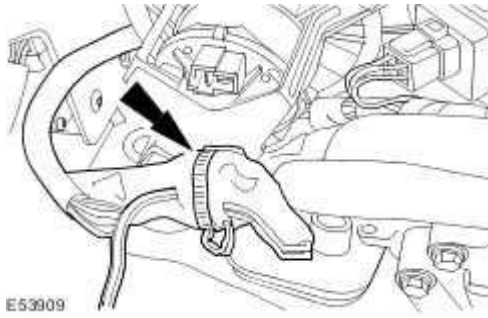

5 . Connect the blower motor electrical connector.

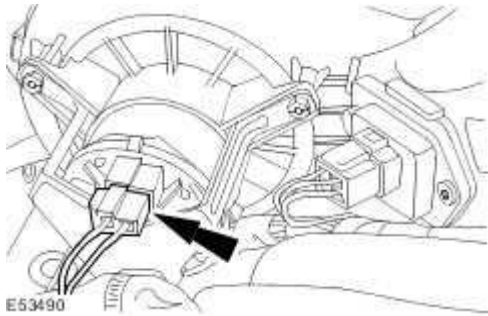

6 Install the floor console.

. For additional information, refer to Floor Console - Vehicles With: Auxiliary Climate Control (76.25.01)

7 . Connect the battery ground cable.

For additional information, refer to Battery Connect (86.15.15)