

# Floor Console - Vehicles With: Auxiliary Climate Control (76.25.01)


## Removal

### All vehicles

- 1 . Remove the transmission selector lever surround.




- 2 . Remove the floor console front retaining bolts.

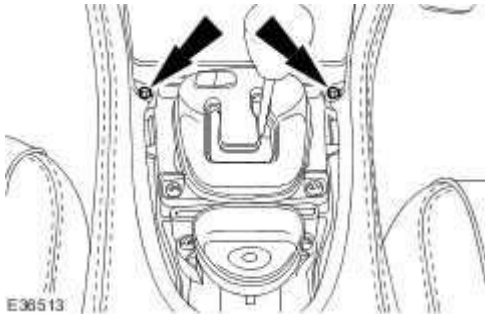

- 3 . Remove the floor console register.  
For additional information, refer to Register

### Vehicles with cordless cellular phone

- 4 . Disconnect the Bluetooth module electrical connector.

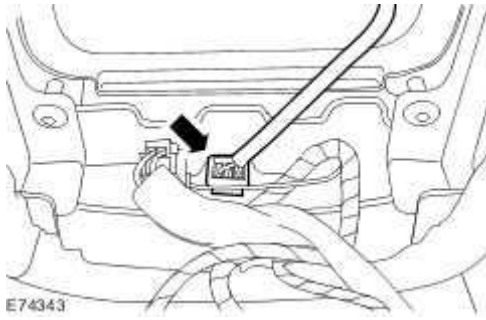


**All vehicles**

**5 . NOTE:**

Right-hand shown, left-hand similar.


Remove the rear floor register.

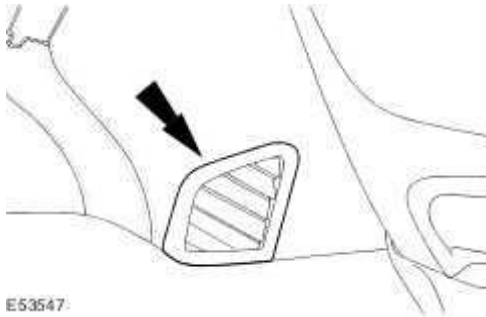

**6 . NOTE:**

Right-hand shown, left-hand similar.

Remove the floor console rear retaining bolts.

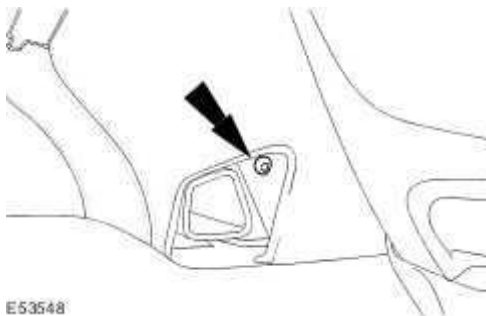

**7 .** Raise the rear of the floor console.



8 . Remove the floor console.



## Installation

All vehicles

1



- **CAUTION:** Make sure the seat belt buckles are not trapped when installing the floor console.



**CAUTION:** Make sure the floor console locating tangs are correctly located into the instrument panel clips. Failure to follow this instruction may result in damage to the vehicle.

Install the floor console.



- 2
-  **CAUTION:** Make sure the seat belt buckles are not trapped when installing the floor console.


Lower the rear of the floor console.



- 3 . **NOTE:**

Right-hand shown, left-hand similar.


Install the floor console rear retaining bolts.

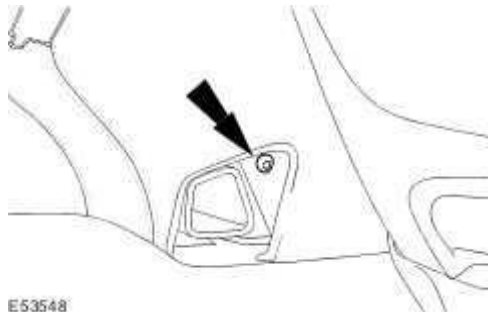

- 4 . **NOTE:**


Right-hand shown, left-hand similar.

Install the rear floor register.

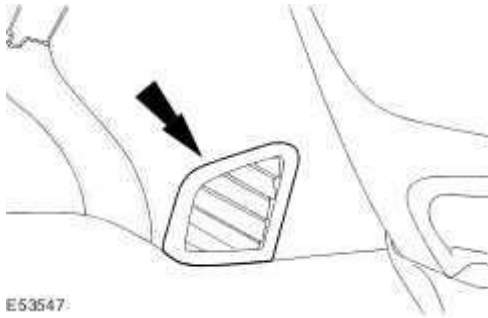

### **Vehicles with cordless cellular phone**

5 . Connect the Bluetooth module electrical connector.

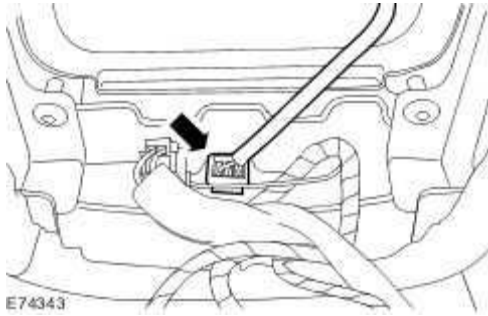


### **All vehicles**

6 . Install the floor console register.

For additional information, refer to Register

7 . Install the floor console front retaining bolts.

 Tighten to 7 Nm.

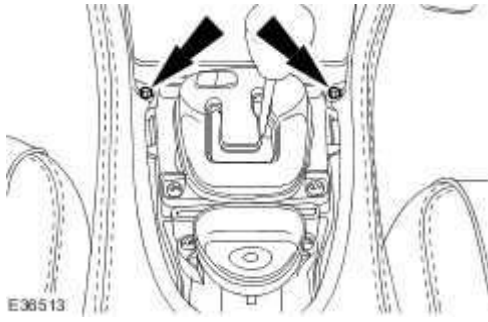

8 . Install the transmission selector lever surround.



# Floor Console - Vehicles Without: Auxiliary Climate Control (76.25.01)


## Removal

### All vehicles

- 1 . Remove the transmission selector lever surround.



- 2 . Remove the floor console front retaining bolts.

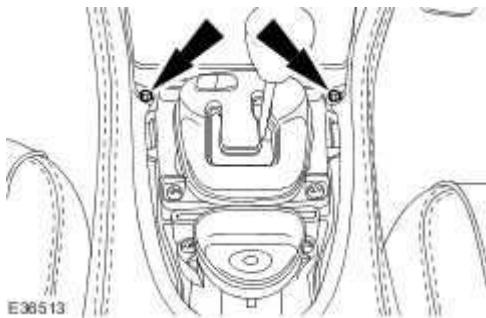


### Vehicles fitted without heated rear seat

- 3 . Detach the floor console register.



- 4 . Disconnect the electrical connector.

- ▶ Detach the wiring harness retaining clip.

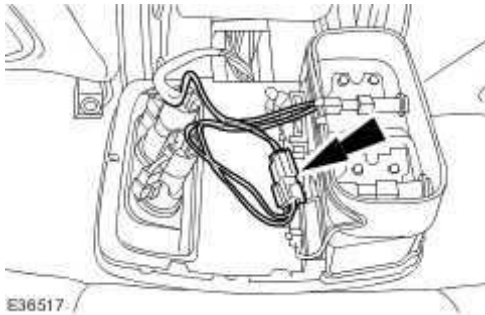


### **Vehicles fitted with heated rear seat**

- 5 . Detach the floor console register.




- 6 . Disconnect the electrical connector.

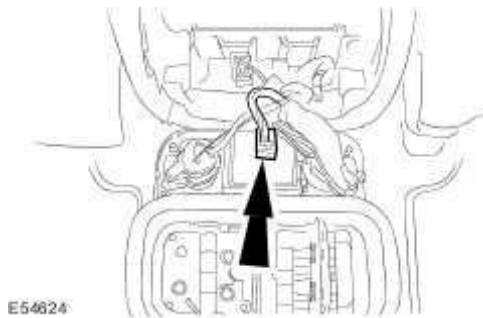

### **All vehicles**


- 7 . Disconnect the electrical connector.



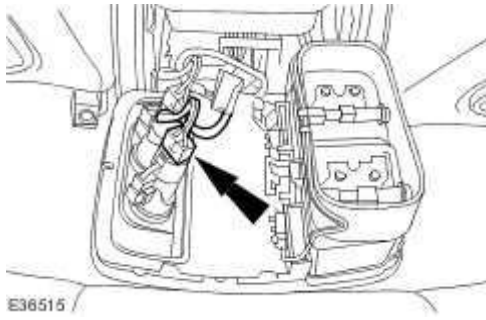

8 . Remove the floor console register.


▶ Disconnect the electrical connector.

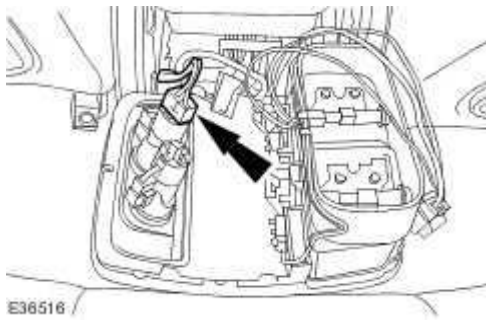

#### **Vehicles fitted with heated rear seat**


9 . Remove the floor console register.

▶ Disconnect the electrical connector.

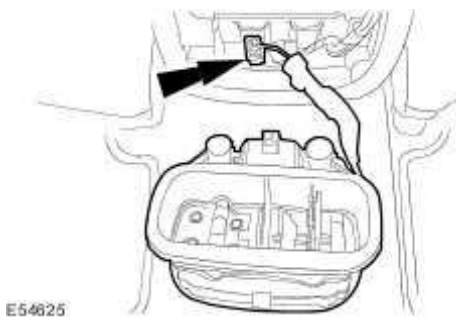


#### **Vehicles with cordless cellular phone**

10 . Disconnect the Bluetooth module electrical connector.

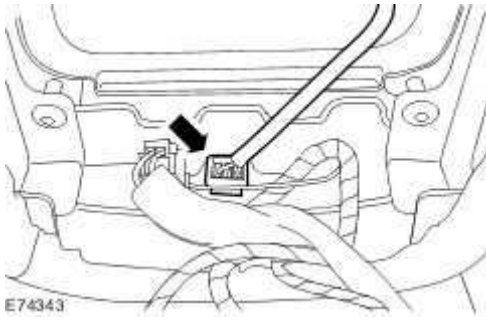

**All vehicles**

11 . Remove the floor console rear retaining bolts.

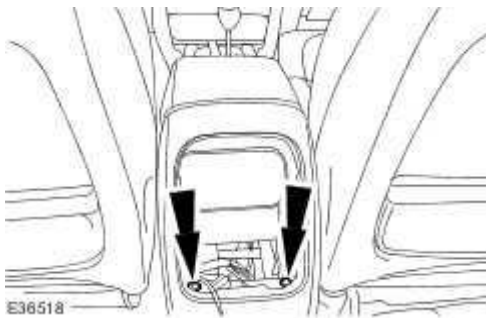

12 . Raise the rear of the floor console.



13 . Remove the floor console.

