


## 2-12 Security and Locks

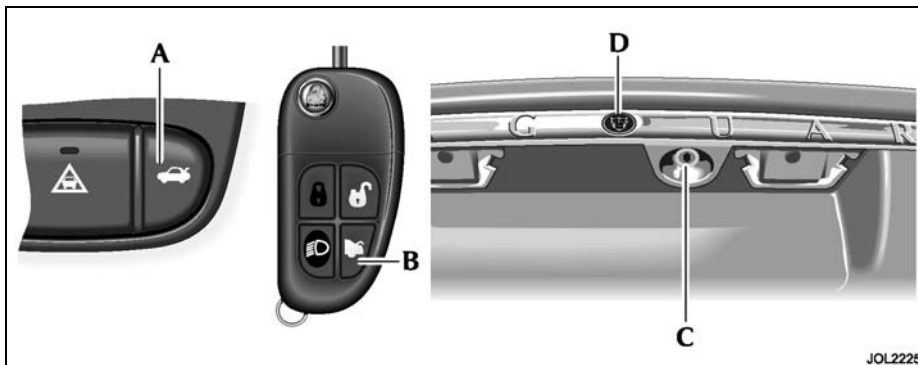

### Luggage Compartment (Trunk)

The luggage compartment is locked and unlocked electrically in conjunction with the doors.

Neither the luggage compartment lid release switch on the fascia nor the lid release button will operate whilst the vehicle is armed or in valet mode.

An attempt to operate these switches whilst in valet mode will result in an audible warning chime.

To open the luggage compartment, use any of the methods that follow:

- Press the luggage compartment lid release switch (A), which is located on the fascia switchpack. This switch will not operate if the vehicle speed exceeds 5 mph (8 km/h).
- Press the luggage compartment button (B) on the key transmitter.

**Note:** Button (B) will only operate with the gear selector in 'Park'.

- Insert a key into the luggage compartment lock (C), however, opening with the key when the vehicle is armed will cause the alarm system to start warning tones for seven seconds. Should this occur, press the transmitter unlock button, or place the key in the ignition to disarm the alarm system, otherwise after seven seconds the vehicle alarm will sound.
- With the vehicle unlocked, press the release button (D) on the luggage compartment lid. The button will not operate unless 'park' or 'neutral' have been selected and the vehicle is unlocked.

The luggage compartment locks automatically when the lid is closed.