

# Exterior Mirror Glass (76.10.53) Removal

- 1 . Apply light pressure to the exterior mirror glass.
- 2 . Detach the mirror glass.1) Apply light pressure to the inner edge of the mirror glass.  
2) Pull the outer edge of the mirror glass to detach the mirror glass.
- 3 . Remove the exterior mirror glass.Disconnect the electrical connectors.

## Installation

