
Power Steering Fluid Cooler (57.15.11)

Removal

All vehicles


- 1 Remove the Front Bumper Cover.
- . For additional information, refer to <u>Front Bumper Cover VIN Range: G00442->H18679</u> (76.22.78)
- 2 . Remove the lower cowl.

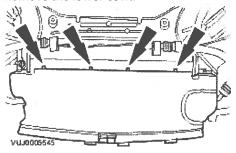

CAUTION: If power steering fluid comes into contact with the paintwork, the affected area must be immediately washed down with cold water.


CAUTION: Cap the power steering line to prevent loss of fluid and prevent dirt ingress.

Disconnect the power steering fluid cooler lines.

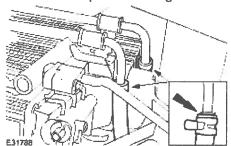

Vehicles with supercharger


4 . Remove the power steering fluid cooler.

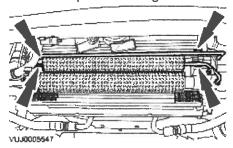

Vehicles without supercharger

5 . **NOTE:**

Left-hand shown, right-hand similar.

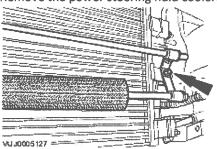


Remove the power steering fluid cooler.

Installation

1. To install, reverse the removal procedure.



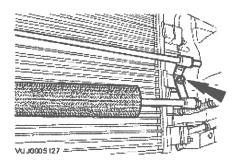

2 NOTE:

If the cooler is being replaced for leakage or noise related issues and there is no evidence of fluid contamination, there is no need to replace the reservoir.

In some cases where the fluid clearly contains particulate matter, and the system continues to function, flush the system with fresh fluid and replace the reservoir, as there is the possibility that the reservoir internal filter may be damaged or faulty.