

Dealer Information

The user is prompted to enter the correct dealer information when SDD is first started after installation.

Dealer Information

Dealer details must be entered to use SDD.

Selection Options

Country:

Town / City:

Dealer Name:

Dealer Details

*Use selection options to select dealer, or enter / amend details. * indicates mandatory fields.*

Dealer Name: *

Dealer Code:

Address:

[Continue](#) [Clear](#)

SDDJLR160

Dealer information can be viewed at any time during a session.

User Preferences
Dealer Information
System Information
System Utilities
On-Demand Feedback

Dealer Information

Selection Options

Country:

Town / City:

Dealer Name:

Dealer Details

*Use selection options to select dealer, or enter / amend details. * indicates mandatory fields.*

Dealer Name: *

Dealer Code:

Address:

Town / City: *

County / State:

Post / ZIP Code:

Country: *

Telephone:

[Save](#) [Clear](#)

SDDJLR161