


5. Remove the engine compartment panel.

- 1) Remove the engine compartment panel retaining bolt.
- 2) Remove the engine compartment panel.

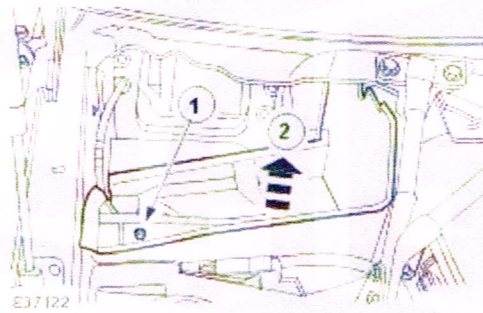

**6 NOTE:**

The engine control module (ECM) electrical connector retaining bolt remains captive in the electrical connector.

Using the special tool, loosen the ECM electrical connector retaining bolt.

