

## Rear light assembly – bulb renewal

On the rear light assemblies, only the direction indicator, reverse and fog bulbs are replaceable. The stop/tail lamps consist of arrays of LED lights which can only be renewed by a Jaguar Retailer if they fail to operate.

Ensure that the lights and ignition switch are OFF before removing any bulbs.

Open the trunk and secure the floor panel in the open position. See page 6-4.

Rotate fastener (A) a quarter turn and remove. Pull back the side carpet trim to access the rear of the light assembly.

The bulb positions are:

1. Reverse light, type P21W.
2. Direction indicator, type PY21W.
3. Fog light, type P21W.

Rotate the bulb/connector and withdraw it from the assembly. Remove the faulty bulb and fit a new one of the correct type, as illustrated on the bulb holder. It is essential to fit the correct type.

Reposition the bulb/connector and turn it to secure.

Carefully refit the side carpet trim. Fit fastener (A) and rotate a quarter turn.

Close the trunk floor panel.

